

## Installation and service manual

Gas fired floor-standing condensing boiler

Sirius two FS 50  
Sirius two FS 70  
Sirius two FS 90  
Sirius two FS 110

Dear customer,

Thank you for purchasing this appliance.

Please read this manual carefully before using the product and keep it in with the boiler for future reference.

In order to ensure continued safe and efficient operation we recommend that the product is serviced annually. Our Service and After Sales organization can assist with this.

We hope you will receive many years of satisfactory service.

# Contents

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>Safety</b>  | <b>6</b>  |
| 1.1      | General safety instructions  | 6         |
| 1.2      | Recommendations  | 7         |
| 1.3      | Liabilities  | 8         |
| 1.3.1    | Installer's liability  | 8         |
| 1.3.2    | Manufacturer's liability   | 9         |
| <b>2</b> | <b>About this manual</b>   | <b>10</b> |
| 2.1      | General  | 10        |
| 2.2      | Symbols used   | 10        |
| 2.2.1    | Symbols used in the manual   | 10        |
| 2.2.2    | Symbols used on the appliance  | 10        |
| <b>3</b> | <b>Technical specifications</b>  | <b>11</b> |
| 3.1      | Homologations  | 11        |
| 3.1.1    | Directives   | 11        |
| 3.1.2    | Certifications   | 11        |
| 3.2      | Technical data   | 11        |
| 3.2.1    | Sensor specifications  | 13        |
| 3.3      | Dimensions and connections   | 13        |
| 3.4      | Electrical diagram   | 15        |
| <b>4</b> | <b>Description of the product</b>  | <b>17</b> |
| 4.1      | General description  | 17        |
| 4.2      | Operating principle  | 17        |
| 4.2.1    | Gas/air setting  | 17        |
| 4.2.2    | Low-loss header (accessory)  | 17        |
| 4.2.3    | System in cascade  | 18        |
| 4.2.4    | Settings and safety devices  | 19        |
| 4.3      | Main components  | 20        |
| 4.4      | Control panel description  | 21        |
| 4.4.1    | Description of the keys  | 21        |
| 4.4.2    | Description of the symbols   | 21        |
| 4.5      | Standard delivery  | 22        |
| 4.6      | Accessories and options  | 22        |
| <b>5</b> | <b>Before installation</b>   | <b>23</b> |
| 5.1      | Regulations governing installation   | 23        |
| 5.2      | Installation requirements  | 23        |
| 5.2.1    | Water treatment  | 23        |
| 5.2.2    | Gas supply   | 23        |
| 5.2.3    | Electrical power supply  | 24        |
| 5.2.4    | Circulation pump   | 24        |
| 5.3      | Choice of the location   | 25        |
| 5.3.1    | Ventilation  | 25        |
| 5.3.2    | Overall space needed for the boiler  | 26        |
| 5.3.3    | Data plate   | 27        |
| 5.3.4    | Selecting the position for the outside temperature sensor (optional)   | 28        |
| 5.4      | Transport  | 29        |
| 5.5      | Unpacking and initial preparation  | 29        |
| 5.6      | Connecting diagrams  | 30        |
| 5.6.1    | Connection diagram: 1 boiler + 1 direct circuit + 1 domestic hot water tank  | 30        |
| 5.6.2    | Connection diagram: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank           | 31        |
| 5.6.3    | Connection diagram: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank | 32        |
| 5.6.4    | Connection diagram: controlling a boiler in 0-10 V   | 33        |
| <b>6</b> | <b>Installation</b>  | <b>34</b> |
| 6.1      | General  | 34        |
| 6.2      | Preparation  | 34        |
| 6.2.1    | Accessing the internal boiler components   | 34        |
| 6.3      | Water connections  | 36        |

|          |   |           |
|----------|---|-----------|
| 6.3.1    | Connection of the heating circuit   | 36        |
| 6.3.2    | Connecting the expansion vessel   | 37        |
| 6.3.3    | Connecting the condensate discharge pipe  | 38        |
| 6.4      | Gas connection  | 38        |
| 6.5      | Air supply/flue gas connections   | 39        |
| 6.5.1    | Classification  | 39        |
| 6.5.2    | Coaxial pipes   | 40        |
| 6.5.3    | Twin pipe flue  | 41        |
| 6.5.4    | Pipes in cascade  | 41        |
| 6.5.5    | Lengths of the air/flue gas pipes   | 42        |
| 6.6      | Electrical connections  | 44        |
| 6.6.1    | Recommendations   | 44        |
| 6.6.2    | Recommended cable cross section   | 45        |
| 6.6.3    | Accessing the terminal blocks   | 45        |
| 6.6.4    | Wiring the terminal blocks  | 45        |
| 6.6.5    | Description of the power supply terminal block  | 46        |
| 6.6.6    | Description of the sensor terminal block  | 47        |
| 6.6.7    | Electrical connection: 1 boiler + 1 direct circuit + 1 domestic hot water tank  | 48        |
| 6.6.8    | Electrical connection: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank                               | 48        |
| 6.6.9    | Electrical connection: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank                     | 49        |
| 6.6.10   | Electrical connection: controlling a boiler in 0-10 V   | 50        |
| 6.6.11   | Connecting boilers in cascade with a module <b>OCI 345</b>  | 50        |
| 6.7      | Filling the system  | 51        |
| 6.7.1    | Filling the heating system  | 51        |
| 6.7.2    | Filling the siphon  | 52        |
| 6.8      | Completing installation   | 52        |
| <b>7</b> | <b>Commissioning</b>  | <b>53</b> |
| 7.1      | General   | 53        |
| 7.2      | Check-list before commissioning   | 53        |
| 7.3      | Commissioning procedure   | 53        |
| 7.3.1    | First time commissioning  | 53        |
| 7.3.2    | Checking the gas inlet  | 53        |
| 7.3.3    | Checking the electrical connections   | 54        |
| 7.3.4    | Checking the hydraulic circuit  | 54        |
| 7.4      | Gas settings  | 54        |
| 7.4.1    | Configuring the fan speed   | 54        |
| 7.4.2    | Setting the air/gas ratio (maximum heat input)  | 55        |
| 7.4.3    | Setting the air/gas ratio (reduced heat input)  | 56        |
| 7.4.4    | Gas valves  | 56        |
| 7.4.5    | CO <sub>2</sub> checking and setting values   | 57        |
| 7.4.6    | Adapting to another gas type  | 58        |
| 7.5      | Checks and adjustments after commissioning  | 59        |
| 7.5.1    | Configuring an installation with 1 boiler + 1 low-loss header + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank | 59        |
| 7.5.2    | Configuring boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank                                | 59        |
| 7.5.3    | Configuring control of a boiler in 0-10 V   | 60        |
| 7.5.4    | Configuring a master boiler and the slave boilers in a cascade  | 60        |
| <b>8</b> | <b>Operation</b>  | <b>62</b> |
| 8.1      | Use of the control panel  | 62        |
| 8.1.1    | Modifying the user parameters   | 62        |
| 8.1.2    | Modifying the installer parameters  | 62        |
| 8.2      | Starting up the boiler  | 63        |
| 8.3      | Stopping the boiler   | 63        |
| 8.3.1    | Putting the boiler in Standby mode  | 63        |
| 8.4      | Frost Protection  | 64        |
| 8.4.1    | Activating the <b>Off</b>   | 64        |
| <b>9</b> | <b>Settings</b>   | <b>65</b> |
| 9.1      | List of parameters  | 65        |
| 9.1.1    | Shortcuts menu  | 65        |
| 9.1.2    | Information menu  | 65        |
| 9.1.3    | List of user parameters   | 66        |

|           |  |            |
|-----------|--|------------|
| 9.1.4     | List of installer parameters                             | 68         |
| 9.2       | Setting the parameters                                   | 79         |
| 9.2.1     | Setting the date and time                                | 79         |
| 9.2.2     | Language selection                                       | 80         |
| 9.2.3     | Changing the operating mode                              | 81         |
| 9.2.4     | Forcing domestic hot water production                    | 81         |
| 9.2.5     | Setting the room temperature set point ( <b>On</b> mode) | 82         |
| 9.2.6     | Modifying the domestic hot water production mode         | 82         |
| 9.2.7     | Setting the domestic hot water temperature set point     | 83         |
| 9.2.8     | Setting the room temperature set point (Reduced mode)    | 83         |
| 9.2.9     | Programming a Holiday period                             | 84         |
| 9.2.10    | Using the boiler according to thermal output             | 87         |
| 9.2.11    | Selecting a heating circuit                              | 88         |
| 9.2.12    | Locking / Unlocking parameter modification               | 89         |
| 9.2.13    | Timer program  | 91         |
| 9.2.14    | Setting a temporary heating flow temperature             | 98         |
| 9.2.15    | Managing boilers in cascade                              | 98         |
| 9.3       | Accessing the information menu                           | 98         |
| <b>10</b> | <b>Maintenance</b>                                       | <b>100</b> |
| 10.1      | General  | 100        |
| 10.2      | Standard inspection and maintenance operations           | 100        |
| 10.2.1    | Performing the annual service                            | 100        |
| 10.2.2    | Removing the burner                                      | 100        |
| 10.2.3    | Cleaning the heat exchanger                              | 102        |
| 10.2.4    | Checking the burner                                      | 103        |
| 10.2.5    | Cleaning the siphon                                      | 104        |
| 10.2.6    | Remounting the burner                                    | 105        |
| 10.2.7    | Check the combustion                                     | 106        |
| <b>11</b> | <b>Troubleshooting</b>                                   | <b>110</b> |
| 11.1      | Error codes  | 110        |
| 11.1.1    | Automatic error code clearing                            | 111        |
| 11.1.2    | Clearing error codes                                     | 111        |
| <b>12</b> | <b>Decommissioning</b>                                   | <b>112</b> |
| 12.1      | Decommissioning procedure                                | 112        |
| 12.2      | Recommissioning procedure                                | 112        |
| <b>13</b> | <b>Appendix</b>  | <b>113</b> |
| 13.1      | Declaration of conformity                                | 113        |

# 1 Safety

## 1.1 General safety instructions



### Danger

The appliance is not intended to be used by persons with reduced physical, sensory or mental capacities, or who lack experience or knowledge, unless, through the mediation of a person responsible for their safety, they have had the benefit of supervision or of instructions on the use of the appliance.



### Danger

If you smell gas:

1. Do not use a naked flame, do not smoke, do not operate electrical contacts or switches (doorbell, light, motor, lift, etc.).
2. Shut off the gas supply.
3. Open the windows.
4. Trace possible leaks and seal them immediately.
5. If the gas leak is before the gas meter, contact the gas supplier.



### Danger

If you smell flue gases:

1. Switch off the appliance.
2. Open the windows.
3. Trace possible leaks and seal them immediately.



### Warning

Do not touch the flue gas pipes. Depending on the boiler settings, the temperature of the flue gas pipes may exceed 60°C.



### Warning

Do not touch the radiators for long periods. Depending on the boiler settings, the temperature of the radiators may exceed 60°C.



### Warning


Take precautions with the domestic hot water. Depending on the boiler settings, the domestic hot water temperature may exceed 65°C.





### Danger of electric shock

Before any work, switch off the mains supply to the boiler.


## 1.2 Recommendations


 **Note**  
Keep this document close to the place where the appliance is installed.


 **Note**  
Never remove or cover labels and data plates affixed to the appliances. Labels and data plates must be legible throughout the entire lifetime of the appliance. Immediately replace damaged or illegible instructions and warning stickers.


 **Caution**  
The appliance should be on Summer or Antifreeze mode rather than switched off to guarantee the following functions:


- Anti-blocking of pumps
- Frost Protection


 **Caution**  
If the home is unoccupied for a long period and there is a risk of frost, drain the boiler and the heating system.


 **Caution**  
To enjoy warranty cover, no modifications must be made to the appliance.


 **Caution**  
The frost protection does not work if the boiler is switched off.


 **Caution**  
The integrated protection system only protects the boiler, not the heating installation

 **Note**  
Remove the casing only to perform maintenance and repair work. Put the casing back in place after maintenance and repair work.

 **Warning**  
Only qualified professionals are authorised to work on the boiler and the heating installation.

 **Note**  
Keep the boiler accessible at all times.

 **Caution**  
Installation of the boiler must be done by a qualified professional in accordance with prevailing local and national regulations.

 **Caution**  
Install the boiler in a frost-free location.



**Caution**

Do not stock chloride or fluoride compounds close to the boiler. They are particularly corrosive and may contaminate the combustive air. Chloride and fluoride compounds are present in aerosol sprays, paints, solvents, cleaning products, washing products, detergents, glues, snow clearing salts.



**Caution**

Do not neglect to service the boiler. Contact a qualified professional or subscribe to a maintenance contract for the annual servicing of the boiler.



**Note**

Regularly check the presence of water and pressure in the heating installation.



**Caution**

Maintenance work must be carried out by a qualified professional.



**Caution**

Only a qualified professional is authorised to clean the inside of the boiler.



**Caution**

Only genuine spare parts may be used.



**Caution**

After maintenance or repair work, check the entire heating installation to ensure that there are no leaks.



**Warning**

- Ensure correct earthing.
- Install the appliance on a solid, stable structure able to bear its weight.



**Warning**

Removal and disposal of the boiler must be carried out by a qualified installer in accordance with local and national regulations



**Caution**

If the power cable is damaged, it must be replaced by the manufacturer, its after sales service or persons with similar qualifications in order to obviate any danger.

## 1.3 Liabilities

### 1.3.1 Installer's liability

The installer is responsible for the installation and initial commissioning of the appliance. The installer must abide by the following instructions:



- Read and follow the instructions given in the manuals provided with the appliance.
- Install the appliance in compliance with prevailing legislation and standards.
- Carry out initial commissioning and any checks necessary.
- Explain the installation to the user.
- If maintenance is necessary, warn the user of the obligation to check the appliance and keep it in good working order.
- Give all the instruction manuals to the user.

### 1.3.2 Manufacturer's liability

---

Our products are manufactured in compliance with the requirements of the various Directives applicable. They are therefore delivered with the CE marking and any documents necessary. In the interests of the quality of our products, we strive constantly to improve them. We therefore reserve the right to modify the specifications given in this document.

Our liability as manufacturer may not be invoked in the following cases:

- Failure to abide by the instructions on installing the appliance.
- Failure to abide by the instructions on using the appliance.
- Faulty or insufficient maintenance of the appliance.

## 2 About this manual


### 2.1 General


This manual is intended for the installer of a Sirius two FS boiler.


### 2.2 Symbols used


#### 2.2.1 Symbols used in the manual


This manual uses various danger levels to draw attention to special instructions. We do this to improve user safety, to prevent problems and to guarantee correct operation of the appliance.

 **Danger**  
Risk of dangerous situations resulting in serious personal injury.

 **Danger of electric shock**  
Risk of electric shock.

 **Warning**  
Risk of dangerous situations resulting in minor personal injury.

 **Caution**  
Risk of material damage.


 **Note**  
Please note: important information.

 **See**  
Reference to other manuals or pages in this manual.

#### 2.2.2 Symbols used on the appliance

- 1 Alternating current.
- 2 Protective earthing.
- 3 Before installing and commissioning the appliance, carefully read the instruction manuals provided.
- 4 Dispose of used products through an appropriate recovery and recycling structure.
- 5 Caution: danger of electric shock, live parts. Disconnect the mains power prior to carrying out any work.

Fig.1 Symbols used on the appliance

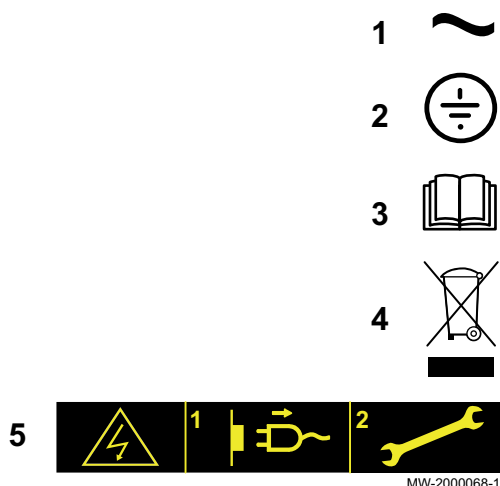

## 3 Technical specifications

### 3.1 Homologations

#### 3.1.1 Directives

This product has been manufactured and put into circulation in accordance with the requirements and standards of the following European Directives:

- Gas Directive 2009/142/EC
- Pressure Equipment Directive 97/23/EC, Article 3, paragraph 3
- Electromagnetic Compatibility Directive 2004/108/EC  
Generic standards: EN 61000-6-3, EN 61000-6-1  
Standard referred to: EN 55014
- For appliances connected to the electricity network:  
Abide by the prevailing regulations for low voltage electrical appliances.
- Low Voltage Directive 2006/95/EC  
Generic standard: EN 60335-1  
Standard referred to: EN 60335-2-102
- Efficiency Directive 92/42/EC
- BS 7074, Part 1: Application, selection and installation of expansion vessels and ancillary equipment for sealed water systems
- BS 6644: Specification for the installation of gas-fired condensing boilers with a nominal output exceeding 70 kW
- BS EN 12828: Design for water-based heating systems
- BS EN 13831: Closed expansion vessels

Apart from the legal provisions and Directives, the additional Directives described in these instructions must also be observed.

For all provisions and Directives referred to in these instructions, it is agreed that all addenda or subsequent provisions will apply at the time of installation.

#### 3.1.2 Certifications

We hereby certify that the series of appliances specified below complies with the standard model described in the CE declaration of conformity.

|                             |  |
|-----------------------------|--|
| CE number                   | CE-0085CP0089  |
| NOx class                   | Class 5  |
| Type of flue gas connection | <ul style="list-style-type: none"> <li>• B<sub>23</sub> – B<sub>23P</sub></li> <li>• C<sub>13</sub></li> <li>• C<sub>33</sub></li> <li>• C<sub>43</sub></li> <li>• C<sub>53</sub></li> <li>• C<sub>63</sub></li> <li>• C<sub>83</sub></li> </ul> |

### 3.2 Technical data

Tab.1 General

|   | Boiler speed | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|---|--------------|------|------------------|------------------|------------------|-------------------|
| Useful heat output at 80/60°C Heating mode  | Minimum      | kW   | 5.0              | 7.2              | 9.4              | 11.4              |
| Useful heat output at 80/60°C Heating mode  | Maximum      | kW   | 45               | 65               | 85               | 102               |
| Useful heat output at 50/30 °C Heating mode | Minimum      | kW   | 5.4              | 7.8              | 10.2             | 12.3              |

|   | Boiler speed                 | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90   | Sirius two FS 110 |
|---|------------------------------|------|------------------|------------------|--------------------|-------------------|
| Useful heat output at 50/30 °C Heating mode                         | Maximum                      | kW   | 48.6             | 70.2             | 91.8               | 110.2             |
| Heat input - Heating mode   | Minimum                      | kW   | 5.1              | 7.4              | 9.7 <sup>(1)</sup> | 11.7              |
| Heat input - Heating mode   | Maximum                      | kW   | 46.3             | 66.9             | 87.4               | 104.9             |
| Heat input - Heating mode   | Minimum                      | kW   | 5.6              | 8.2              | 10.7               | 12.9              |
| Heat input - Heating mode   | Maximum                      | kW   | 51.4             | 74.2             | 97.0               | 116.4             |
| Efficiency at 80/60 °C - Heating mode under full load               | Maximum                      | %    | 97.4             | 97.2             | 97.3               | 97.2              |
| Efficiency at 50/30 °C - Heating mode under full load               | Heating mode under full load | %    | 105.0            | 105.0            | 105.5              | 105.1             |
| Efficiency - - Return temperature 30°C Heating mode under part load | Heating mode under part load | %    | 108.4            | 108.1            | 108.2              | 108.1             |

(1) The heat input with G31 gas is different and is 12.5 kW

Tab.2 Characteristics of the heating circuit

|  | Unit      | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|-----------|------------------|------------------|------------------|-------------------|
| Water content (excluding expansion vessel) | litre     | 2.81             | 4.98             | 8.34             | 9.83              |
| Minimum operating pressure                 | MPa (bar) | 0.05 (0.5)       | 0.05 (0.5)       | 0.05 (0.5)       | 0.05 (0.5)        |
| Maximum operating pressure (MOP)           | MPa (bar) | 0.4 (4)          | 0.4 (4)          | 0.4 (4)          | 0.4 (4)           |
| Maximum water temperature                  | °C        | 85               | 85               | 85               | 85                |
| Maximum operating temperature              | °C        | 80               | 80               | 80               | 80                |

Tab.3 Data on the gases and combustion gases

| For gas flow rates at 15°C and 1013.25 hPA | Boiler speed | Unit   | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|--------------|--------|------------------|------------------|------------------|-------------------|
| Consumption of natural gas (G20)           | Minimum      | m³/h   | 0.54             | 0.78             | 1.03             | 1.24              |
| Consumption of natural gas (G20)           | Maximum      | m³/h   | 4.90             | 7.07             | 9.25             | 11.10             |
| Consumption of Propane (G31)               | Minimum      | kg/h   | 0.40             | 0.57             | 0.97             | 0.91              |
| Consumption of Propane (G31)               | Maximum      | kg/h   | 3.59             | 5.19             | 6.79             | 8.15              |
| NOx emission according to EN297A3          | Class 5      | mg/kWh | 29.8             | 34.8             | 39.5             | 24.7              |
| Flue gas mass flow rate (G20)              | Minimum      | kg/h   | 7.2              | 14.4             | 18               | 18                |
| Flue gas mass flow rate (G20)              | Maximum      | kg/h   | 75.6             | 111.6            | 144              | 169.2             |
| Maximum flue gas temperature               | Minimum      | °C     | 92               | 76               | 70               | 70                |

Tab.4 Electrical characteristics

|                                    | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|------------------------------------|------|------------------|------------------|------------------|-------------------|
| Power supply voltage               | VAC  | 230V 50Hz        | 230V 50Hz        | 230V 50Hz        | 230V 50Hz         |
| Maximum absorbed power - Full load | W    | 100              | 117              | 146              | 185               |
| Maximum absorbed power - Part load | W    | 24               | 24               | 24               | 24                |
| Maximum absorbed power - Stand-by  | W    | 2.7              | 3                | 3                | 3                 |

Tab.5 Other characteristics

|                           | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|---------------------------|------|------------------|------------------|------------------|-------------------|
| Ingress protection rating |      | IP21             | IP21             | IP21             | IP21              |
| Weight empty              | kg   | 60               | 70               | 104              | 109               |

### 3.2.1 Sensor specifications

Tab.6 Heating flow sensor and return sensor

|                      |      |      |      |
|----------------------|------|------|------|
| Temperature (in °C)  | 30   | 65   | 85   |
| Resistance (in ohms) | 8059 | 2084 | 1070 |

Tab.7 Flue gas sensor

|                      |          |        |       |       |      |     |     |     |
|----------------------|----------|--------|-------|-------|------|-----|-----|-----|
| Temperature (in °C)  | -50      | -10    | 0     | 40    | 100  | 200 | 250 | 300 |
| Resistance (in ohms) | 1 755765 | 117521 | 67650 | 10569 | 1377 | 145 | 65  | 34  |

Tab.8 Outside sensor

|                      |       |      |      |      |      |      |     |     |
|----------------------|-------|------|------|------|------|------|-----|-----|
| Temperature (in °C)  | -30   | -15  | -5   | 0    | 10   | 20   | 30  | 50  |
| Resistance (in ohms) | 13034 | 5861 | 3600 | 2857 | 1840 | 1218 | 827 | 407 |

### 3.3 Dimensions and connections

Fig.2 Dimensions and connections Sirius two FS 50 and Sirius two FS 70



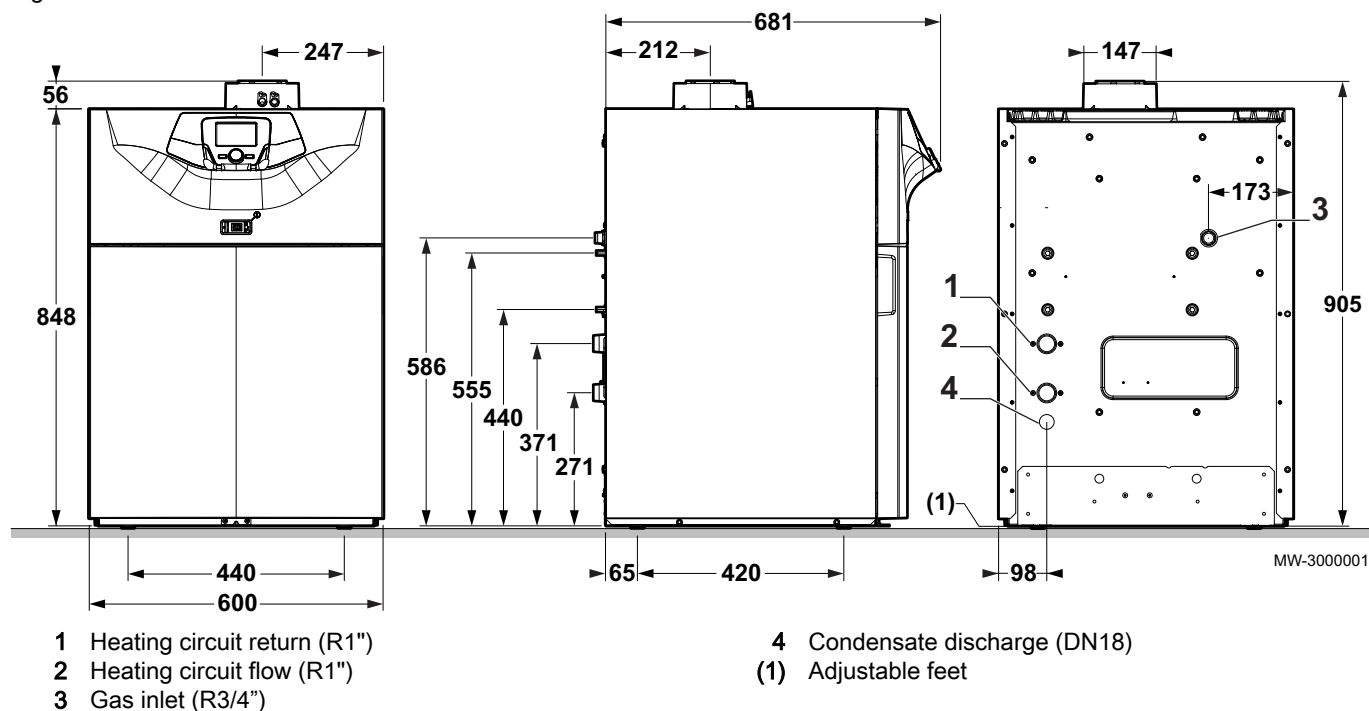


Fig.3 Dimensions and connections Sirius two FS 90 and Sirius two FS 110

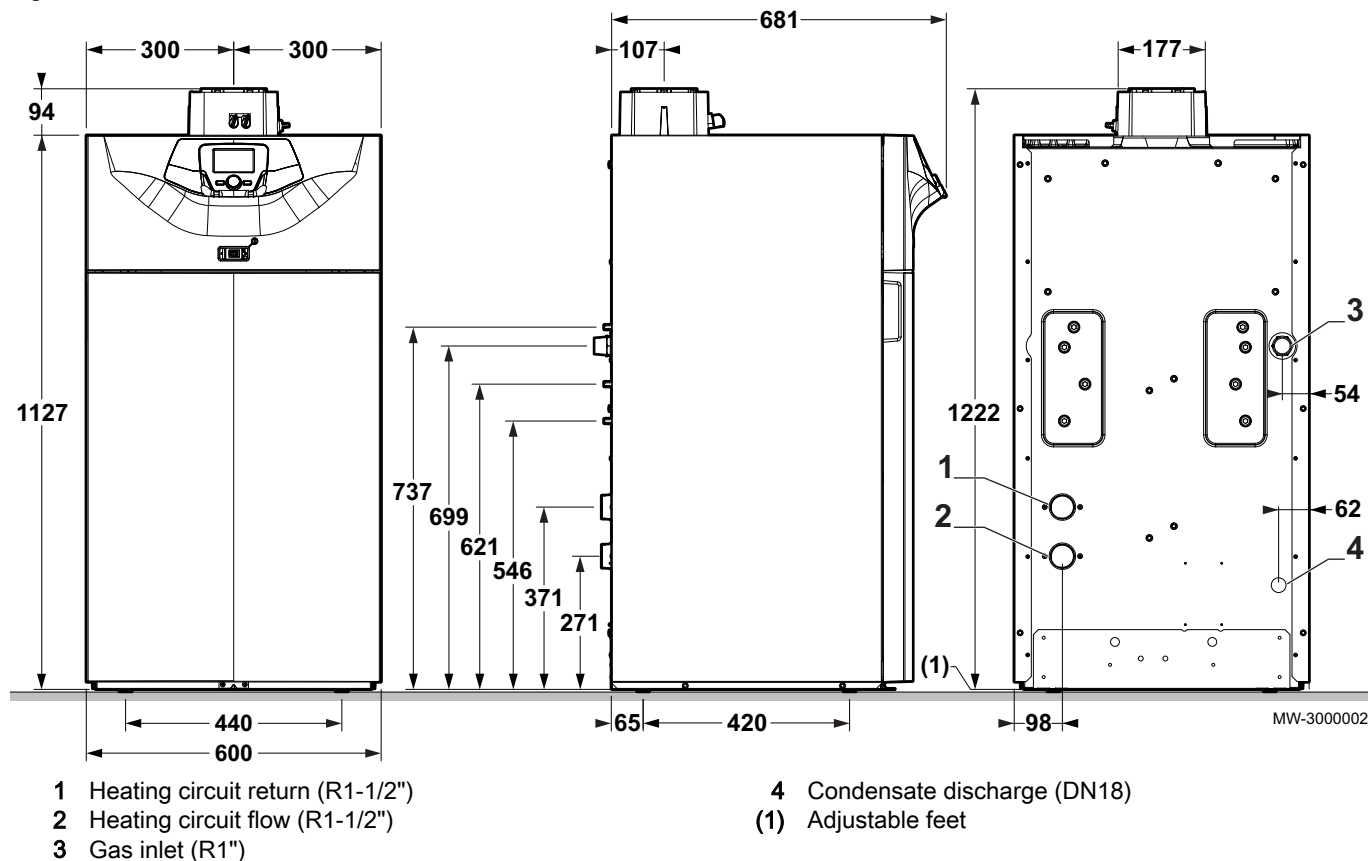

### 3.4 Electrical diagram


Fig.4 Electrical diagram Sirius two FS 50 - Sirius two FS 70

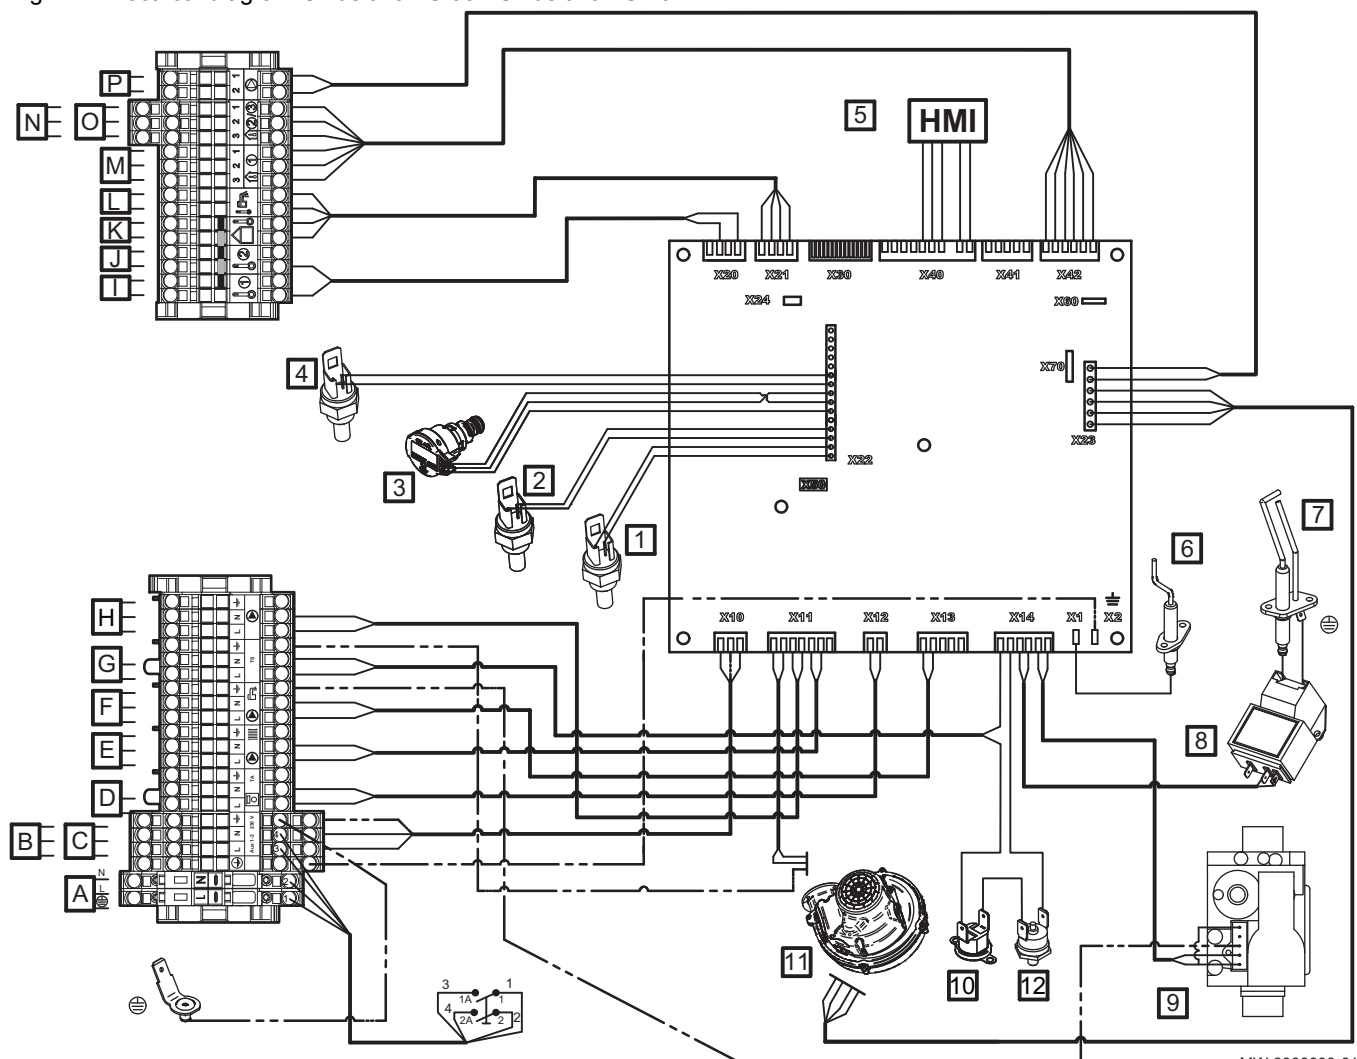

MW-300003-01

- |                                    |   |
|------------------------------------|---|
| ⊕ Earth POP rivet                  | O Room temperature sensor 3                         |
| A Power supply 230 V 50 Hz         | P Boiler pump modulation (PWM)                      |
| B Power supply auxiliary circuit 1 | 1 Flow temperature sensor                           |
| C Power supply auxiliary circuit 2 | 2 Return temperature sensor                         |
| D Room thermostat                  | 3 Hydraulic pressure sensor                         |
| E Heating circuit pump             | 4 Flue gas sensor                                   |
| F Domestic hot water pump          | 5 Control panel display                             |
| G Safety contact                   | 6 Ionisation probe                                  |
| H Boiler pump                      | 7 Spark plug  |
| I Auxiliary sensor 1               | 8 Igniter   |
| J Auxiliary sensor 2               | 9 Gas valve   |
| K Outside sensor                   | 10 Safety thermostat                                |
| L Domestic hot water sensor        | 11 Fan  |
| M Room temperature sensor 1        | 12 Safety thermostat on the combustion chamber door |
| N Room temperature sensor 2        |   |

Fig.5 Electrical diagram Sirius two FS 90 - Sirius two FS 110

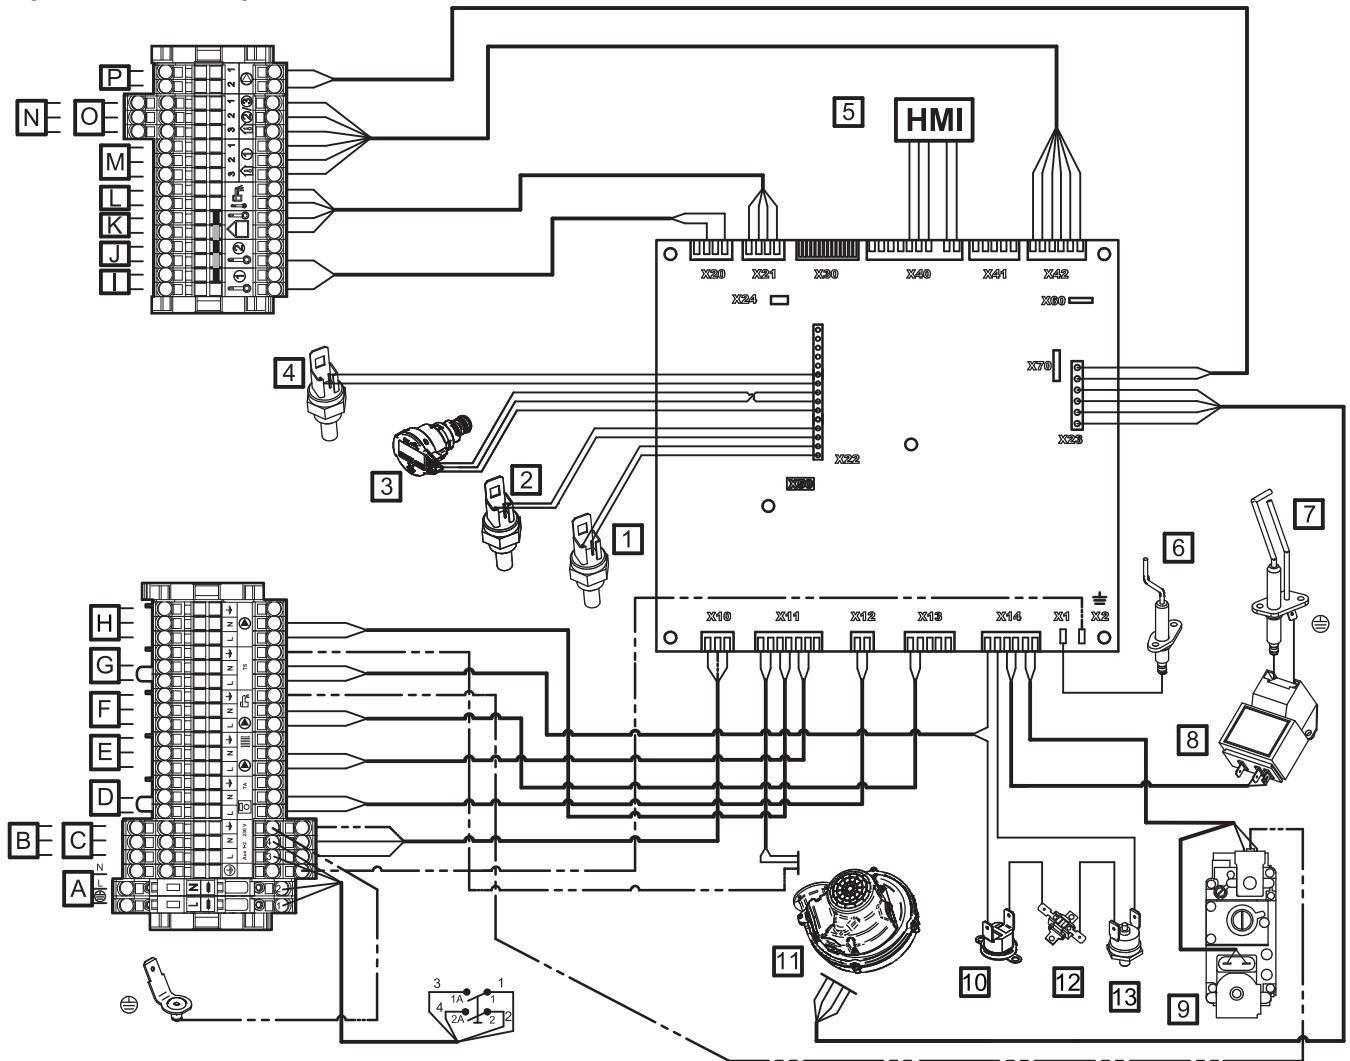

MW-3000004-03

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>⊕ Earth POP rivet</li> <li>A Power supply 230V 50Hz</li> <li>B Power supply auxiliary circuit 1</li> <li>C Power supply auxiliary circuit 2</li> <li>D Room thermostat</li> <li>E Heating circuit pump</li> <li>F Domestic hot water pump</li> <li>G Safety contact</li> <li>H Boiler pump</li> <li>I Auxiliary sensor 1</li> <li>J Auxiliary sensor 2</li> <li>K Outside sensor</li> <li>L Domestic hot water sensor</li> <li>M Room temperature sensor 1</li> <li>N Room temperature sensor 2</li> </ul> | <ul style="list-style-type: none"> <li>O Room temperature sensor 3</li> <li>P Boiler pump modulation (PWM)</li> <li>1 Flow temperature sensor</li> <li>2 Return temperature sensor</li> <li>3 Hydraulic pressure sensor</li> <li>4 Flue gas sensor</li> <li>5 Control panel display</li> <li>6 Ionisation probe</li> <li>7 Spark plug</li> <li>8 Igniter</li> <li>9 Gas valve</li> <li>10 Safety thermostat</li> <li>11 Fan</li> <li>12 Thermal fuse</li> <li>13 Safety thermostat on the combustion chamber door</li> </ul> |
|---|--|



## 4 Description of the product

### 4.1 General description

Sirius two FS floor-standing condensing gas boilers have the following characteristics:

- Low pollutant emissions
- High efficiency heating
- Electronic control panel
- Flue gas discharge by a concentric connection.
- Perfectly suitable for cascade systems with several boilers.

### 4.2 Operating principle


#### 4.2.1 Gas/air setting

The casing fitted to the boiler is also used as an air box. Air is drawn in by the fan and gas injected into the Venturi by the fan intake. The fan speed is modulated according to the settings, the heat demand and the actual temperatures measured by the temperature sensors. The gas and air are mixed in the Venturi. The gas/air ratio command function accurately adjusts the quantities of gas and air required. This provides optimum combustion over the entire output range. The gas/air mixture is sent to the burner, located upstream of the heat exchanger.

#### 4.2.2 Low-loss header (accessory)


The low-loss header is used to prevent interaction between the dynamic pressures within the boiler and the heating circuits. The low-loss header considerably reduces the variations in pressure and flow rate caused by the use of several circulating pumps in an installation and is used to manage flows in the installation and to control temperatures.

Fig.6 Boiler equipped with the low-loss header kit

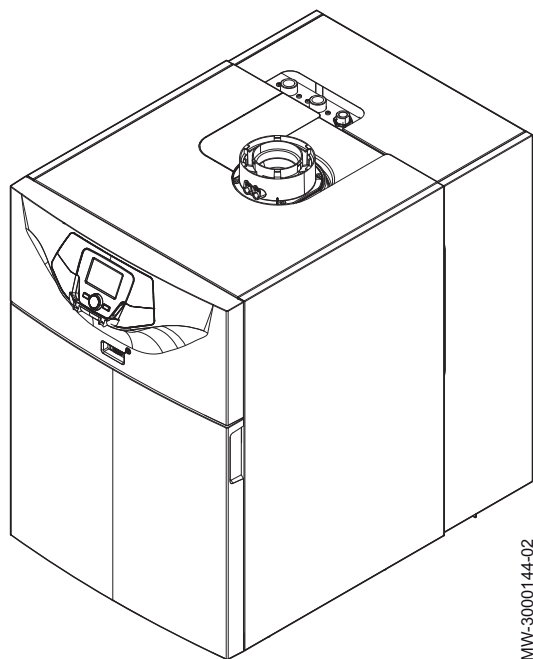

MW-3000144-02


Fig.7 Functional diagram of a boiler with a low-loss header

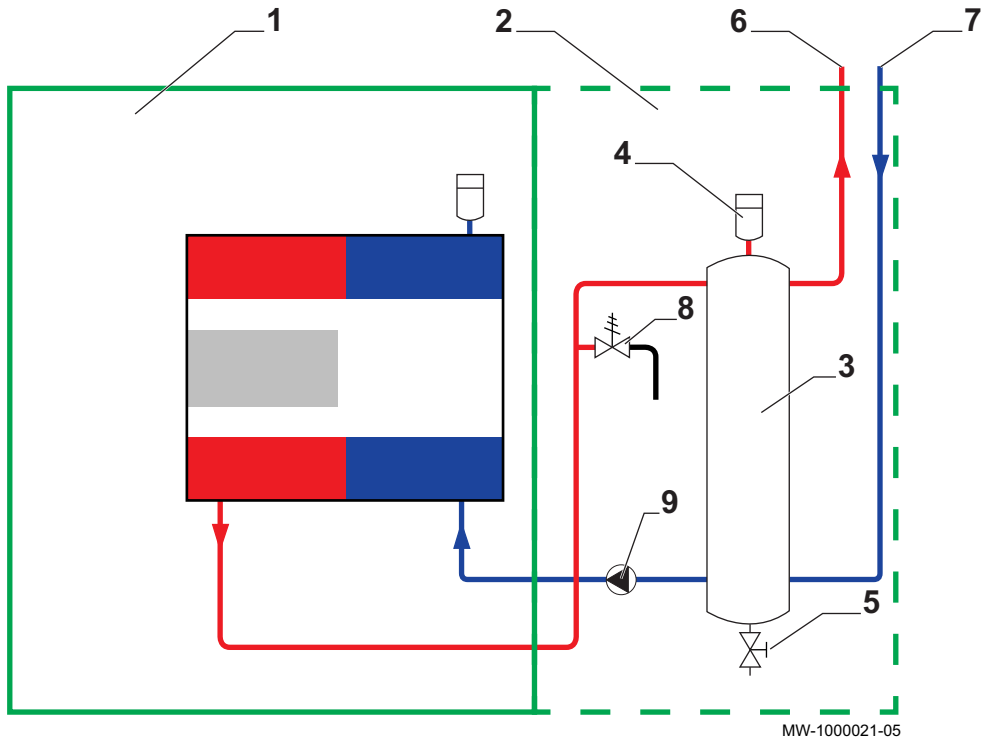

- |                               |                               |
|-------------------------------|-------------------------------|
| 1 Boiler                      | 6 Heating circuit flow        |
| 2 Low-loss header kit         | 7 Heating circuit return      |
| 3 Low-loss header (accessory) | 8 Safety valve                |
| 4 Air vent                    | 9 Modulating circulating pump |
| 5 Drain valve                 |                               |

#### 4.2.3 System in cascade

Fig.8 Boilers in cascade

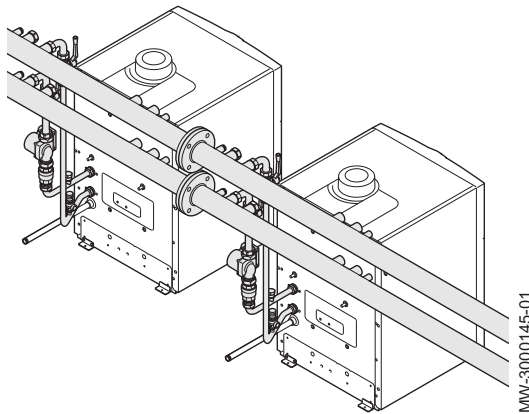

The boiler is ideally suited for a cascade system configuration. Use a boiler/cascade connection kit to connect boilers in cascade.



**Note**

Please contact the After Sales Service for further information.


#### 4.2.4 Settings and safety devices



##### Note


The settings and safety devices are only operational if the boiler is powered up.

Tab.9 Description of the safety devices

| Device   | Description   |
|--|---|
| Safety thermostats                             | <p>The safety thermostats suspend the supply of gas to the burner if the water in the primary circuit overheats. To resume normal operation of the boiler, eliminate the cause of this interruption.</p> <p> <b>Caution</b><br/>The safety thermostats must in no circumstances be switched off or disconnected.</p> |
| NTC flue gas sensor                            | The control panel blocks the gas supply to the burner in the event of overheating. To resume normal operation of the boiler, switch off the boiler and switch it back on again with the ON/OFF switch.  |
| Flame detector by ionisation                   | The boiler is put into safety shut-down in the event of gas shortage or incomplete inter-ignition on the burner.  |
| Hydraulic pressure switch                      | <p>Thanks to this device, the burner can only operate if the system pressure is higher than 0.5 bar (0.05 MPa).</p> <p>When the pressure switch detects a pressure lower than 0.8 bar (0.08 MPa), a warning message is displayed, without stopping the circulating pump.</p>  |
| Post-circulating pump                          | After the burner stops, depending on the room thermostat setting and if in heating mode, the circulating pump runs for a further 3 minutes.   |
| Frost protection device                        | <p>When the flow temperature is lower than 5°C, the burner starts up and runs until the flow temperature reaches 15°C. This device runs under the following conditions:</p> <ul style="list-style-type: none"> <li>• The boiler is switched on</li> <li>• The gas supply is working</li> <li>• The pressure in the system is higher than 0.5 bar (0,05 MPa)</li> </ul>                                |
| Anti-blocking of the pump                      | <p>If there are no heating or domestic hot water requirements for 24 consecutive hours, the pumps start up automatically and run for 10 seconds.</p> <p>The pumps connected directly to the appliance's terminal blocks are started up every Friday at 10:00 a.m. and run for 30 seconds.</p>   |
| Anticipatory start-up of the circulating pumps | In heating mode only, the appliance can start up the circulating pumps before burner ignition. The duration and activation of anticipatory start-up depends on the conditions of installation and the operating temperatures. The duration of anticipatory start-up of the circulating pumps therefore varies from a few seconds to several minutes.  |

### 4.3 Main components


Fig.9 Sirius two FS 50 and Sirius two FS 70

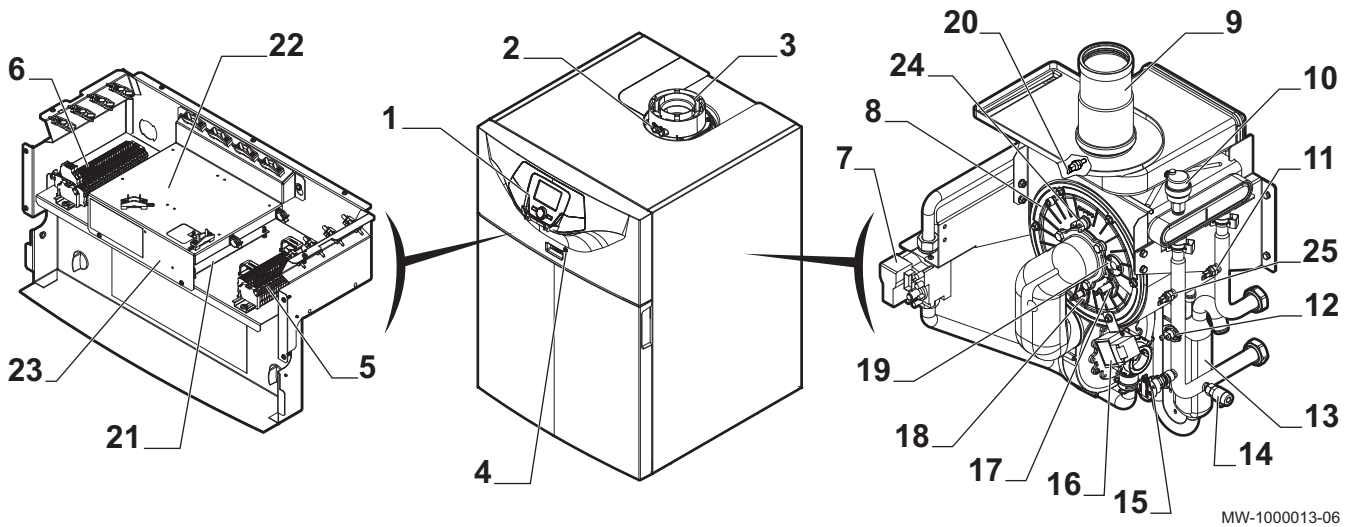

MW-1000013-06

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1 Control panel</li> <li>2 Flue gas measuring point</li> <li>3 Flue gas connection</li> <li>4 On/Off button</li> <li>5 Terminal block for the sensors and the remote control</li> <li>6 Power supply terminal block</li> <li>7 Gas valve</li> <li>8 Burner</li> <li>9 Flue gas fitting</li> <li>10 Automatic air vent</li> <li>11 Return temperature sensor</li> <li>12 Safety thermostat</li> <li>13 Condensate siphon</li> <li>14 Drain valve</li> <li>15 Hydraulic pressure sensor</li> <li>16 Igniter</li> </ul> | <ul style="list-style-type: none"> <li>17 Ignition electrode</li> <li>18 Ionisation probe</li> <li>19 Flame inspection window</li> <li>20 Flue gas sensor</li> <li>21 Controller PCB</li> <li>22 Mounting point for a maximum of two AVS 75 modules. A third AVS 75 module can be used by the boiler but must be fixed to the wall and powered externally.</li> <li>23 Mounting point for OCI 345 communication module</li> </ul> <p><b>⚠ Caution</b><br/>                 Danger of short circuit on the OCI 345 communication module if it is fixed in another emplacement.</p> <ul style="list-style-type: none"> <li>24 Safety thermostat on the combustion chamber door</li> <li>25 Flow temperature sensor</li> </ul> |
|---|---|

Fig.10 Sirius two FS 90 and Sirius two FS 110

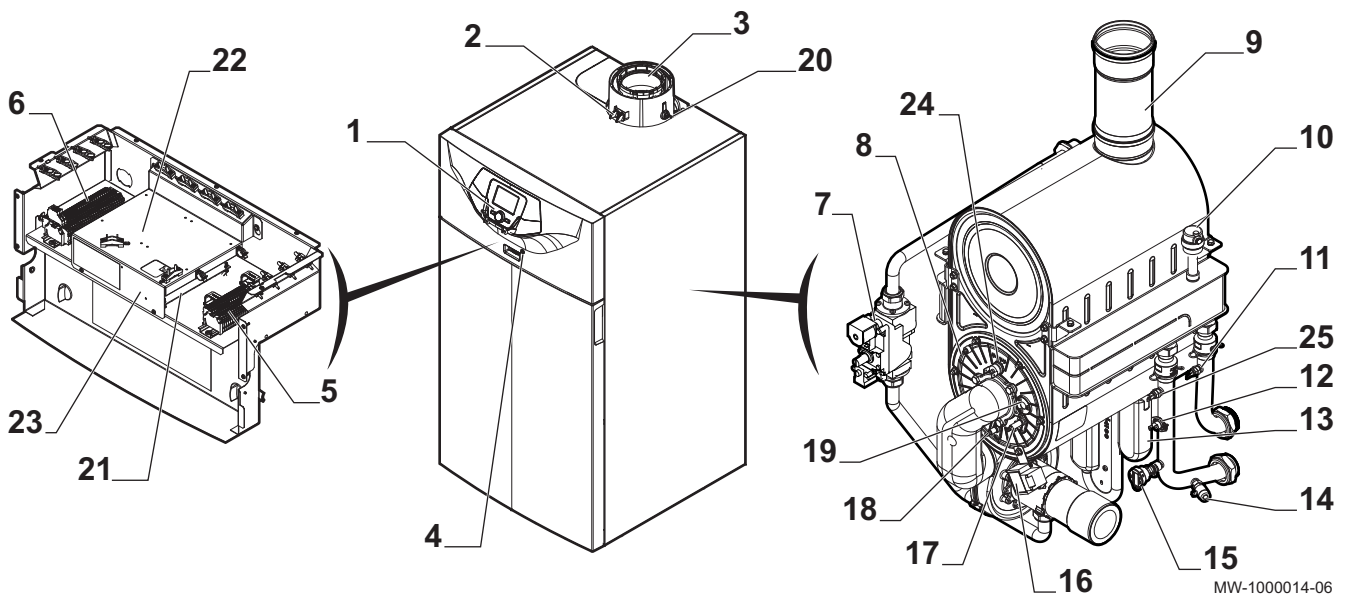

MW-1000014-06

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1 Control panel</li> <li>2 Flue gas measuring point</li> <li>3 Flue gas connection</li> <li>4 On/Off button</li> </ul> | <ul style="list-style-type: none"> <li>5 Terminal block for the sensors and the remote control</li> <li>6 Power supply terminal block</li> <li>7 Gas valve</li> <li>8 Burner</li> </ul> |
|---|---|

- 9 Flue gas fitting
- 10 Automatic air vent
- 11 Return temperature sensor
- 12 Safety thermostat
- 13 Condensate siphon
- 14 Drain valve
- 15 Hydraulic pressure sensor
- 16 Igniter
- 17 Ignition electrode
- 18 Ionisation probe
- 19 Flame inspection window
- 20 Flue gas sensor


- 21 Controller PCB
- 22 Mounting point for a maximum of two AVS 75 modules. A third AVS 75 module can be used by the boiler but must be fixed to the wall and powered externally.
- 23 Mounting point for OCI 345 communication module

**Caution**

Danger of short circuit on the OCI 345 module if it is fixed in another emplacement.

- 24 Safety thermostat on the combustion chamber door
- 25 Flow temperature sensor


Fig.11 Burner description

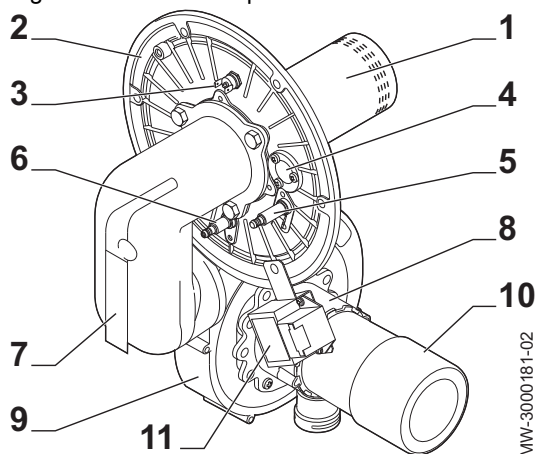

- 1 Burner
- 2 Burner bracket
- 3 Safety thermostat on the combustion chamber door
- 4 Flame inspection window
- 5 Spark plug
- 6 Ionisation probe
- 7 Gas collector
- 8 Venturi
- 9 Fan
- 10 Silencer (Sirius two FS 90 model only)
- 11 Igniter

## 4.4 Control panel description

Fig.12 Control panel keys

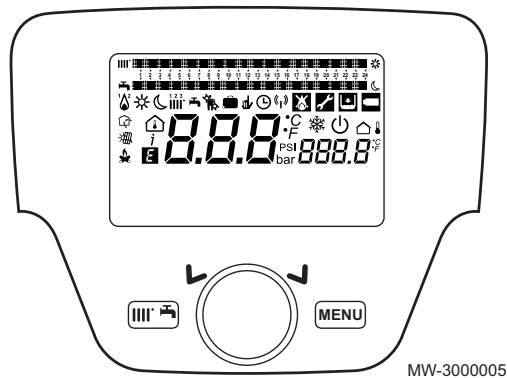

### 4.4.1 Description of the keys



Operating mode key

This key is used to access the shortcuts menu



Menu key



Rotary selection and confirmation button




**For more information, see**

List of parameters, page 65

Shortcuts menu, page 65

Fig.13 Symbols on the control panel

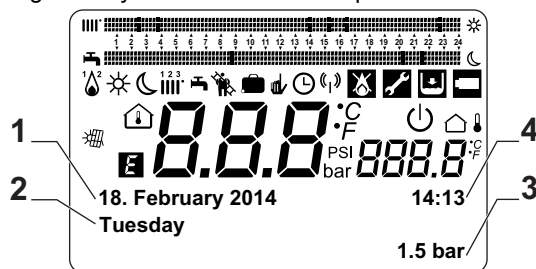

### 4.4.2 Description of the symbols



Burner lit

- (1): Output < 70%

- (2): Output > 70%



Operating mode: Comfort room temperature



Operating mode: Reduced room temperature



Operating mode: Heating

- (1): Zone 1 active

- (2): Zone 2 active

- (3): Zone 3 active



Operating mode: Domestic hot water activated

**Note**

The domestic hot water can be activated. The heating is then deactivated.














Sweep Function activated



Holidays program function activated



Operating mode: Manual

-  Operating mode: Automatic
-  Data transmission: only when the wireless device is connected.
-  Error: the burner cannot start up
-  Error: After Sales Service intervention required
-  Hydraulic pressure too low
-  Room temperature (°C)
-  Temperature and hydraulic pressure units: international system or imperial system.
-  Protection Mode active: the boiler's frost protection is activated.
-  Outside temperature (°C)
-  Solar integration available
-  Generic error
  - 1 Date: day, month, year
  - 2 Day of the week
  - 3 Boiler / heating circuit pressure
  - 4 Clock: hours and minutes

## 4.5 Standard delivery

The Sirius two FS boiler comes in a package that includes:

- A floor-standing gas boiler
- An installation and service manual
- A user guide
- A data plate

## 4.6 Accessories and options

Tab.10 Package references

| Description   | Package  |
|---|----------|
| Outside sensor QAC34  | C7104873 |
| Low-loss header kit - Sirius two FS 50 – Sirius two FS 70   | 5142184  |
| Low-loss header kit - Sirius two FS 90 – Sirius two FS 110  | 5142185  |
| Boiler connection kit for cascade system - without gas pipes – Sirius two FS 50 – Sirius two FS 70  | 5142186  |
| Boiler connection kit for cascade system - without gas pipes – Sirius two FS 90 – Sirius two FS 110 | 5142187  |
| OCI 345 cascade communication module  | 5140908  |
| AVS75 module  | 5138513  |
| AVS75 module with wall mounting kit   | 5140909  |

## 5 Before installation

### 5.1 Regulations governing installation



#### Caution

Installation of the appliance must be done by a qualified engineer in accordance with prevailing local and national regulations.

### 5.2 Installation requirements

#### 5.2.1 Water treatment

In many cases, the boiler and the heating system can be filled with mains water, without treating the water.



#### Caution

Do not add any chemical products to the central heating water without first consulting a water treatment specialist. For example: antifreeze, water softeners, products to increase or reduce the pH value, chemical additives and/or inhibitors. These may cause faults in the boiler and damage the heat exchanger.



#### Note

- Flush the installation with at least 3 times the volume of water contained in the central heating system.
- Flush the DHW circuit with at least 20 times its volume of water.

The water in the installation must comply with following characteristics:

Tab.11 Heating water specifications

| Specification                       | Unit       | Total output of the installation (kW) |            |           |           |
|-------------------------------------|------------|---------------------------------------|------------|-----------|-----------|
|                                     |            | ≤ 70                                  | 70 - 200   | 200 - 550 | > 550     |
| Degree of acidity (untreated water) | pH         | 7.5 - 9.5                             | 7.5 - 9.5  | 7.5 - 9.5 | 7.5 - 9.5 |
| Degree of acidity (treated water)   | pH         | 7.5 - 9.5                             | 7.5 - 9.5  | 7.5 - 9.5 | 7.5 - 9.5 |
| Conductivity at 25°C                | µS/cm      | ≤ 800                                 | ≤ 800      | ≤ 800     | ≤ 800     |
| Chlorides                           | mg/litre   | ≤ 50                                  | ≤ 50       | ≤ 50      | ≤ 50      |
| Other components                    | mg/litre   | < 1                                   | < 1        | < 1       | < 1       |
| Total water hardness <sup>(1)</sup> | °f         | 1 - 35                                | 1 - 20     | 1 - 15    | 1 - 5     |
|                                     | °dH        | 0.5 - 20.0                            | 0.5 - 11.2 | 0.5 - 8.4 | 0.5 - 2.8 |
|                                     | mmol/litre | 0.1 - 3.5                             | 0.1 - 2.0  | 0.1 - 1.5 | 0.1 - 0.5 |

(1) For installations with constant heating and a maximum total system output of 200 kW, the appropriate maximum total water hardness is 8.4°dH (1.5 mmol/l, 15°f). For installations of more than 200 kW, the appropriate maximum total hardness is 2.8°dH (0.5 mmol/l, 5°f).



#### Note

If water treatment is necessary, Potterton recommends the following manufacturers:

- Cillit
- Climalife
- Fernox
- Permo
- Sentinel

#### 5.2.2 Gas supply

- Before mounting, check that the gas meter has sufficient capacity (in m<sup>3</sup>/h). To do this, you should bear in mind the consumption of all appli-

ances. If the capacity of the gas meter is too low, inform the gas supply company.

- The boilers are designed to run on natural gas G20 and can be converted to run on G25 or G31 gas.

### 5.2.3 Electrical power supply

|                      |                |
|----------------------|----------------|
| Power supply voltage | 230 V AC/50 Hz |
|----------------------|----------------|



**Caution**

Please ensure the polarities shown on the terminals are followed, i.e live (L), neutral (N) and earth (  $\perp$  )

### 5.2.4 Circulation pump

The boiler's water flow rates must be higher than or equal to the specifications in the table below:

Tab.12 Water flow rates in the boiler

|  | Unit        | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|-------------|------------------|------------------|------------------|-------------------|
| Minimum flow rate                              | litres/hour | 800              | 1500             | 2000             | 2250              |
| Working flow rate with the low-loss header kit | litres/hour | 2450             | 3500             | 4600             | 4800              |




**Note**

$\Delta T$ : Temperature difference between the flow water and the return water in the boiler


- 1 Q flow rate (litres/hour)
- 2 H pressure in metres of water column (mWC)
- 3 Operating water flow rate at nominal heat output = 1330 litres/hour where  $\Delta T = 30^\circ C$
- 4 Operating water flow rate at nominal heat output = 2000 litres/hour where  $\Delta T = 20^\circ C$
- 5 Operating water flow rate at nominal heat output = 2660 litres/hour where  $\Delta T = 15^\circ C$

Fig.14 Pressure drops for Sirius two FS 50

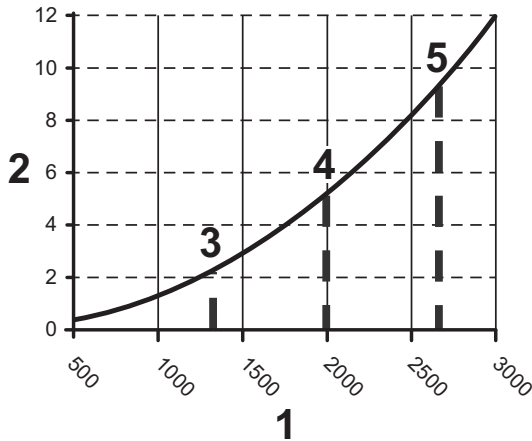

MW-3000007-01


Fig.15 Pressure drops for Sirius two FS 70

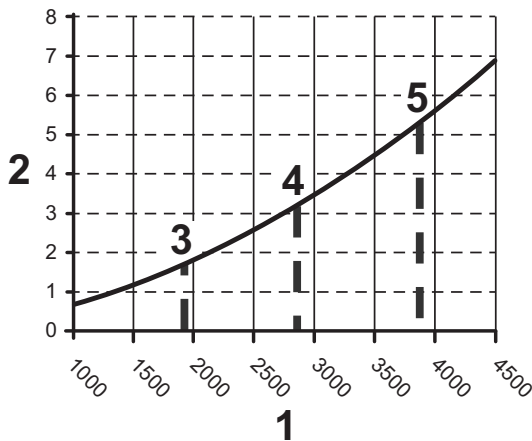

MW-3000008-01




Fig.16 Pressure drops for Sirius two FS 90

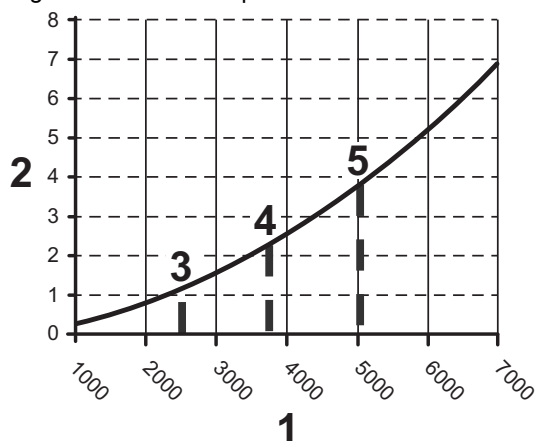

MW-300009-01

- 1 Q flow rate (litres/hour)
- 2 H pressure in metres of water column (mWC)
- 3 Operating water flow rate at nominal heat output = 2510 litres/hour where  $\Delta T = 30^\circ\text{C}$
- 4 Operating water flow rate at nominal heat output = 3760 litres/hour where  $\Delta T = 20^\circ\text{C}$
- 5 Operating water flow rate at nominal heat output = 5020 litres/hour where  $\Delta T = 15^\circ\text{C}$

Fig.17 Pressure drops for Sirius two FS 110

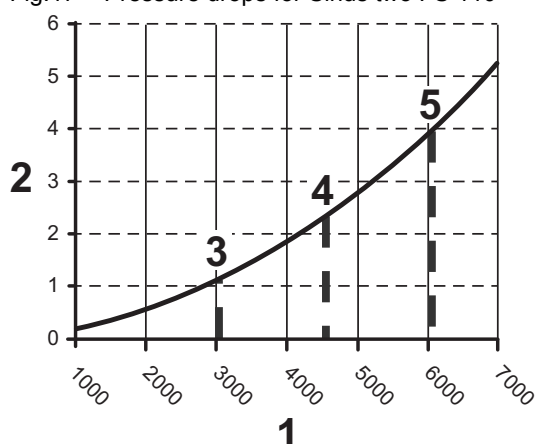

MW-3000010-01

- 1 Q flow rate (litres/hour)
- 2 H pressure in metres of water column (mWC)
- 3 Operating water flow rate at nominal heat output = 3010 litres/hour where  $\Delta T = 30^\circ\text{C}$
- 4 Operating water flow rate at nominal heat output = 4520 litres/hour where  $\Delta T = 20^\circ\text{C}$
- 5 Operating water flow rate at nominal heat output = 6020 litres/hour where  $\Delta T = 15^\circ\text{C}$

### 5.3 Choice of the location

Before mounting the boiler, decide on the ideal position for mounting, bearing in mind any Directives and the dimensions of the appliance.

- Install the boiler on a solid, stable structure capable of bearing the weight of the appliance when full of water and fully equipped.
- When choosing the position for mounting the boiler, bear in mind the authorised position of the combustion gas discharge outlets and the air intake vent.



#### Caution

It is forbidden to store inflammable products and materials in the boiler room or close to the boiler, even temporarily.



#### Caution

- The boiler must be installed in a frost-free environment.
- Make sure there is a connection to the water drainage system close to the boiler to discharge the condensates.

#### 5.3.1 Ventilation

To allow the intake of combustion air, sufficient ventilation must be provided in the boiler room, for which the cross section and position must satisfy the regulations in force in the country in which the boiler is installed:

BS 5440 Part 1 and Part 2:

- For boilers with a nominal output of more than 70 kW: Upper and lower air vents compulsory

BS 6644 and IGEM/UP-10

If the boiler is installed in closed premises, respect the minimum dimensions given in the diagram below. Also allow for openings to obviate the following hazards:

- Accumulation of gas
- Overheating of the premises

Minimum cross section of openings: see BS 5440 Part 1 and Part 2, and BS 6644.

■ **Ventilation to be provided for the boilers**

■ **Ventilation to be provided for boilers with low-loss header (optional)**

Fig.18 Ventilation to be provided for the boilers


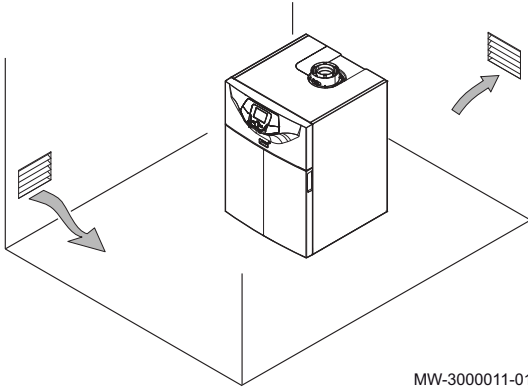


Fig.19 Ventilation to be provided for boilers with low-loss header (optional)

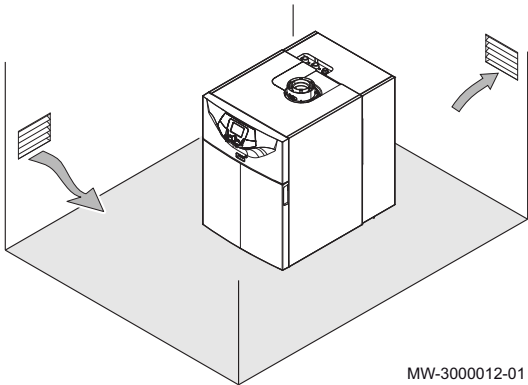

**5.3.2 Overall space needed for the boiler**

To ensure adequate access to the appliance and facilitate maintenance, allow sufficient space around the boiler, according to the information provided.

Fig.20 Space to be allowed for the boilers

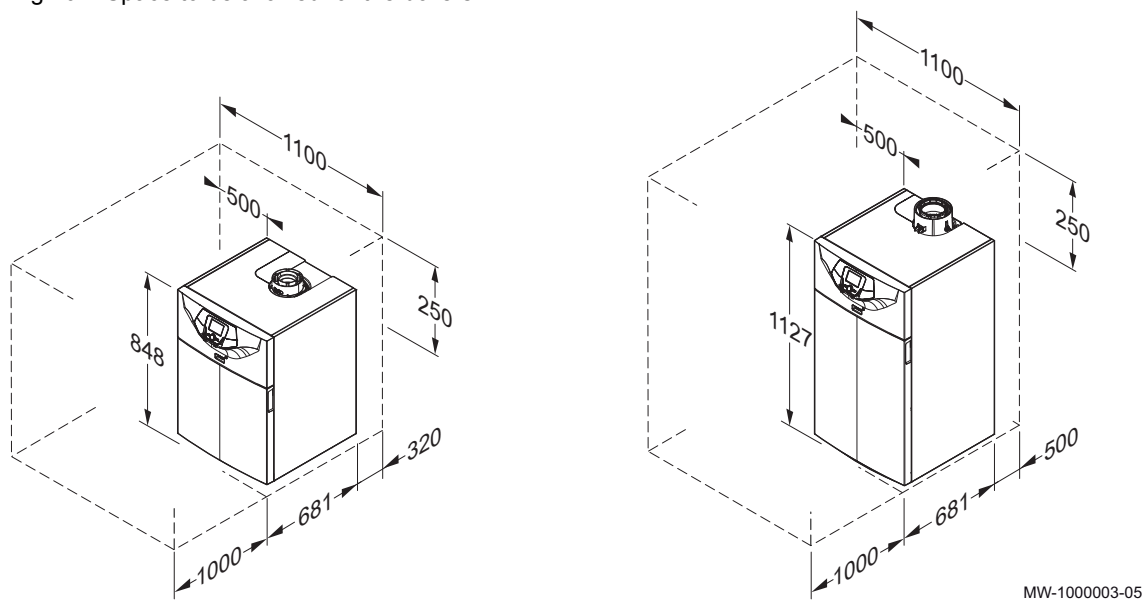


Fig.21 Space to be allowed for boilers equipped with a low-loss header kit


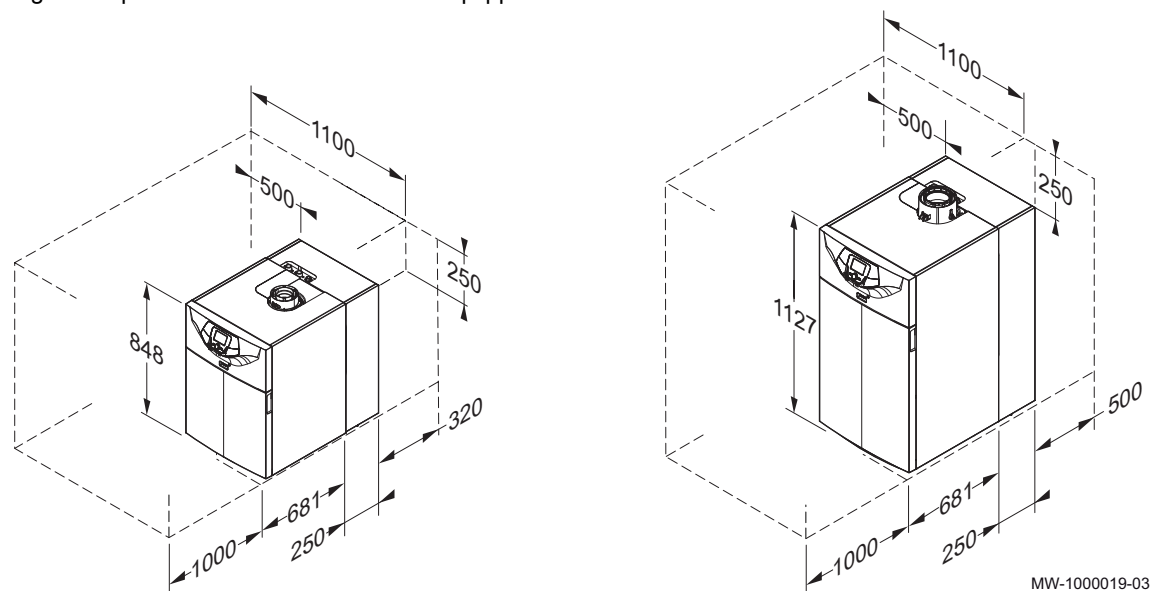


Fig.22 Location of the data plate

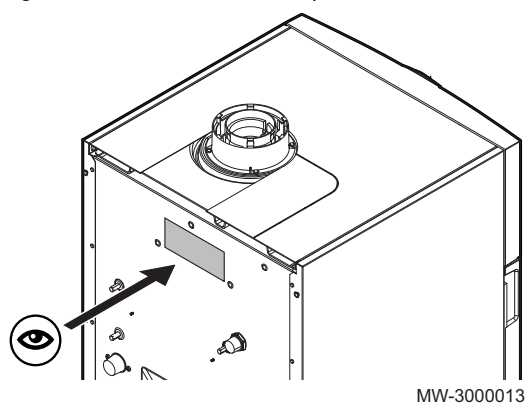

### 5.3.3 Data plate

The data plate is located on the back of the boiler. The data plate provides important information regarding the appliance:

- Serial number
- Model
- Gas category
- etc.



**Caution**

A second data plate is provided in the instructions bag. The second data plate should be affixed to a visible part of the boiler when installation has been completed. If the boiler is equipped with a low-loss header kit, a position on the side of the boiler is preferable.

**5.3.4 Selecting the position for the outside temperature sensor (optional)**

It is important to select a position that allows the sensor to measure the outside conditions correctly and effectively.

■ **Recommended positions**

- On a façade of the area to be heated, on the north if possible.
- Half way up the wall of the area to be heated.
- Under the influence of changes in the weather.
- Protected from direct sunlight.
- Easy to access.

- 1 Recommended position
- 2 Possible position
- H Inhabited height controlled by the sensor
- Z Inhabited area controlled by the sensor

■ **Positions to be avoided**

Fig.23 Recommended positions for the outside sensor


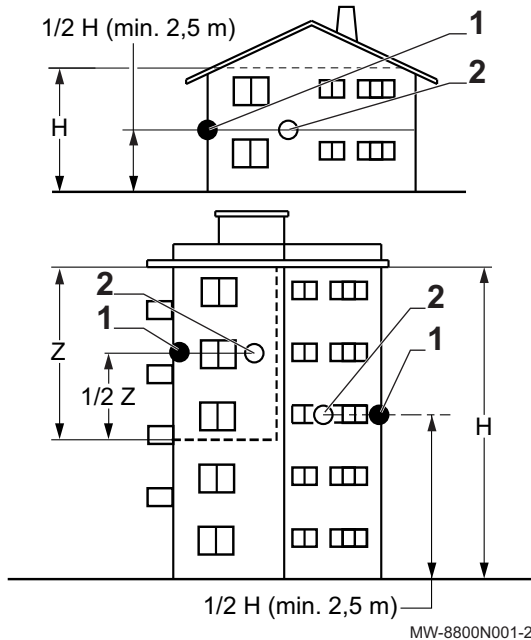



Fig.24 Positions to be avoided for the outside sensor

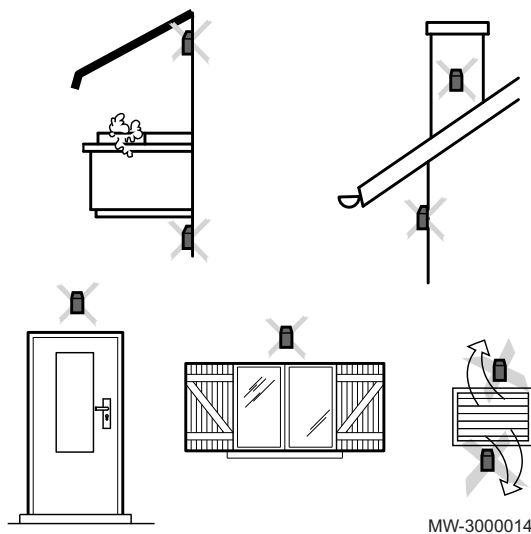

- Masked by part of the building (balcony, roof, etc.).
- Close to a disruptive heat source (sun, chimney, ventilation grid, etc.).

## 5.4 Transport

Fig.25 Transport precautions

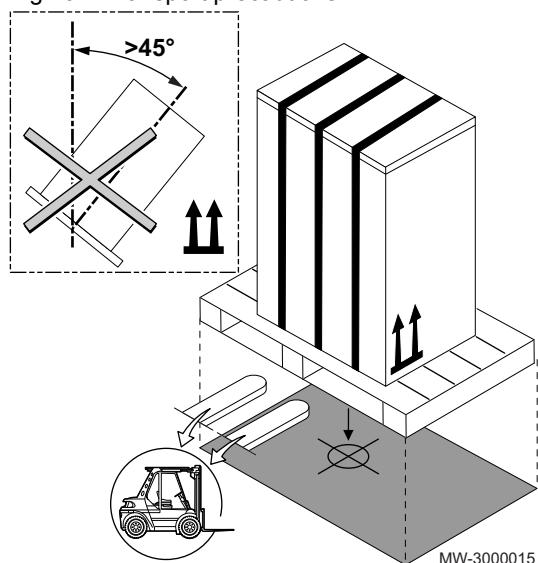


### Caution

- Have at least two people standing by. Follow the usual handling techniques and use adequate safety equipment.
- Handle the appliance with gloves.
- Transport the pallet carrying the appliance using a pallet truck, a forklift truck or a 4-wheel removals cart.
- Do not use the top cover of the appliance for transport lifting.
- Transport the appliance vertically.


## 5.5 Unpacking and initial preparation

Fig.26 Unpacking

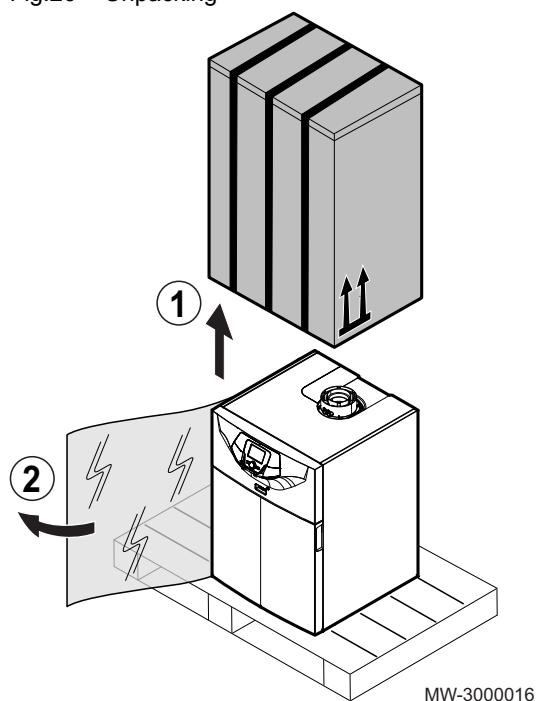

1. Remove the cardboard packaging.
2. Remove the plastic protection and the polystyrene cover.

Fig.27 Preparation

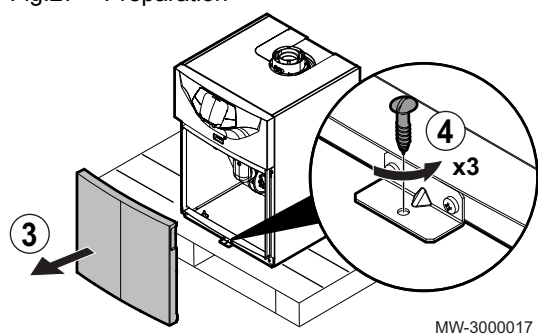

3. Remove the front panel by pulling firmly on the notches provided.
4. Remove the screws fixing the boiler to the pallet.
5. Take the condensates hose that you will find in the boiler and connect it to the condensates discharge.
6. Put the boiler in its intended position.




### Caution

- Moving the boiler is a job for two people. Follow the usual handling techniques and use adequate safety equipment.
- 7. Level the boiler using the adjustable feet.

## 5.6 Connecting diagrams

### 5.6.1 Connection diagram: 1 boiler + 1 direct circuit + 1 domestic hot water tank

Fig.28 1 boiler + 1 direct circuit + 1 domestic hot water tank

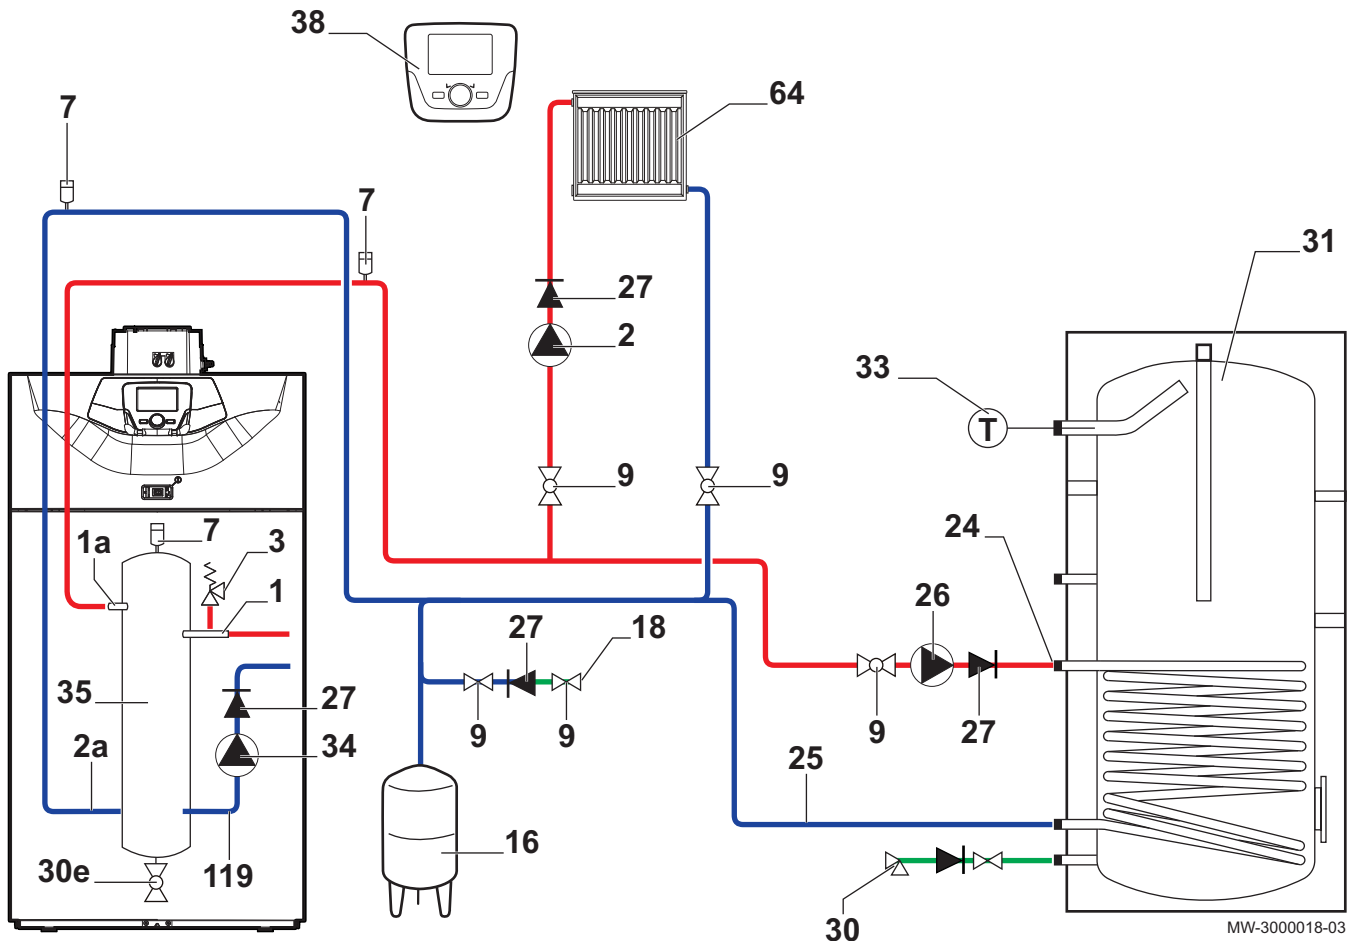


MW-3000018-03

- |    |  |     |                                       |
|----|--|-----|---------------------------------------|
| 1  | Boiler flow                                      | 26  | DHW load pump                         |
| 1a | Heating flow direct circuit                      | 27  | Non-return valve                      |
| 2  | Heating pump                                     | 30  | Calibrated and sealed safety unit     |
| 2a | Heating return direct circuit                    | 30e | Drain valve                           |
| 3  | 4 bar (0.4 MPa) safety valve                     | 31  | Independent domestic hot water tank   |
| 7  | Automatic air vent                               | 33  | Domestic hot water temperature sensor |
| 9  | Isolation valve                                  | 34  | Modulating boiler pump                |
| 16 | Closed expansion vessel                          | 35  | Low-loss header (accessory)           |
| 18 | Heating circuit fill point                       | 38  | Room temperature sensor               |
| 24 | Domestic hot water tank exchanger primary inlet  | 64  | Direct heating circuit                |
| 25 | Domestic hot water tank exchanger primary outlet | 119 | Boiler return                         |

### 5.6.2 Connection diagram: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

Fig.29 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

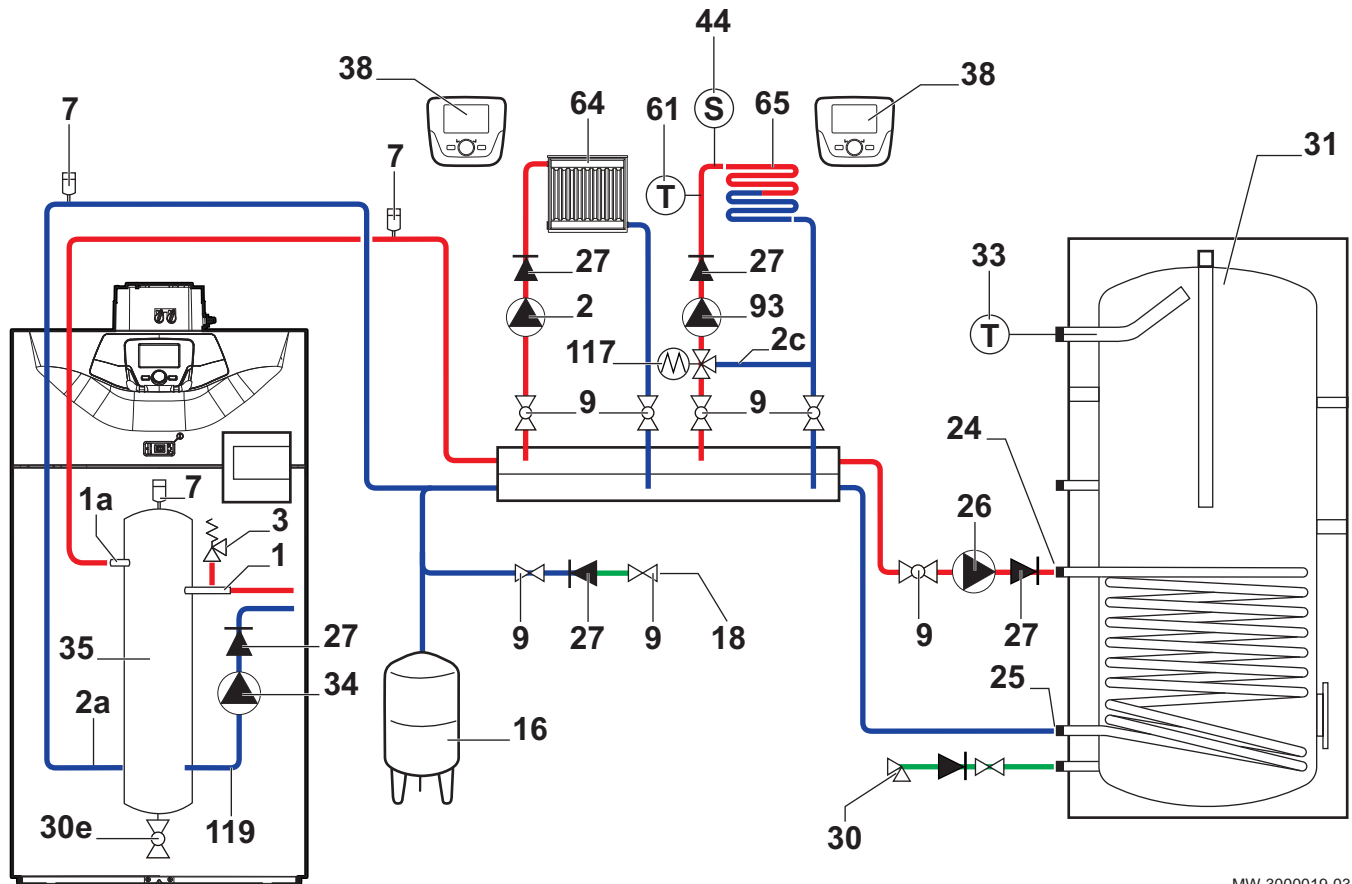

MW-3000019-03

- |     |  |     |  |
|-----|--|-----|--|
| 1   | Boiler flow                                      | 33  | Domestic hot water temperature sensor  |
| 1a  | Heating flow                                     | 34  | Modulating boiler pump   |
| 2   | Heating pump                                     | 35  | Low-loss header (optional)   |
| 2a  | Heating return                                   | 38  | Remote control with or without room temperature sensor   |
| 2c  | Three-way valve bypass                           | 44  | Safety device to safeguard against overheating of the underfloor heating system, in accordance with prevailing regulations |
| 3   | 4 bar (0.4 MPa) safety valve                     | 61  | Thermometer  |
| 7   | Automatic air vent                               | 64  | Direct heating circuit (example: radiators)  |
| 9   | Isolation valve                                  | 65  | Heating circuit with mixing valve, may be low temperature heating circuit (underfloor heating or radiators)                |
| 16  | Closed expansion vessel                          | 93  | Heating pump for underfloor heating circuit  |
| 18  | Heating circuit fill point                       | 117 | Three-way mixing valve   |
| 24  | Domestic hot water tank exchanger primary inlet  | 119 | Boiler return  |
| 25  | Domestic hot water tank exchanger primary outlet |     |  |
| 26  | DHW load pump                                    |     |  |
| 27  | Non-return valve                                 |     |  |
| 30  | Calibrated and sealed safety unit                |     |  |
| 30e | Drain valve                                      |     |  |
| 31  | Independent domestic hot water tank              |     |  |




For more information, see

Electrical connection: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 48

### 5.6.3 Connection diagram: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

Fig.30 Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

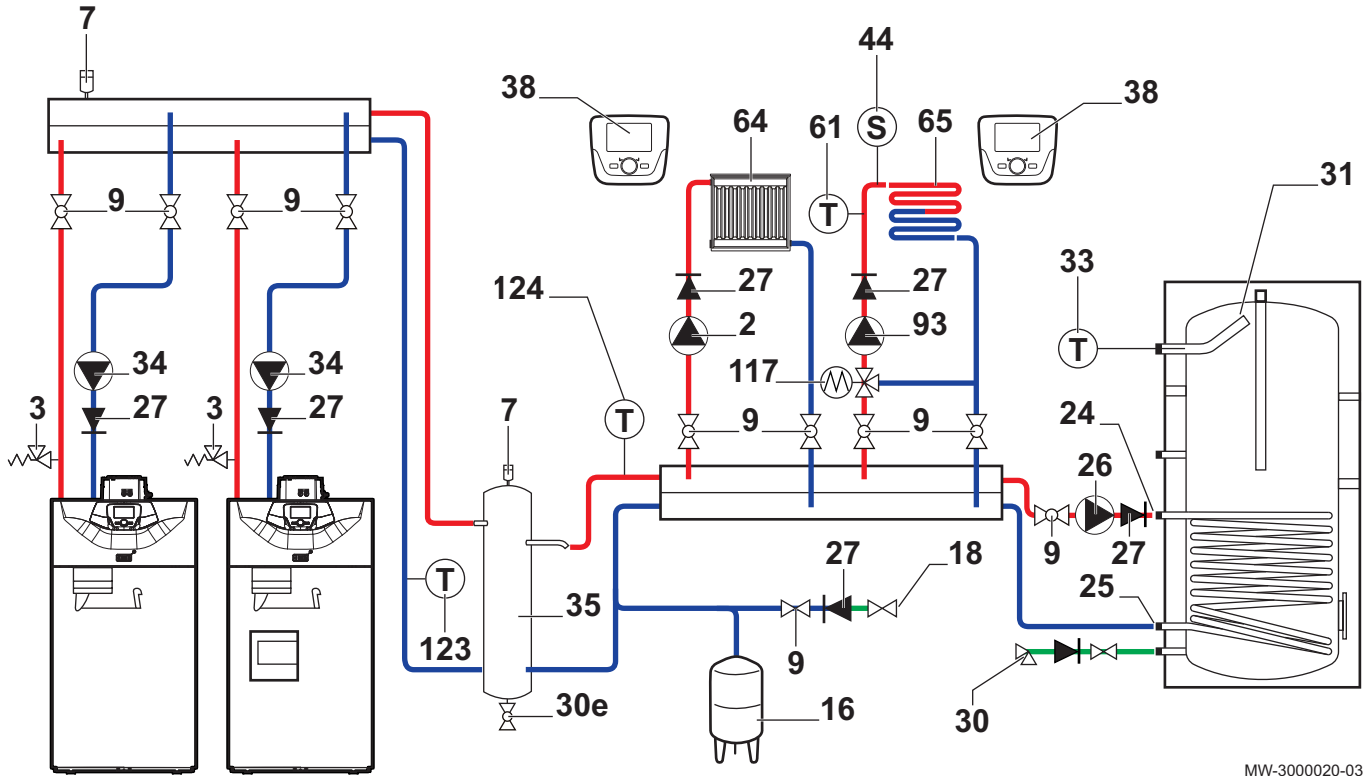

MW-3000020-03

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>2 Heating pump direct circuit</li> <li>3 4 bar (0.4 MPa) safety valve</li> <li>7 Automatic air vent</li> <li>9 Isolation valve</li> <li>16 Closed expansion vessel</li> <li>18 Heating circuit fill point</li> <li>24 Domestic hot water tank exchanger primary inlet</li> <li>25 Domestic hot water tank exchanger primary outlet</li> <li>26 DHW load pump</li> <li>27 Non-return valve</li> <li>30 Calibrated and sealed safety unit</li> <li>30e Drain valve</li> <li>31 Independent domestic hot water tank</li> <li>33 Domestic hot water temperature sensor</li> <li>34 Modulating boiler pump</li> </ul> | <ul style="list-style-type: none"> <li>35 Low-loss header</li> <li>38 Remote control with or without room temperature sensor</li> <li>44 Safety device to safeguard against overheating of the underfloor heating system, in accordance with prevailing regulations</li> <li>61 Thermometer</li> <li>64 Direct heating circuit (example: radiators)</li> <li>65 Heating circuit with mixing valve, may be low temperature heating circuit (underfloor heating or radiators)</li> <li>93 Heating pump for underfloor heating circuit</li> <li>117 Three-way mixing valve</li> <li>123 Cascade return sensor</li> <li>124 Cascade flow sensor</li> </ul> |
|---|--|






**For more information, see**

Electrical connection: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 49

#### 5.6.4 Connection diagram: controlling a boiler in 0-10 V

Fig.31 Boiler in 0-10 V

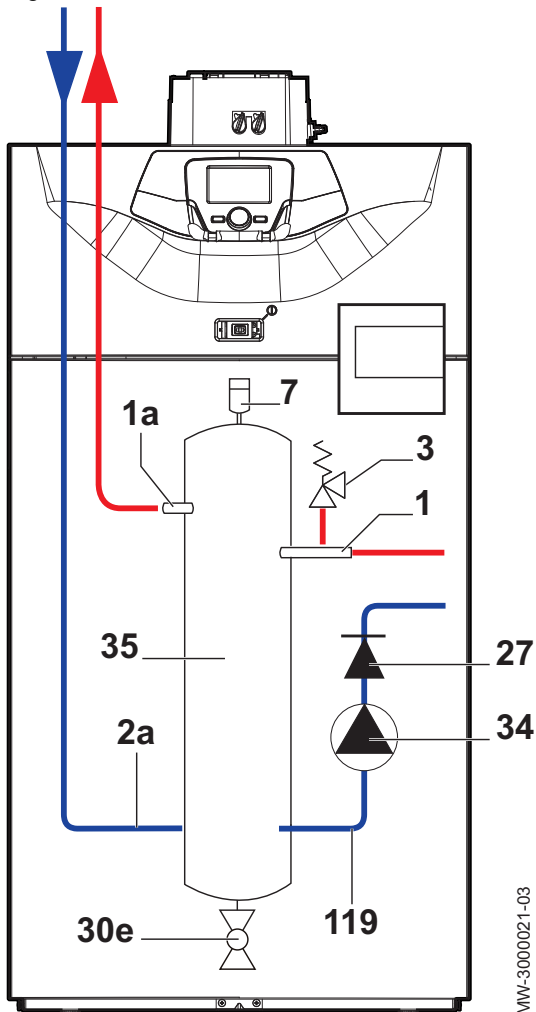

- 1 Boiler flow
- 1a Heating flow
- 2a Heating return
- 3 4 bar (0.4 MPa) safety valve
- 7 Automatic air vent
- 27 Non-return valve
- 30e Drain valve
- 34 Modulating boiler pump
- 35 Low-loss header (optional)
- 119 Boiler return

MW-3000021-03

## 6 Installation

### 6.1 General

---

Installation must be carried out in accordance with the prevailing regulations, codes of practice and the recommendations in this manual.


### 6.2 Preparation

---

#### 6.2.1 Accessing the internal boiler components


---

Fig.32 Removing the front panel

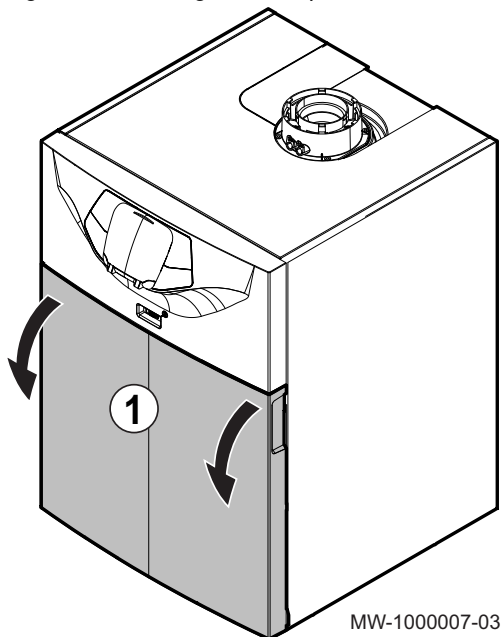


1. Remove the front panel by pulling firmly on the notches provided.

Fig.33 Tilting the panel holding the control panel

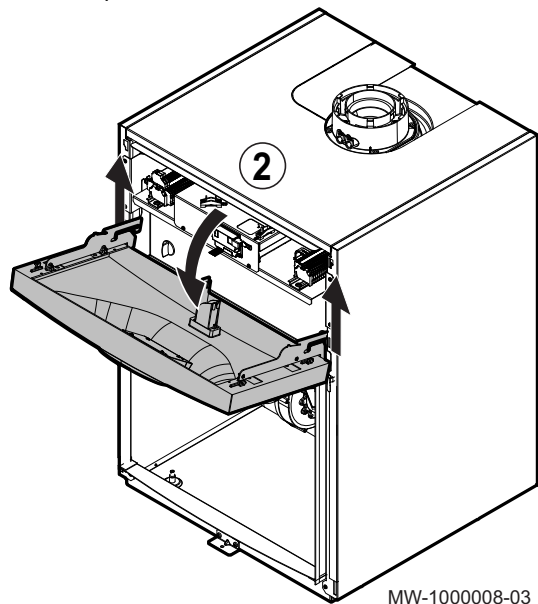

2. Lift and tilt the panel holding the control panel


Fig.34 Earth wire

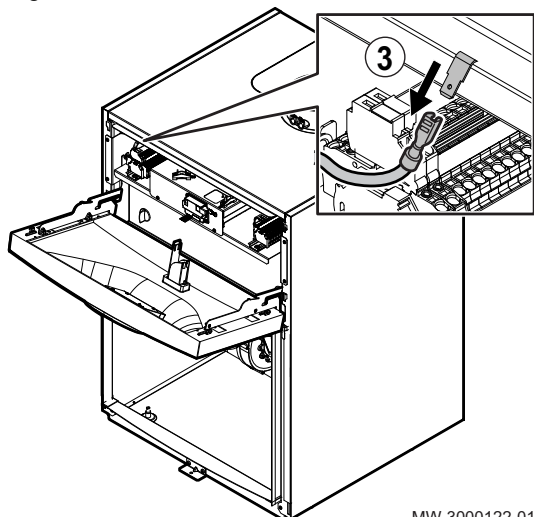

MW-3000122-01

3. Disconnect the earth wire.


Fig.35 Removing the top panel

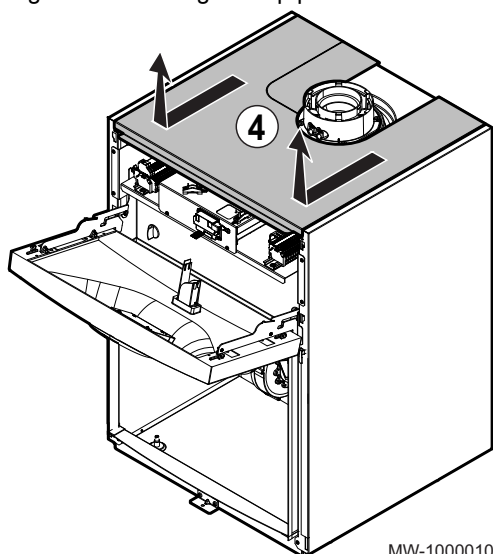

MW-1000010-05

4. Pull and lift the top panel.


Fig.36 Unhooking the panel holding the control panel

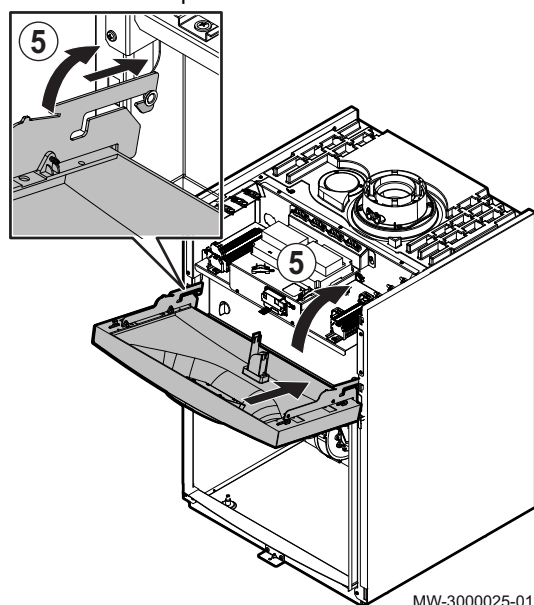

MW-3000025-01

5. Unhook the panel holding the control panel to place it on the boiler.

Fig.37 Location of the disassembly instructions

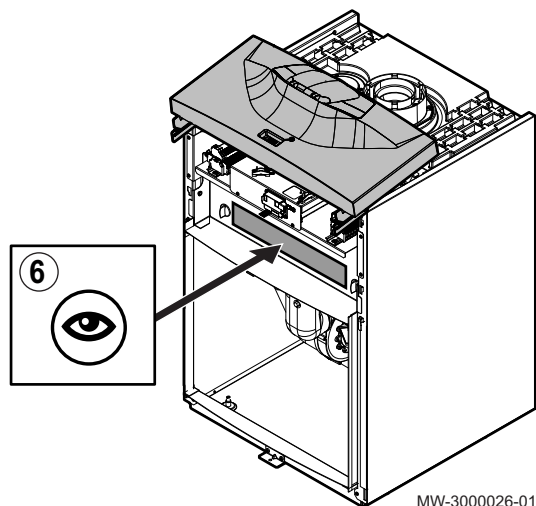

6. Remove the detachable panel if necessary.



**See**  
The disassembly instructions can be found on the detachable panel.

### 6.3 Water connections

#### 6.3.1 Connection of the heating circuit

Abide by the mountings shown in the hydraulic diagrams.



**Caution**

- The heating pipe must be mounted in accordance with the provisions applicable.
- If installing isolation valves, position the fill/drain valve and the expansion vessel between the isolation valves and the boiler.
- Always install a safety valve calibrated to 4 bar on the heating circuit. The safety valve can be connected to a venting pot. The safety valve must not be used to drain the heating circuit.



**See**


In the case of an assembly with a low-loss header, use the assembly instructions for the low-loss header.  
If using a cascade kit, use the assembly instructions for the cascade kit.



**Note**


The pipes are not provided.

Fig.38 Connecting the "heating circuit flow" pipe

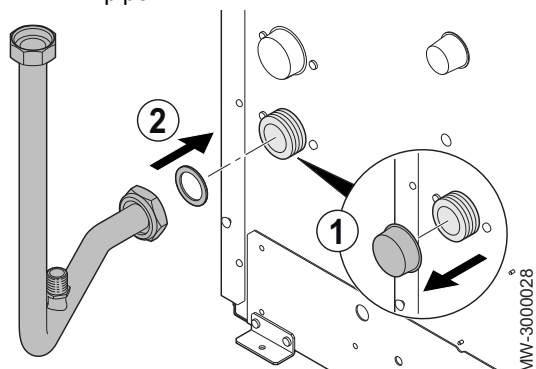


1. Remove the anti-dust plug located on the boiler's "heating flow" outlet.
2. Connect the "heating circuit flow" pipe to the boiler's "heating flow" outlet.

Fig.39 Mounting the fill and drain valves

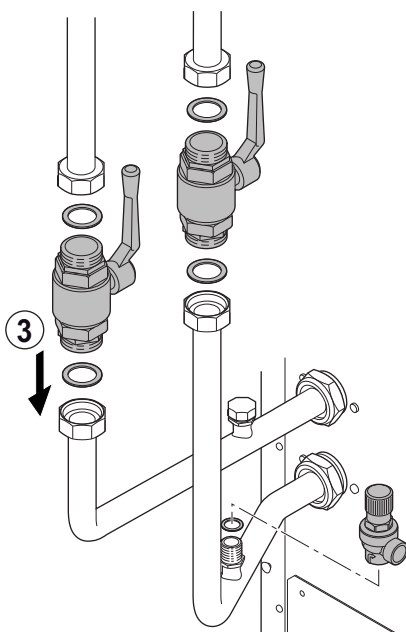


MW-3000029-03

Fig.40 Connecting the "heating circuit return" pipe

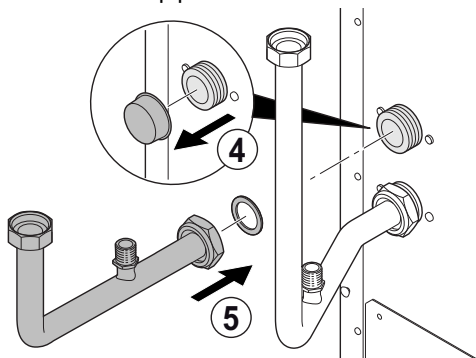

MW-3000030

Fig.41 Mounting the circulation pump

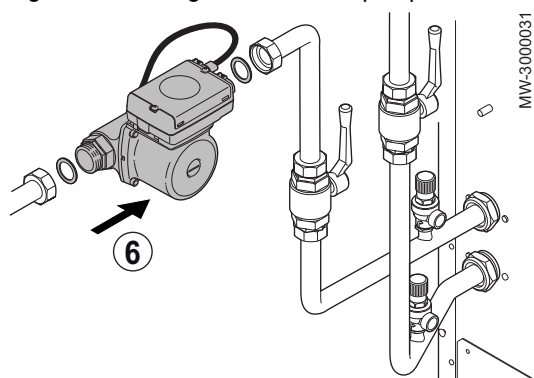

MW-3000031

3. Mount the fill and drain valves to the boiler's inlet and outlet (valves not provided).

**Note**

To facilitate maintenance work, we recommend mounting an isolation valve on the heating flow and return pipes.

**Caution**

Position the safety valve between the boiler and the isolation valve.

4. Remove the anti-dust plug on the "heating return" inlet.
5. Connect the "heating circuit return" pipe to the boiler's "heating return" inlet.

6. Mount the circulation pump on the "heating return" pipe (circulation pump not provided).

### 6.3.2 Connecting the expansion vessel

1. Determine the volume of the expansion vessel according to the volume of water in the heating circuit.
2. Connect the expansion vessel to the heating circuit return pipe.

#### ■ Volume of the expansion vessel

Terms and conditions of validity:

- Safety valve calibrated to 4 bar (0.4 MPa).
- Average water temperature: 70°C.
- Heating circuit flow temperature: 80°C.
- Heating circuit return temperature: 60°C.
- Filling pressure in the system lower than or equal to the initial pressure in the expansion vessel.

**Note**

- The expansion vessel complies with the BS EN 13831 standard.
- The size of the expansion vessel complies with the BS 7074 standard, part 1.
- Abide by the regulations on filling the heating circuits with water.
  - BS 7074
  - BS 6644
  - BS EN 12828

**Warning**

Only qualified professionals are authorised to work on the boiler and the heating installation.

**6.3.3 Connecting the condensate discharge pipe**

The condensate discharge pipe is located inside the boiler.


- Do not block the condensate discharge pipe.
- Set the discharge pipe at a gradient of at least 30 mm per metre, maximum horizontal length 5 metres.
- Do not drain condensation water into a roof gutter.
- Connect the condensate discharge pipe in accordance with prevailing standards.
- It is preferable to use the condensate neutralisers recommended by the manufacturer of the boiler.

1. Connect a plastic hose to the condensate discharge outlet (DN18).
2. Insert the other end of the hose into a waste water discharge outlet.

**For more information, see**

Unpacking and initial preparation, page 29

Fig.42 Mounting the hose on the condensate discharge outlet

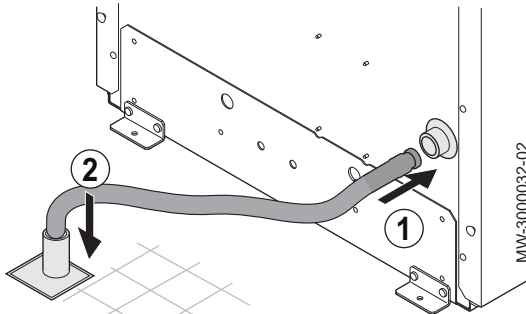**6.4 Gas connection****Warning**

Close the main gas valve before starting work on the gas pipes.

The gas pipes are not provided.

**Danger**

The diameters of the pipes must be defined in accordance with the standards in force in your country.

1. Remove the anti-dust plug located on the boiler's gas inlet.
2. Mount a gas stop valve (not provided) on the boiler's gas inlet.
3. Connect the gas inlet pipe to the gas stop valve.

**Caution**

- Ensure that there is no dust in the gas pipe.
- Connect the gas pipe in accordance with prevailing standards and regulations.



For more information, see  
Gas supply, page 23

## 6.5 Air supply/flue gas connections

### 6.5.1 Classification

Tab.13 Configurations and recommendations for the flue system

| Configuration                      | Description   |       |                                       |                  |     |                  |     |                  |     |                   |     |
|------------------------------------|---|-------|---------------------------------------|------------------|-----|------------------|-----|------------------|-----|-------------------|-----|
| B <sub>23</sub> – B <sub>23P</sub> | <ul style="list-style-type: none"> <li>• Connection to a chimney using a connection kit (single pipe in a flue, combustion air taken from the boiler room).</li> <li>• The maximum pressure drop in the pipes <math>\Delta P</math> must not exceed the values given in the table below. The pipes must be certified for this type of use and for a temperature in excess of 100°C.</li> </ul> <p>Tab.14 Maximum pressure drop</p> <table border="1"> <thead> <tr> <th>Model</th> <th>Maximum pressure drop <math>\Delta P</math> (Pa)</th> </tr> </thead> <tbody> <tr> <td>Sirius two FS 50</td> <td>200</td> </tr> <tr> <td>Sirius two FS 70</td> <td>200</td> </tr> <tr> <td>Sirius two FS 90</td> <td>200</td> </tr> <tr> <td>Sirius two FS 110</td> <td>200</td> </tr> </tbody> </table>   | Model | Maximum pressure drop $\Delta P$ (Pa) | Sirius two FS 50 | 200 | Sirius two FS 70 | 200 | Sirius two FS 90 | 200 | Sirius two FS 110 | 200 |
| Model                              | Maximum pressure drop $\Delta P$ (Pa)   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 50                   | 200   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 70                   | 200   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 90                   | 200   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 110                  | 200   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| C <sub>13</sub>                    | <ul style="list-style-type: none"> <li>• Air/flue gas connection using concentric pipes to a horizontal terminal (so-called forced flue).</li> <li>• The terminal parts of the singled-up discharge pipe must be scheduled inside a 50 cm square.</li> </ul>  |       |                                       |                  |     |                  |     |                  |     |                   |     |
| C <sub>33</sub>                    | <ul style="list-style-type: none"> <li>• Air/flue gas connection using concentric pipes to a vertical terminal (roof outlet).</li> <li>• The terminal parts of the singled-up discharge pipe must be scheduled inside a 50 cm square.</li> </ul>  |       |                                       |                  |     |                  |     |                  |     |                   |     |
| C <sub>43</sub>                    | <ul style="list-style-type: none"> <li>• Air/flue gas connection to a collective flue for sealed boilers.</li> <li>• The chimney or flue gas pipe must be suitable for such use.</li> </ul>   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| C <sub>53</sub>                    | <ul style="list-style-type: none"> <li>• Separate air/flue gas connection using a bi-flow adapter.</li> <li>• The terminal parts of combustion air intake and combustion product discharge pipes must not be planned on opposite walls of the building.</li> </ul>  |       |                                       |                  |     |                  |     |                  |     |                   |     |
| C <sub>63</sub>                    | <ul style="list-style-type: none"> <li>• The maximum pressure drop in the pipes <math>\Delta P</math> must not exceed the values given in the table below. The pipes must be certified for this type of use and for a temperature of more than 100°C. The terminal part of the flue gas pipe must be certified as complying with the EN 1856-1 Standard.</li> <li>• If installing discharge and intake pipes not supplied by Potterton, these must be certified for the type of use scheduled and present a maximum pressure drop in line with the values given in the table below.</li> </ul> <p>Tab.15 Maximum pressure drop</p> <table border="1"> <thead> <tr> <th>Model</th> <th>Maximum pressure drop <math>\Delta P</math> (Pa)</th> </tr> </thead> <tbody> <tr> <td>Sirius two FS 50</td> <td>270</td> </tr> <tr> <td>Sirius two FS 70</td> <td>270</td> </tr> <tr> <td>Sirius two FS 90</td> <td>320</td> </tr> <tr> <td>Sirius two FS 110</td> <td>370</td> </tr> </tbody> </table> | Model | Maximum pressure drop $\Delta P$ (Pa) | Sirius two FS 50 | 270 | Sirius two FS 70 | 270 | Sirius two FS 90 | 320 | Sirius two FS 110 | 370 |
| Model                              | Maximum pressure drop $\Delta P$ (Pa)   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 50                   | 270   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 70                   | 270   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 90                   | 320   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| Sirius two FS 110                  | 370   |       |                                       |                  |     |                  |     |                  |     |                   |     |
| C <sub>83</sub>                    | <ul style="list-style-type: none"> <li>• Flue gas connection to a collective flue for sealed boilers. The air supply is individual via a terminal coming from outside the building.</li> <li>• The chimney or flue gas pipe must be suitable for such use.</li> </ul>   |       |                                       |                  |     |                  |     |                  |     |                   |     |



**Caution**

The use of any and all other components is prohibited.



**Note**

- Only original components are authorised for connection to the boiler and for the terminal.
- The clear section must comply with the standard.
- The chimney must be swept before installing the discharge flue.



**Caution**

**Ensure that the flue gas discharge pipes are securely attached to the wall with suitable retaining flanges to prevent any damage and guarantee the tightness of every gasket in the circuit.**

Refer to the prevailing British standard BS5440 - part 1 on flue retaining systems.





**Caution**

**The minimum gradient of the condensates discharge pipe from the boiler to the waste water discharge must be 1 cm per linear metre.**



### 6.5.2 Coaxial pipes

Fig.43 Specifications of the coaxial pipes for Sirius two FS 50 and Sirius two FS 70

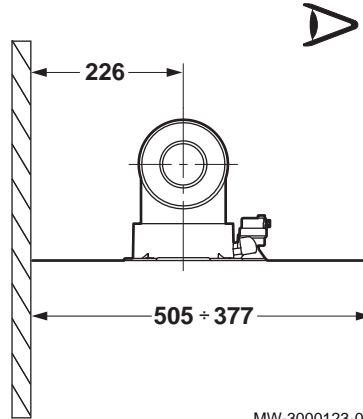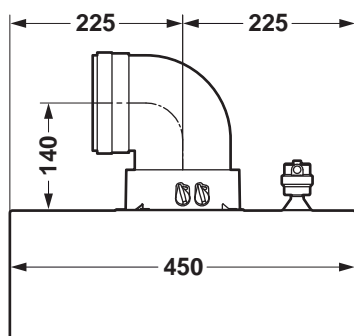

MW-3000123-01

Fig.44 Specifications of the coaxial pipes for Sirius two FS 90 and Sirius two FS 110

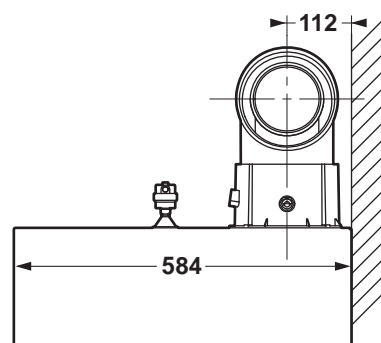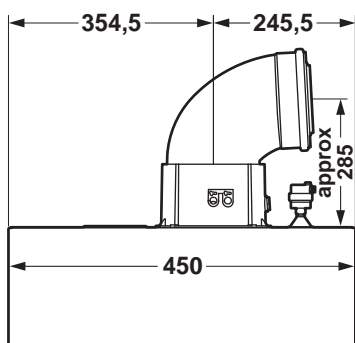

MW-3000124-02

This type of pipe is used to discharge exhaust gases and draw in combustion air, whether outside the building or in the flue gas pipes. The 90° coaxial elbow is used to connect the boiler to the discharge/intake pipes in every direction due to the 360° rotation option. It can also be used as an extra elbow in combination with the coaxial pipe or the 45° elbow. If discharging to the outside, the discharge/intake pipe must stick out of the wall by at least 18 mm to allow fitting of the aluminium rosette and its sealing unit and thus prevent any infiltration of water.

- Insertion of a 90° elbow reduces the total length of the pipe by 1 metres.
- Insertion of a 45° elbow reduces the total length of the pipe by 0.5 metres.



- The first 90° elbow is not taken into account in calculating the maximum length available.

### 6.5.3 Twin pipe flue - not offered by Potterton Commercial, for information only

Fig.45 Specifications of the twin pipe flue for Sirius two FS 50 and Sirius two FS 70


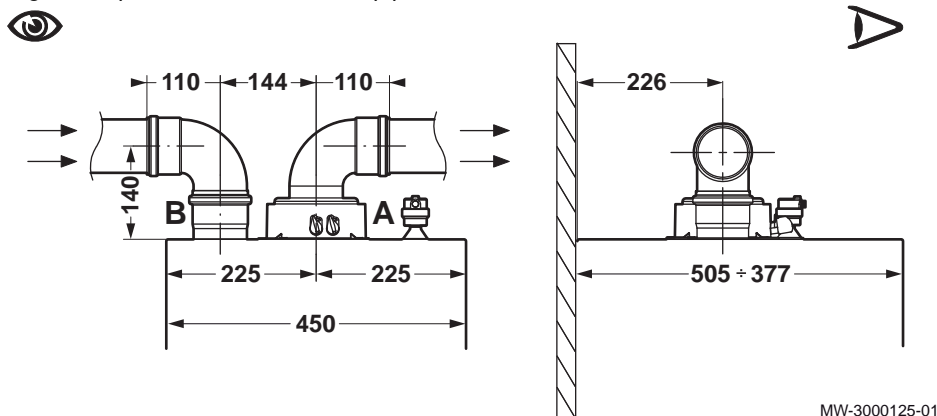


Fig.46 Specifications of the twin pipe flue for Sirius two FS 90 and Sirius two FS 110

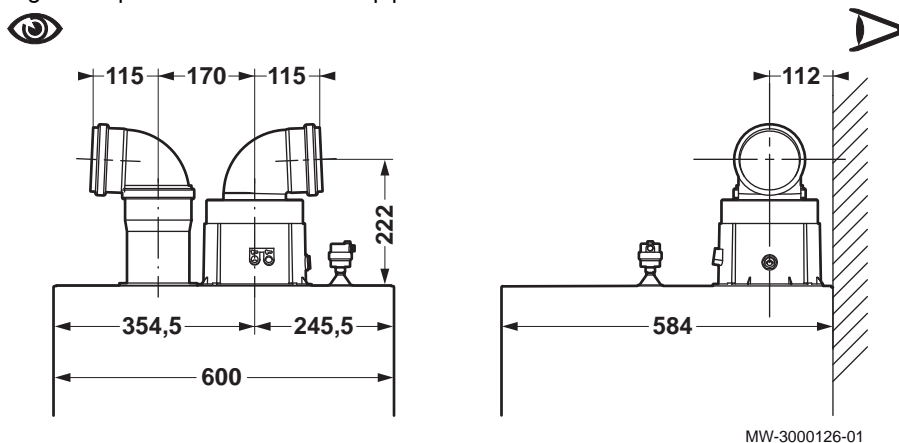

This type of pipe is used to discharge exhaust gases either to the outside of the building or into the individual flue gas pipes. Combustion air can be taken in from zones different from the discharge zones. The two-way accessory includes a discharge fitting Ø 110 mm and an air intake fitting Ø 110 mm.

The 90° elbow is used to connect the boiler to the discharge and intake pipes according to requirements. It can also be used as an extra elbow to couple to the pipe or to the 45° elbow.

- Insertion of a 90° elbow reduces the total length of the pipe by 0.5 metres.
- Insertion of a 45° elbow reduces the total length of the pipe by 0.25 metres.
- The first 90° elbow is not taken into account in calculating the maximum length available.

### 6.5.4 Pipes in cascade - not currently offered by Potterton Commercial, for information only

These types of pipes are used to discharge the combustion products from several boilers interlinked in cascade via a shared flue gas collector. The collector must be used solely to connect the boilers to the flue gas pipe. The diameters available are 150 mm and 200 mm.

Tab.16 Flue system for boilers in cascade

| Boiler model      | Maximum number of boilers in cascade |                              |                              |
|-------------------|--------------------------------------|------------------------------|------------------------------|
|                   | Diameter 125 mm (200 kW max)         | Diameter 160 mm (250 kW max) | Diameter 200 mm (500 kW max) |
| Sirius two FS 50  | 4                                    | 5                            | 10                           |
| Sirius two FS 70  | 2                                    | 3                            | 7                            |
| Sirius two FS 90  | /                                    | 2                            | 5                            |
| Sirius two FS 110 | /                                    | 2                            | 4                            |



**Caution**

For this type of extraction, each boiler must be fitted with a flue gas valve (non-return valve) Ø 110/110 mm.



**Caution**

The calculation of the length of the flue gas pipe must be made by a qualified technician during the system design phase, in accordance with the requirements of the prevailing standards.

**6.5.5 Lengths of the air/flue gas pipes**

■ **Configuration B<sub>23p</sub>**

- Ventilation of the premises: in accordance with the standard NFP 45 – 204 or DTU 61.1
- Lengths L1, L2 and L3 are obtained with Centrovec pipes covered by CE marking and the TAD Technical Application Directive.

Fig.47 Flexible flue gas system B<sub>23p</sub>

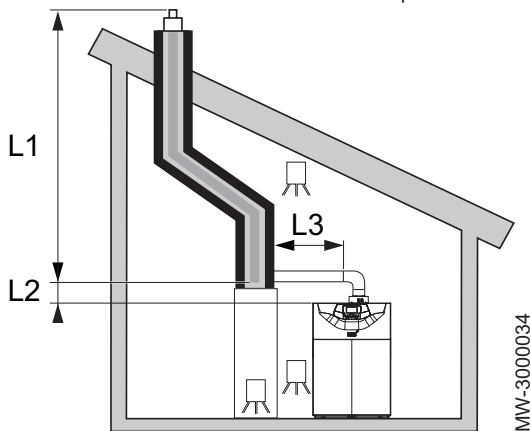


Fig.48 Rigid flue gas system B<sub>23p</sub>

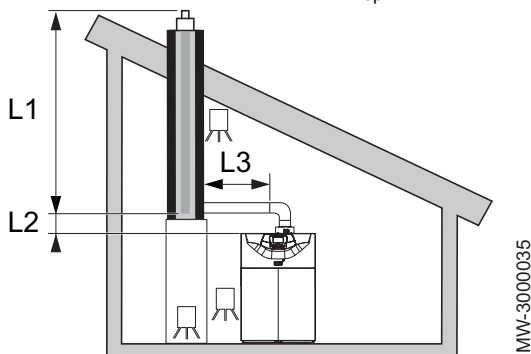
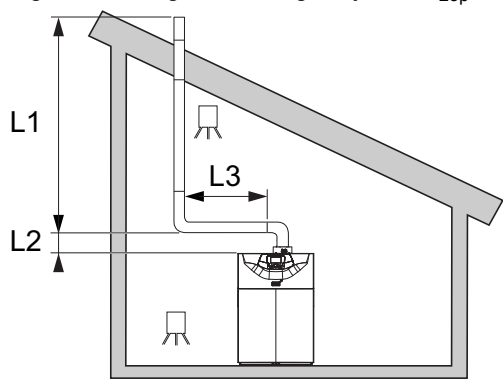


Fig.49 Through-roof flue gas system B<sub>23p</sub>**Note**

For B<sub>23p</sub> configurations, the lengths given in the tables are valid for horizontal pipes with a maximum length of 1 metre. For each additional metre of horizontal pipe, subtract 1.2 m from the vertical length  $L_{max}$ .

Tab.17 Flue gas system connection type B<sub>23p</sub>


| Arrangement      | Configuration      | Unit | Sirius two FS 50 |       | Sirius two FS 70 |       | Sirius two FS 90 |       | Sirius two FS 110 |       |       |
|------------------|--------------------|------|------------------|-------|------------------|-------|------------------|-------|-------------------|-------|-------|
|                  |                    |      | Ø 80             | Ø 110 | Ø 80             | Ø 110 | Ø 110            | Ø 125 | Ø 110             | Ø 125 | Ø 160 |
| L3<2m + 2 elbows | (L1 + L2) rigid    | m    | 20               | 56    | 8                | 56    | 20               | 56    | 56                | 56    | –     |
| L3<2m + 2 elbows | (L1 + L2) flexible | m    | 15               | 56    | 6                | 38    | –                | 21    | 15                | –     | –     |
| L3<5m + 2 elbows | (L1 + L2) rigid    | m    | –                | 56    | –                | 56    | 24               | 56    | –                 | 43    | 56    |
| L3<5m + 2 elbows | (L1 + L2) flexible | m    | –                | 56    | –                | 38    | 13               | –     | –                 | –     | –     |

### ■ Configuration C<sub>13</sub>

**Note**

Pipes subject to technical evaluation 14 08–1289.

Fig.50 Maximum length of the connections

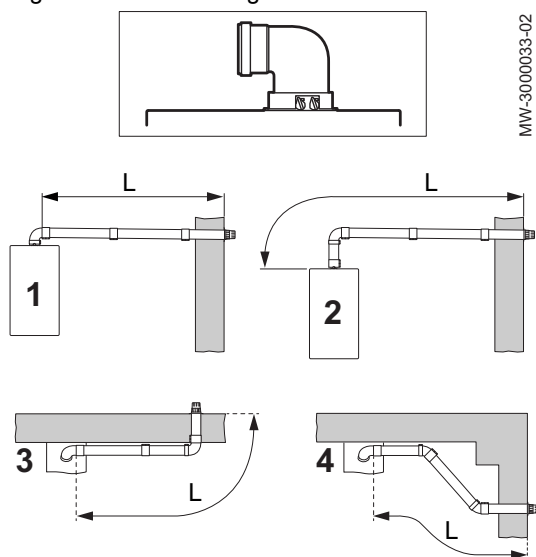
Tab.18 Maximum length for configuration C<sub>13</sub>

| Configuration | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|---------------|------|------------------|------------------|------------------|-------------------|
|               |      | Ø 80 / Ø 125     | Ø 80 / Ø 125     | Ø 110 / Ø 160    | Ø 110 / Ø 160     |
| 1             | m    | L<10 m           | L<10 m           | L<10 m           | L<10 m            |
| 2             | m    | L<10 m           | L<10 m           | L<10 m           | L<10 m            |
| 3             | m    | L<9 m            | L<9 m            | L<9 m            | L<9 m             |
| 4             | m    | L<9 m            | L<9 m            | L<9 m            | L<9 m             |


■ Configuration C<sub>33</sub>

**i** Note  
Pipes subject to technical evaluation 14 08-1289.

Fig.51 Maximum length of the connections

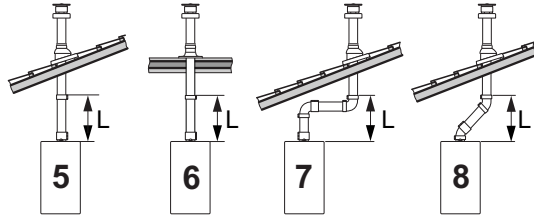

Tab.19 Maximum length for configuration C<sub>33</sub>

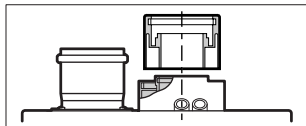


MW-3000172-01

| Configuration | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|---------------|------|------------------|------------------|------------------|-------------------|
|               |      | Ø 80 / Ø 125     | Ø 80 / Ø 125     | Ø 110 / Ø 160    | Ø 110 / Ø 160     |
| 5             | m    | L<10 m           | L<10 m           | L<10 m           | L<10 m            |
| 6             | m    | L<10 m           | L<10 m           | L<10 m           | L<10 m            |
| 7             | m    | L<8 m            | L<8 m            | L<8 m            | L<8 m             |
| 8             | m    | L<9 m            | L<9 m            | L<9 m            | L<9 m             |

■ Configuration C<sub>53</sub>

**i** Note  
Pipes subject to technical evaluation 14 08-1289.

Fig.52 Maximum length of the connections

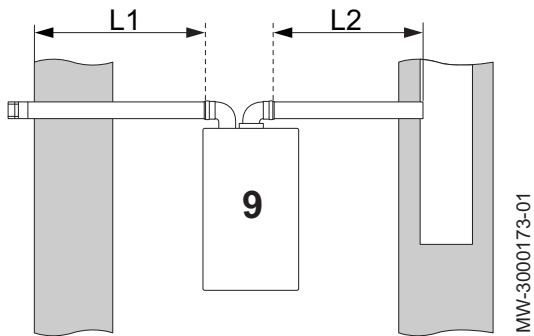

MW-3000173-01

Tab.20 Maximum length for configuration C<sub>53</sub>

| Configuration | Unit | Sirius two FS 50               | Sirius two FS 70             | Sirius two FS 90              | Sirius two FS 110             |
|---------------|------|--------------------------------|------------------------------|-------------------------------|-------------------------------|
|               |      | Ø 80 / Ø 125                   | Ø 80 / Ø 125                 | Ø 110 / Ø 160                 | Ø 110 / Ø 160                 |
| 9             | m    | L1<15 m and L1+L2 <60 m (Ø 80) | L<15 m and L1+L2<30 m (Ø 80) | L1<7 m and L1+L2<27 m (Ø 110) | L1<7 m and L1+L2<27 m (Ø 110) |

6.6 Electrical connections

6.6.1 Recommendations

- Earth the appliance before making any electrical connections.
- Only qualified engineers may carry out electrical connections, always with the power off.
- Power the appliance via a circuit that includes an omnipolar switch with contact opening distance of 3 mm or more.
- When making electrical connections to the mains, respect the polarities.

**Danger**

Position the various electrical cables in such a way that they never touch the heating pipes.

Keep the various electrical cables far enough from the heating pipes so that they cannot be damaged by the effect of the heat.

### 6.6.2 Recommended cable cross section

The cable will be carefully chosen according to the following information:

- Distance of the appliance from the power source.
- Upstream protection.
- Neutral operating conditions.

Tab.21 Specifications of the power cable and the power source

|  |         |
|--|---------|
| Cable cross section (mm <sup>2</sup> ) | 3 x 1.5 |
| C DJ curve (circuit breaker)           | 10 A    |

### 6.6.3 Accessing the terminal blocks

1. Remove the front panel.



**For more information, see**


Accessing the internal boiler components, page 34

### 6.6.4 Wiring the terminal blocks

Use a flat-bladed screwdriver less than 3.5 mm in width.


1. Press down the spring on the terminal block with a suitable screwdriver.

Fig.53 Pressing down the spring

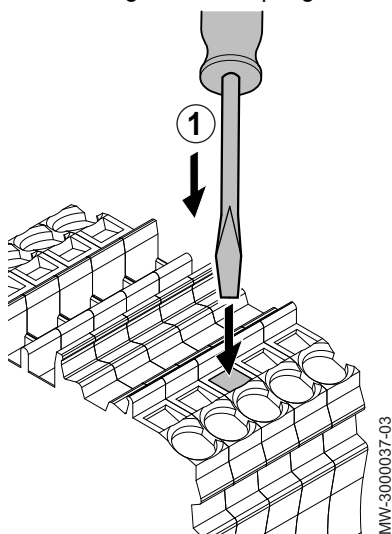

MW-3000037-03

Fig.54 Connecting the wire

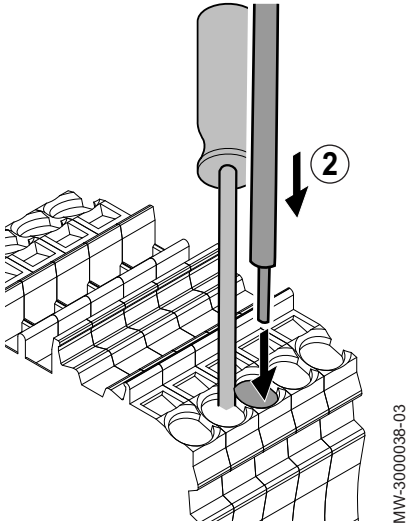


2. Insert the stripped part of the wire into the corresponding connector.



**Caution**

The length to be stripped must be between 10 and 12 mm.


Fig.55 Attaching the wire

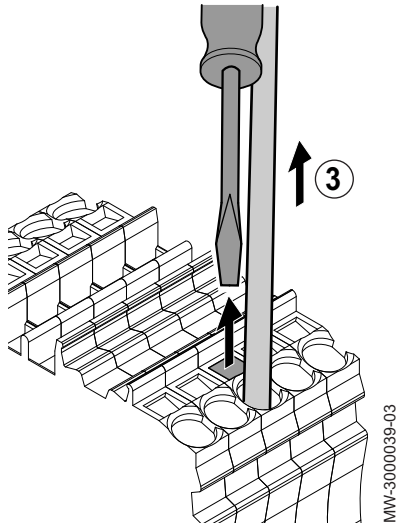

3. Release the pressure on the spring.  
The wire is attached.

**6.6.5 Description of the power supply terminal block**

Fig.56 Power supply terminal block

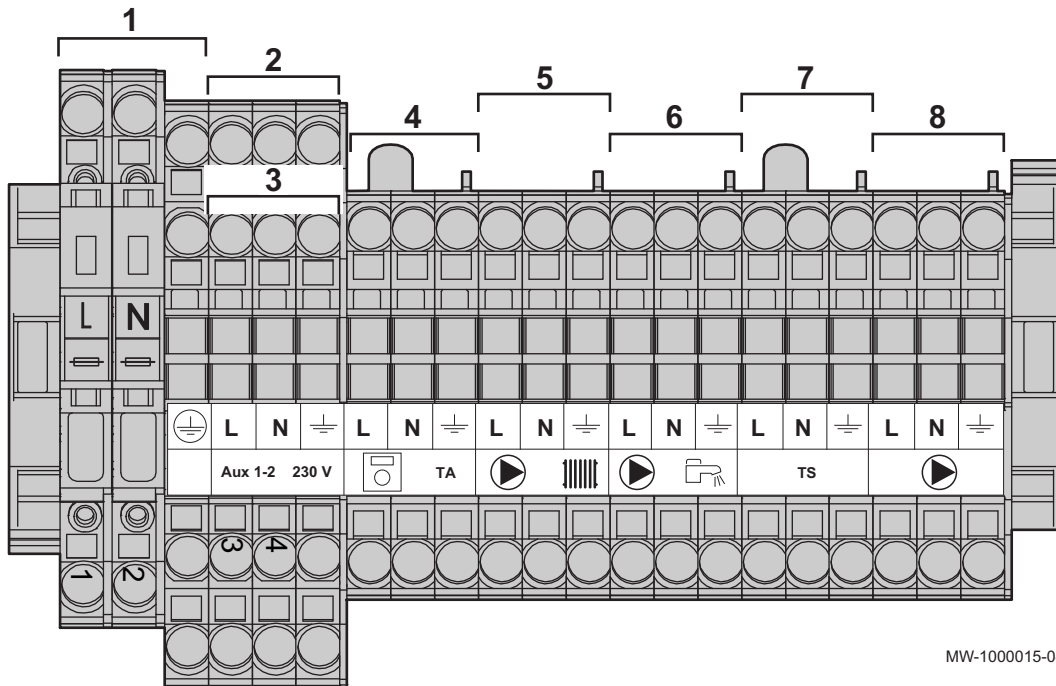

MW-1000015-04

1 Power supply 230 V 50 Hz

2 Power supply auxiliary circuit 1

- 3 Power supply auxiliary circuit 2
- 4 Room thermostat
- 5 Heating circuit pump


- 6 Domestic hot water pump
- 7 Safety contact
- 8 Boiler pump

**Caution**

All connections are made to the terminal blocks provided for that purpose in the boiler connection box. The output available per outlet is 180 W (1 A, with  $\cos \phi = 0.8$ ) and the inrush current must be less than 5 A. If the load exceeds either of these values, the control must be relayed using a contactor that must not be installed in the control panel under any circumstances. The sum of the currents from all outlets must not exceed 4 A.

**6.6.6 Description of the sensor terminal block**

Fig.57 Sensor terminal block

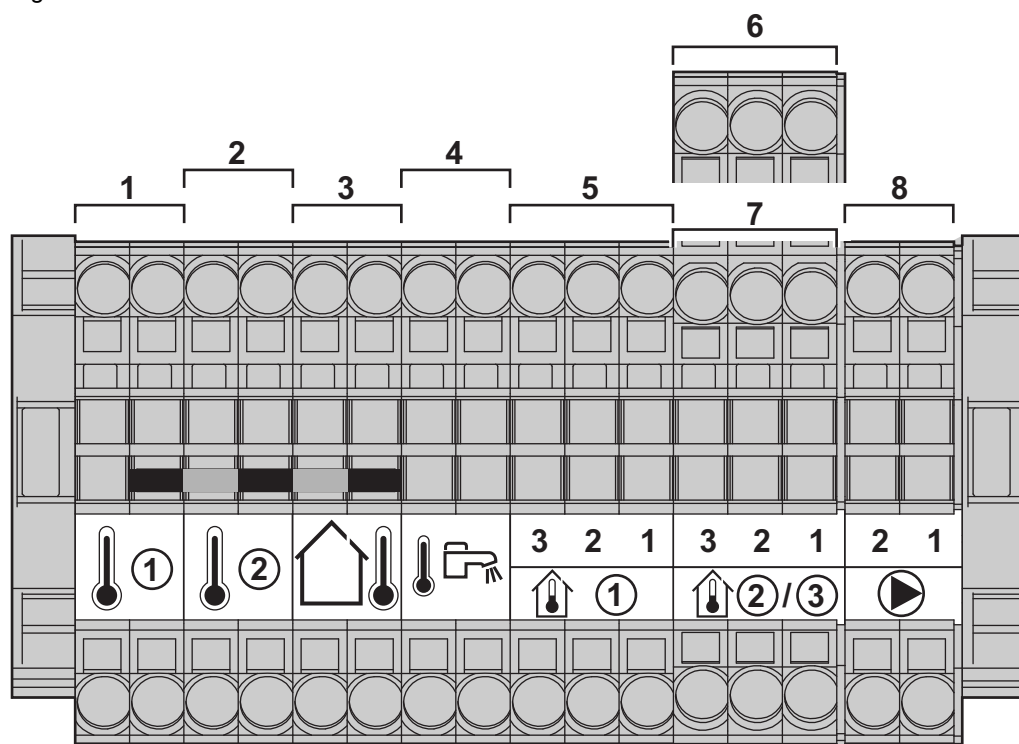


MW-1000016-04

- 1 Auxiliary sensor 1
- 2 Auxiliary sensor 2
- 3 Outside sensor
- 4 Domestic hot water sensor
- 5 Room temperature sensor 1
- 6 Room temperature sensor 2
- 7 Room temperature sensor 3
- 8 Boiler pump modulation (PWM)

**6.6.7 Electrical connection: 1 boiler + 1 direct circuit + 1 domestic hot water tank**

Fig.58 1 boiler + 1 direct circuit + 1 domestic hot water tank

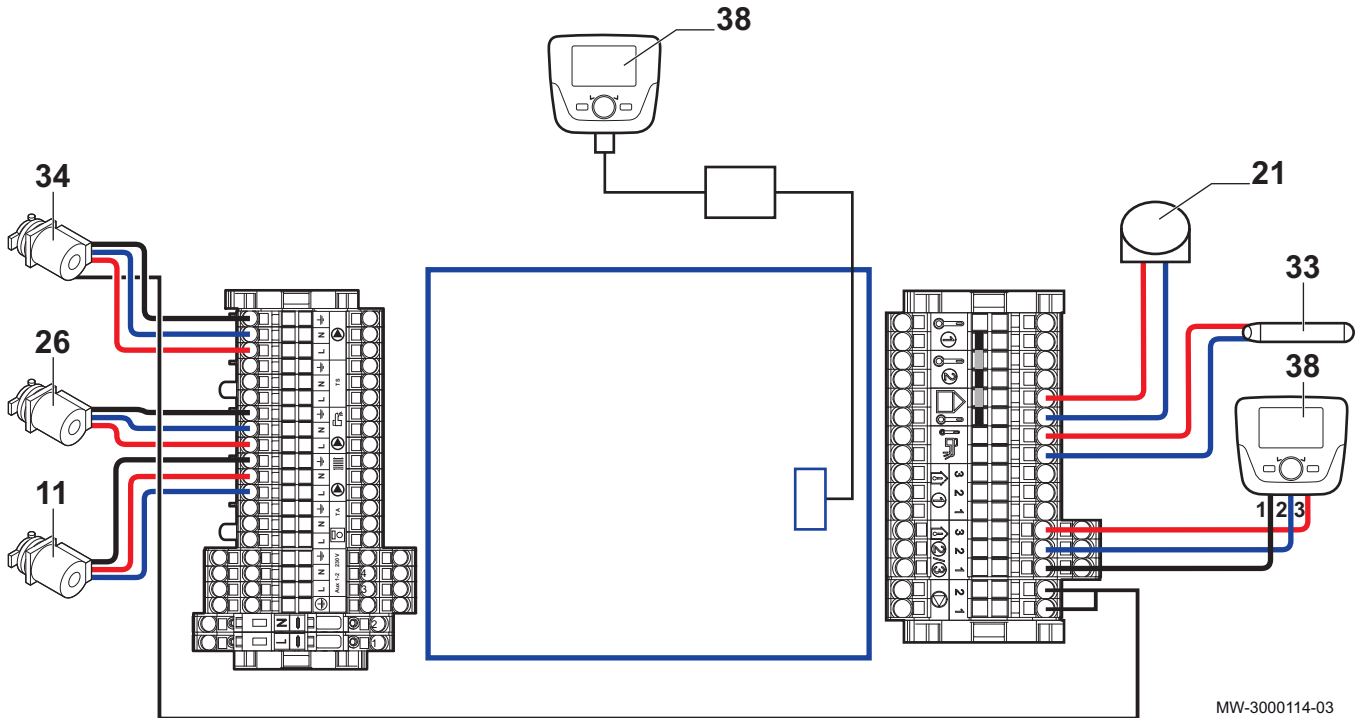

MW-3000114-03

- 11 Heating pump
- 21 Outside temperature sensor
- 26 DHW load pump
- 33 Domestic hot water temperature sensor
- 34 Primary pump
- 38 Remote control with or without room temperature sensor




**For more information, see**

Connection diagram: 1 boiler + 1 direct circuit + 1 domestic hot water tank, page 30

**6.6.8 Electrical connection: 1 boiler + 1 direct circuit + 1 under-floor heating circuit + 1 domestic hot water tank**

Fig.59 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

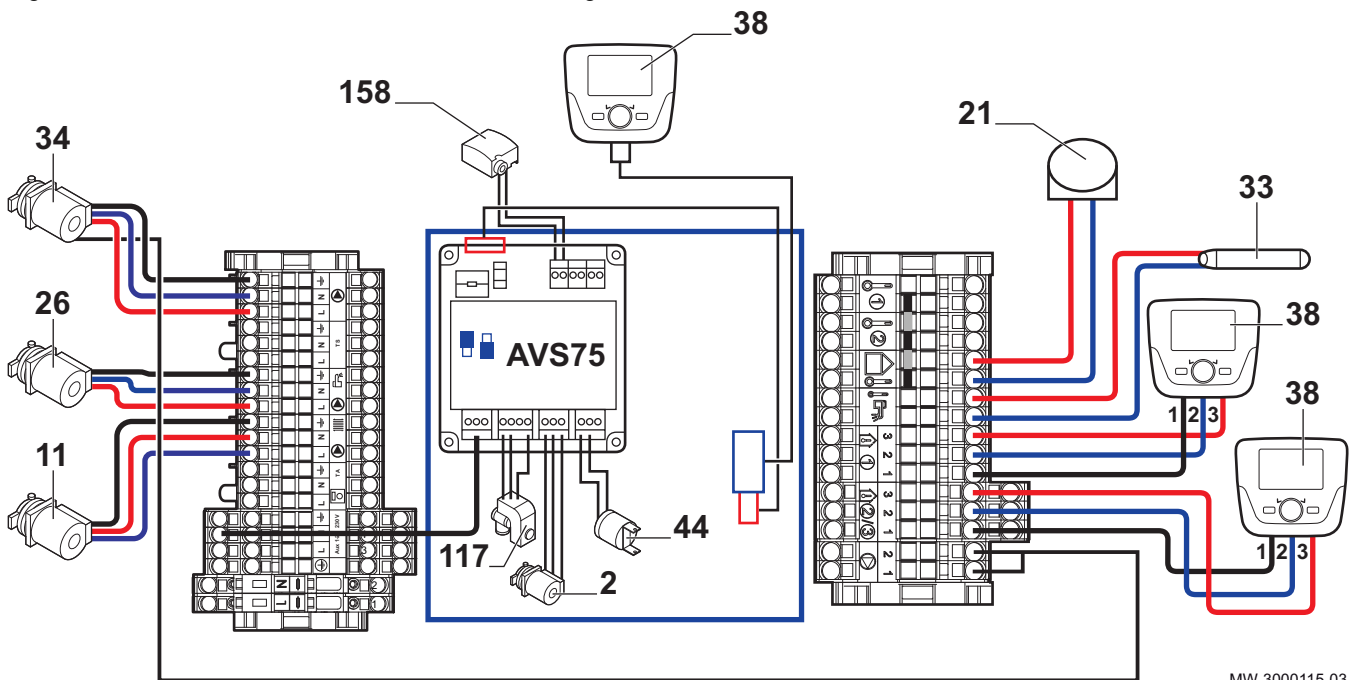

MW-3000115-03

- 2 Heating pump
- 11 Heating pump



- |    |  |     |   |
|----|--|-----|---|
| 21 | Outside temperature sensor                             | 44  | 65°C safety thermostat with manual reset for under-floor heating (DTU 65.8, NF P52-303-1) |
| 26 | DHW load pump  | 117 | Reversing valve   |
| 33 | Domestic hot water temperature sensor                  | 158 | Flow temperature sensor   |
| 34 | Primary pump   |     |   |
| 38 | Remote control with or without room temperature sensor |     |   |




**For more information, see**

Configuring an installation with 1 boiler + 1 low-loss header + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 59

Connection diagram: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 31

### 6.6.9 Electrical connection: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

Fig.60 Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

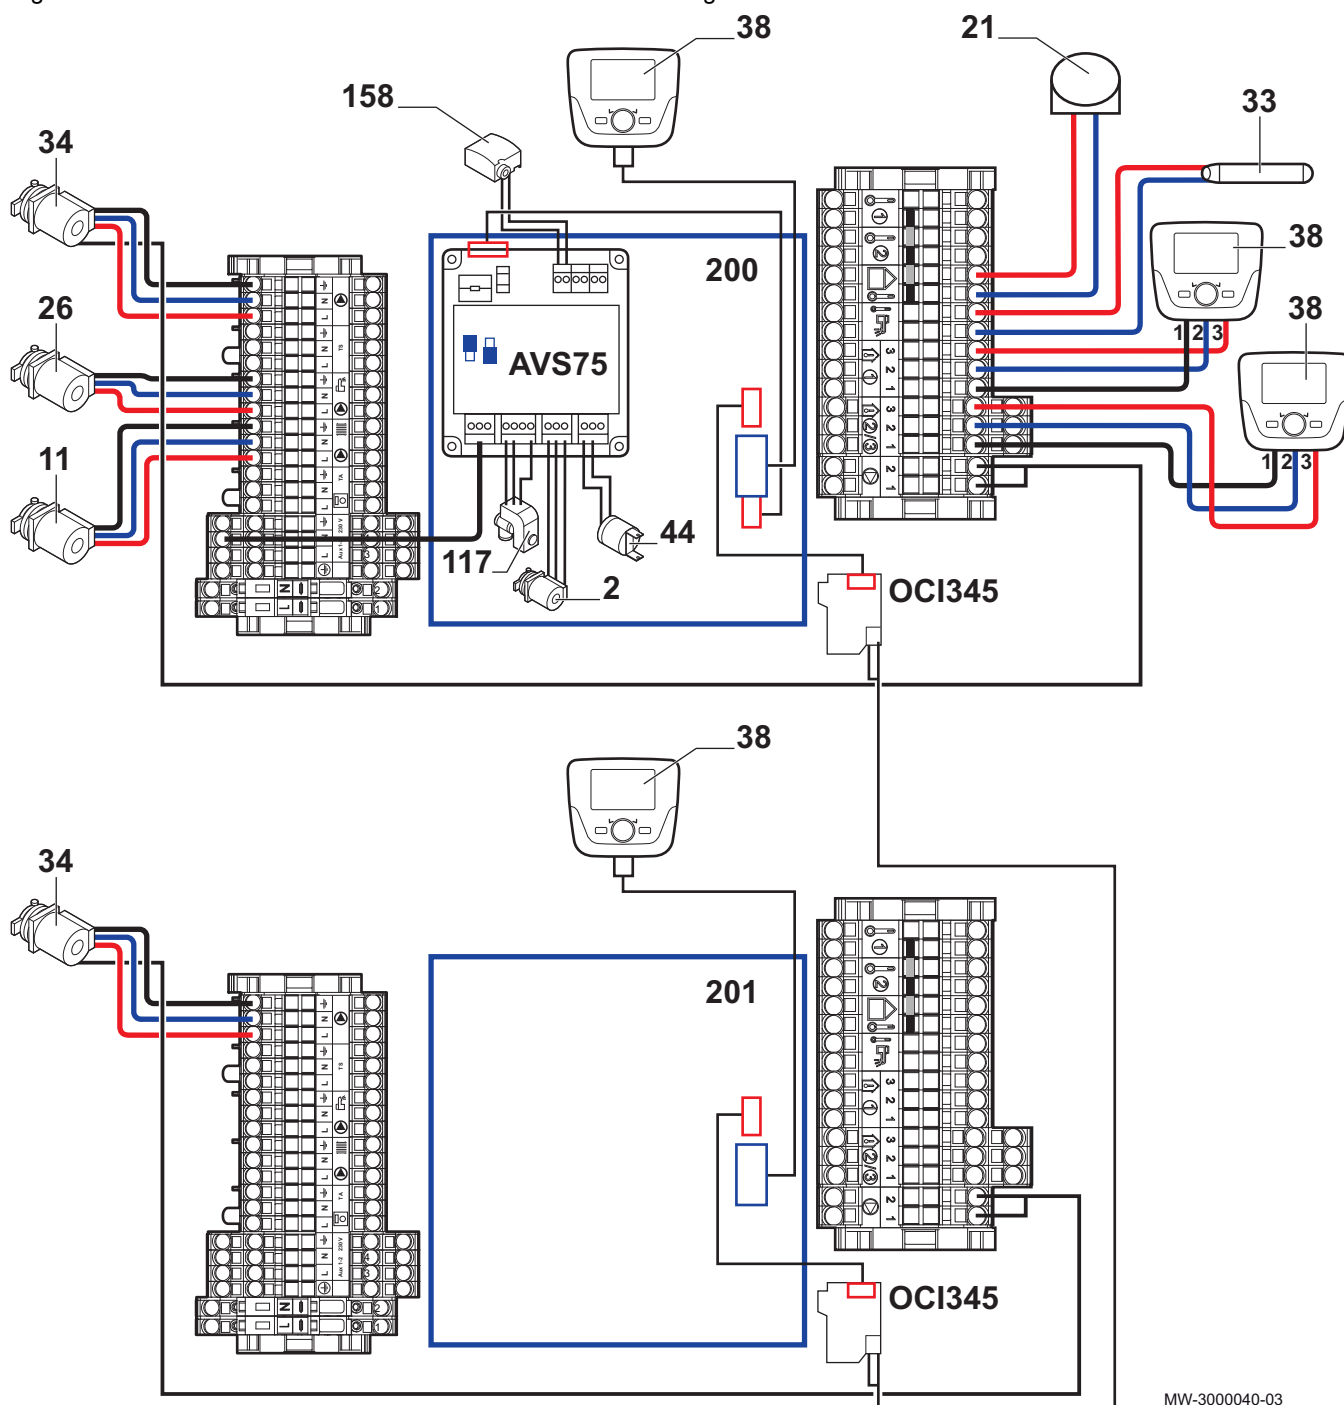

MW-3000040-03

- 2 Heating pump
- 11 Heating pump
- 21 Outside temperature sensor
- 26 DHW load pump
- 33 Domestic hot water temperature sensor
- 34 Primary pump
- 38 Remote control with or without room temperature sensor
- 44 Safety device to safeguard against overheating of the underfloor heating system, in accordance with prevailing regulations
- 117 Three-way valve
- 158 Flow temperature sensor
- 200 Lead boiler
- 201 Secondary boiler




**For more information, see**

Connection diagram: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 32  
 Configuring boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 59

**6.6.10 Electrical connection: controlling a boiler in 0-10 V**

Fig.61 Controlling a boiler in 0-10 V

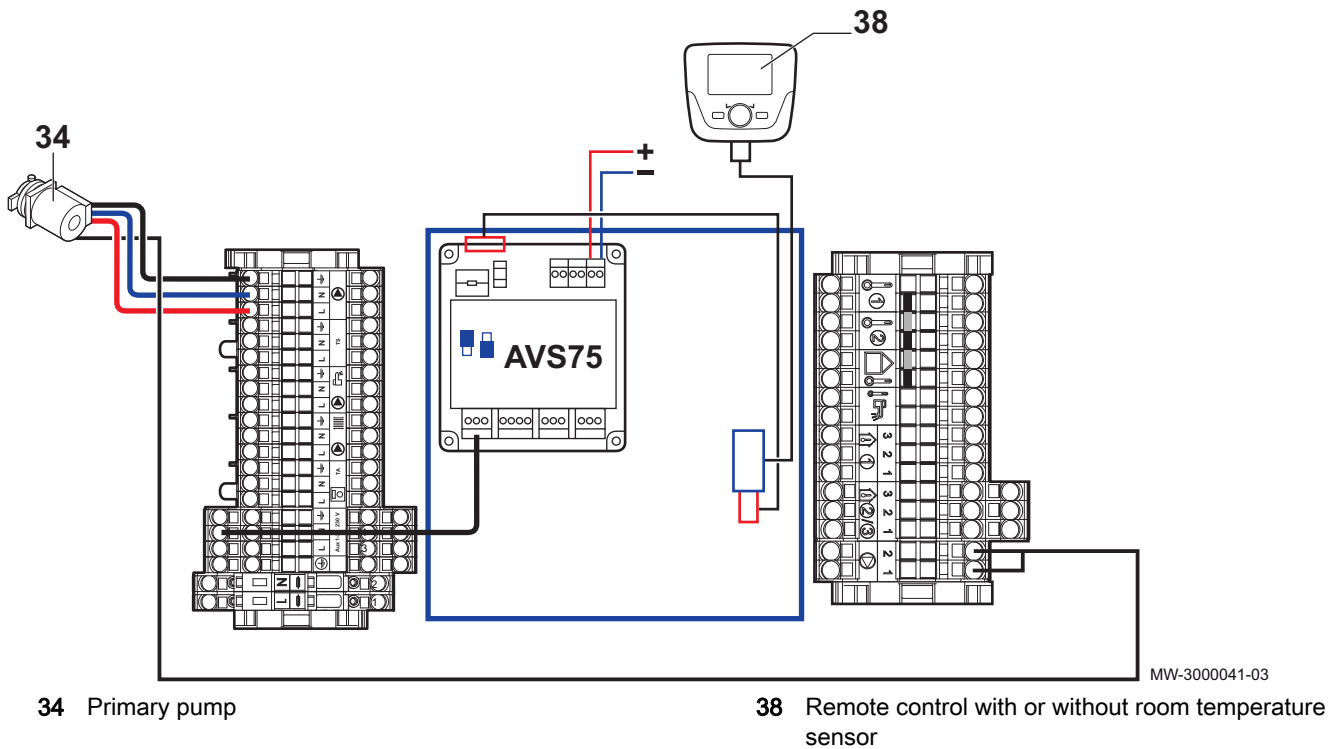

34 Primary pump

38 Remote control with or without room temperature sensor



**For more information, see**

Connection diagram: controlling a boiler in 0-10 V, page 33  
 Configuring control of a boiler in 0-10 V, page 60


**6.6.11 Connecting boilers in cascade with a module OCI 345**

Connect the boilers included in the boiler cascade with **OCI 345** modules (electronic devices that handle communication through a **BUS** link). The **OCI 345** modules must be connected to each boiler with three connectors.

Tab.22 Connecting the boiler components in cascade

| Component 1                                    | Component 2  |
|--|--|
| <b>OCI 345</b> module on the boiler            | <b>X30</b> connector on the boiler PCB. (flat cable supplied with the <b>OCI 345</b> ) |
| <b>MB</b> connector of a module <b>OCI 345</b> | <b>MB</b> connector of a <b>OCI 345</b> module on a boiler                             |
| <b>DB</b> connector of a module <b>OCI 345</b> | <b>DB</b> connector of a <b>OCI 345</b> module on a boiler                             |

Fig.62 Connecting OCI 345 modules for boilers in cascade

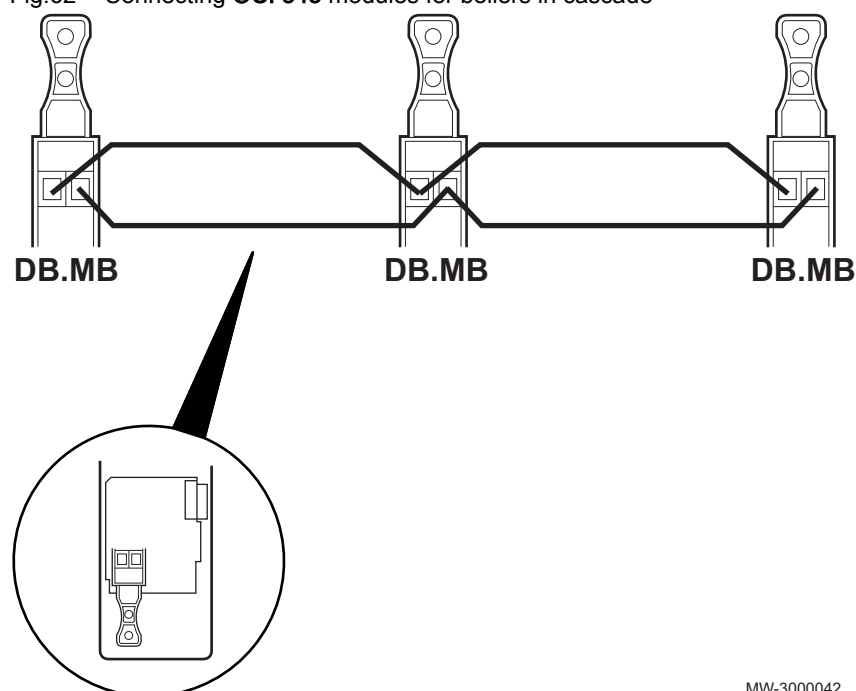

MW-3000042

To make the connections between the various **MB** and **DB** connectors, use a shielded cable with the following specifications:

| Type         | Cross section           | Maximum length |
|--------------|-------------------------|----------------|
| HAR H05 VV-F | 2 x 1.5 mm <sup>2</sup> | 200 m          |

## 6.7 Filling the system

### 6.7.1 Filling the heating system

Before filling the heating system, rinse it thoroughly.

In many cases, the heating circuits can be filled with mains water, without treating the water.

1. Fill the heating system until you reach a pressure of between 1.5 and 2 bar (0.15 and 0.2 MPa).
2. Check the tightness of the hydraulic connections.
3. Completely vent the heating circuit for optimum running.



**For more information, see**  
Water treatment, page 23

#### ■ Flushing new systems and systems less than 6 months old

1. Clean the installation with a powerful universal cleaner to eliminate debris from the appliance (copper, hemp, flux).
2. Thoroughly flush the installation until the water runs clear and shows no impurities.



**For more information, see**  
Water treatment, page 23

#### ■ Flushing an existing installation

1. Remove any sludge from the installation.
2. Flush the installation.
3. Clean the installation with a universal cleaner to eliminate debris from the appliance (copper, hemp, flux).
4. Thoroughly flush the installation until the water runs clear and shows no impurities.



**For more information, see**  
Water treatment, page 23

### 6.7.2 Filling the siphon

---

1. Clean the siphon.
2. Completely fill the siphon until it overflows.



**Danger**

Fill the siphon to the top. If the siphon is empty, there is a danger of intoxication by exhaust gases.



**For more information, see**  
Cleaning the siphon, page 104

## 6.8 Completing installation

---

1. Reconnect the earth wire and put the front panel back in place.
2. Discard the various packaging items.
3. Affix the data plate found in the instructions bag to a visible part of the boiler.



**For more information, see**  
Data plate, page 27

## 7 Commissioning

### 7.1 General

Commissioning the boiler is done for first time use, after a prolonged shut-down (more than 28 days) or after any event that would require complete re-installation of the boiler. Commissioning of the boiler allows the user to review the various settings and checks to be made to start up the boiler in complete safety.

### 7.2 Check-list before commissioning

1. Check that the gas type supplied matches the data shown on the boiler's data plate.



#### Warning

Do not commission the boiler if the gas supplied does not match the gas types approved for the boiler.

2. Check connection of the earth wires.
3. Check the tightness of the gas circuit from the non-return valve to the burner.
4. Check the hydraulic circuit from the boiler's isolation valves to the connection to the heating body.
5. Check the hydraulic pressure in the heating system.
6. Check the electricity supply connections to the various boiler components.
7. Check the electrical connections on the thermostat and the other external components.
8. Check the ventilation in the room in which the system is installed.
9. Check the flue gas connections.
10. Test the boiler at full load.
11. Test the boiler at part load.




#### For more information, see

Setting the air/gas ratio (maximum heat input), page 55  
Setting the air/gas ratio (reduced heat input), page 56

### 7.3 Commissioning procedure

#### 7.3.1 First time commissioning

When commissioning the boiler for the first time, the control panel needs to be synchronised with the boiler. The default setting for the control panel is English.

1. Press the  button for 5 seconds.  
Synchronisation between the boiler and the control panel is running and shows its progress from 1% to 100%. Synchronisation may take several minutes.
2. Select the language.
3. Set the date and time.



#### For more information, see

Setting the date and time, page 79  
Language selection, page 80

#### 7.3.2 Checking the gas inlet



#### Danger

Ensure that the boiler is switched off.

1. Open the main gas valve.
2. Open the gas valve on the boiler.
3. Open the front panel.

4. Check the gas supply pressure at the pressure outlet on the gas valve unit.
5. Check the tightness of the gas connections made after the gas valve unit in the boiler.
6. Check the tightness of the gas pipe, including any valves, from the non-return valve to the burner. The test pressure must not exceed 0.06 bar (0.006 MPa).
7. Vent the gas supply pipe by unscrewing the pressure outlet on the gas valve unit. Close the outlet again when the pipe has been sufficiently vented.
8. Check the tightness of the gas connections in the boiler.



**For more information, see**  
Stopping the boiler, page 63  
Gas valves, page 56

### 7.3.3 Checking the electrical connections

1. Check the electrical connection to the mains.
2. Check the connection and positioning of the sensors.
3. Check the connection of the circulating pump(s).







### 7.3.4 Checking the hydraulic circuit

1. Check the siphon, which must be completely filled with water.
2. Check that there are no leaks on the boiler's hydraulic connections.
3. Check the pressure in the expansion vessel before filling the system.

## 7.4 Gas settings

### 7.4.1 Configuring the fan speed

The boiler's fan speed has to be configured according to gas type before the gas valve is set.

1. Go to the installer parameters.
2. Select the **Boiler Settings** menu by turning the  button.
3. Confirm the menu selection by pressing the button .
4. Modify parameter 2441 **Fan speed heating max** according to the gas type. Use the  button to select and modify the parameter.
5. Confirm the setting by pressing the  button.
6. Select the **Burner control** menu by turning the  button.
7. Modify parameters 9512 **Required speed ignition**, 9524 **Required speed LF** and 9529 **Required speed HF** according to the gas type. Use the  button to select and modify the parameters.



**For more information, see**  
Modifying the installer parameters, page 62

#### ■ Fan speed according to gas type

Tab.23 Fan speed for gas type G20

| Parameter  | Output                         | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|--------------------------------|------|------------------|------------------|------------------|-------------------|
| 9524 <b>Required speed LF</b>                                      | minimum                        | rpm  | 1500             | 1270             | 1250             | 1300              |
| 9524 <b>Required speed LF</b>                                      | minimum for boilers in cascade | rpm  | 1700             | 1470             | 1450             | 1500              |
| 9529 <b>Required speed HF</b><br>2441 <b>Fan speed heating max</b> | maximum                        | rpm  | 6650             | 6450             | 6500             | 6900              |
| 9512 <b>Required speed ignition</b>                                | Ignition                       | rpm  | 2300             | 2100             | 2400             | 2500              |

Tab.24 Fan speed for gas type G31

| Parameter  | Output                         | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|--------------------------------|------|------------------|------------------|------------------|-------------------|
| 9524 Required speed LF                               | minimum                        | rpm  | 1500             | 1270             | 1500             | 1300              |
| 9524 Required speed LF                               | minimum for boilers in cascade | rpm  | 1700             | 1470             | 1650             | 1500              |
| 9529 Required speed HF<br>2441 Fan speed heating max | maximum                        | rpm  | 6400             | 6100             | 6200             | 6700              |
| 9512 Required speed ignition                         | Ignition                       | rpm  | 3000             | 2500             | 2400             | 3000              |




For more information, see

Modifying the installer parameters, page 62

#### 7.4.2 Setting the air/gas ratio (maximum heat input)

Fig.63 Connecting the flue gas analyser

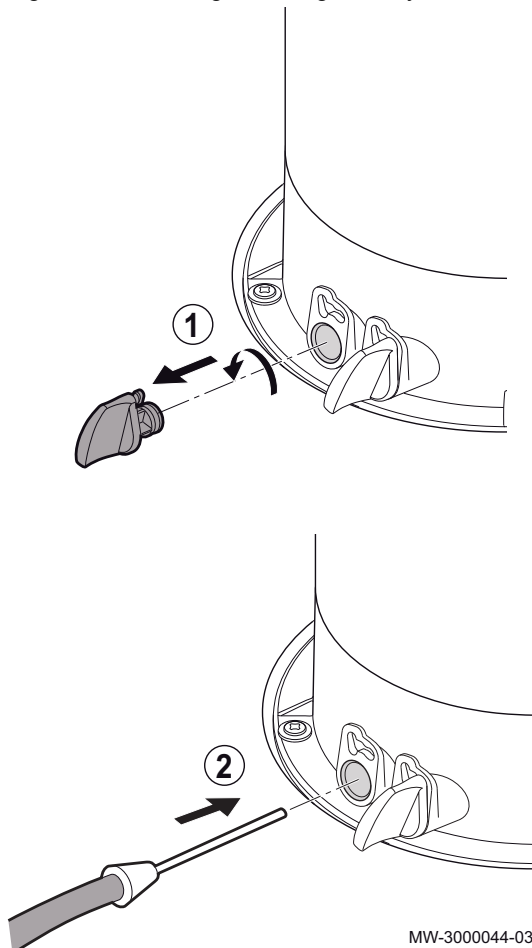

1. Unscrew the left-hand plug, which corresponds to the flue gas measurement point connection.
2. Connect the flue gas analyser to the connection on the left.



**Note**

- Ensure that the opening around the sensor is completely sealed when taking measurements.
- Insert the sensor into the flue gas measurement point to at least 8 cm for Sirius two FS 50 and Sirius two FS 70 .
- Insert the sensor into the flue gas measurement point to at least 9 cm for Sirius two FS 90 and Sirius two FS 110 .

3. Set the boiler's heat input to 100%.
4. Measure the percentage of CO<sub>2</sub> in the flue gases.
5. Compare the values measured with the set point values in the Control and setting values table.



**Note**

A tolerance of +/- 0.5% is acceptable.

6. If necessary, adjust the air/gas ratio using the gas flow rate adjustment screw.



**Note**

- Turn the gas adjustment screw clockwise to reduce the CO<sub>2</sub> content.
- Turn the gas adjustment screw counter-clockwise to increase the CO<sub>2</sub> content.



**Note**

A tolerance after adjustment of +/- 0.2% is acceptable when the front door is removed.

**For more information, see**

Check-list before commissioning, page 53


CO<sub>2</sub> checking and setting values, page 57

Gas valves, page 56

Using the boiler according to thermal output, page 87

**7.4.3 Setting the air/gas ratio (reduced heat input)**

Fig.64 Connecting the flue gas analyser

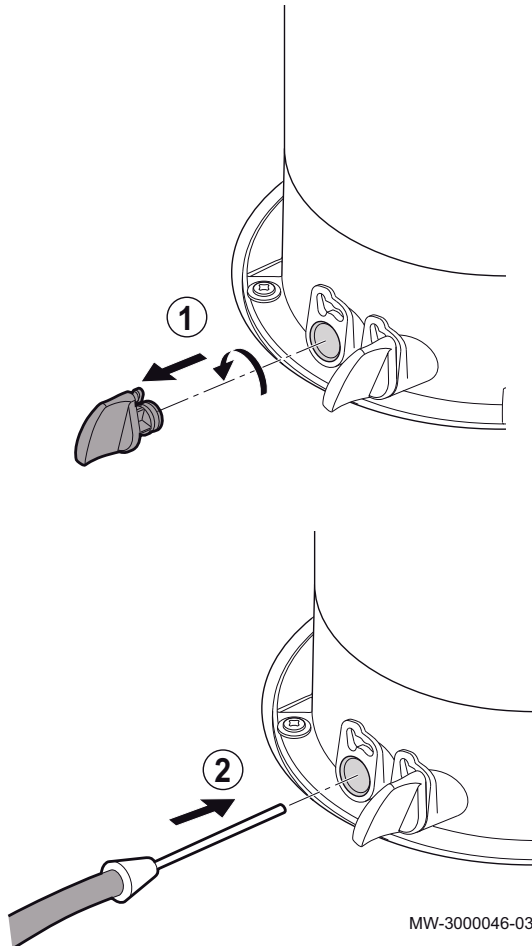

1. Unscrew the left-hand plug, which corresponds to the flue gas measurement point connection.
2. Connect the flue gas analyser to the connection on the left.

**Note**

- Ensure that the opening around the sensor is completely sealed when taking measurements.
- Insert the sensor into the flue gas measurement point to at least 8 cm for Sirius two FS 50 and Sirius two FS 70 .
- Insert the sensor into the flue gas measurement point to at least 9 cm for Sirius two FS 90 and Sirius two FS 110 .

3. Set the boiler's heat input to 0%.
4. Measure the percentage of CO<sub>2</sub> in the flue gases.
5. Compare the values measured with the set point values in the Control and setting values table.

**Note**

A tolerance of +/- 0.5% is acceptable.

6. If necessary, adjust the air/gas ratio using the OFFSET adjustment screw.

**Note**

- Turn the gas adjustment screw clockwise to increase the CO<sub>2</sub> content.
- Turn the gas adjustment screw counter-clockwise to reduce the CO<sub>2</sub> content.

**Note**

A tolerance after adjustment of +/- 0.2% is acceptable when the front door is removed.

**For more information, see**

Check-list before commissioning, page 53

Gas valves, page 56

CO<sub>2</sub> checking and setting values, page 57

Using the boiler according to thermal output, page 87


**7.4.4 Gas valves**

Tab.25 Settings values for a new gas valve on Sirius two FS

| Boiler model      | Nominal heat input:<br>Number of turns for the gas flow rate settings screw | Minimum heat input:<br>Number of turns for the OFFSET settings screw |
|-------------------|---|--|
| Sirius two FS 50  | 12  | 5 + 3/4  |
| Sirius two FS 70  | 13  | 5 + 3/4  |
| Sirius two FS 90  | 2 + 2/3   | 5 + 3/4  |
| Sirius two FS 110 | 2 + 1/3   | 5 + 3/4  |



Fig.65 Description of the gas valve for Sirius two FS 50 / Sirius two FS 70

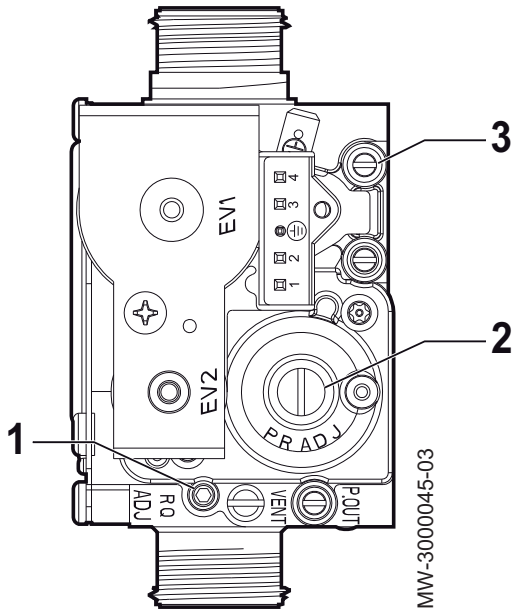

## 1 Gas flow rate setting screw


The settings screw is screwed down as far as it will go and is then unscrewed according to the number of turns given in the above table.

## 2 OFFSET setting screw:

- Remove the plug
- Use a 4 mm hexagonal spanner

## 3 Gas supply pressure outlet

Fig.66 Description of the gas valve for Sirius two FS 90 / Sirius two FS 110

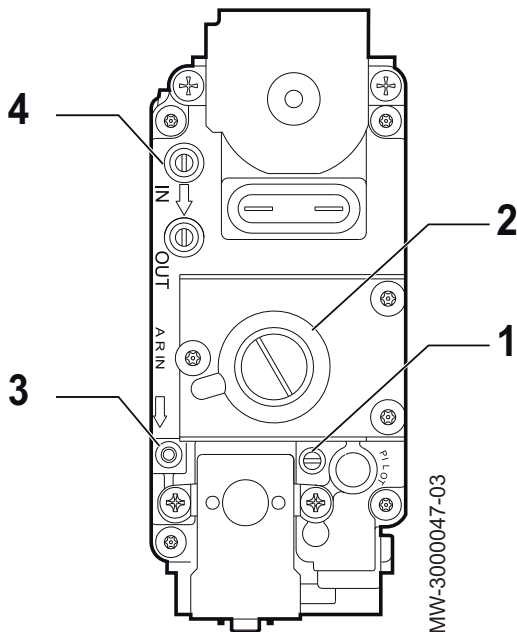

## 1 Gas flow rate setting screw

The settings screw is screwed down as far as it will go and is then unscrewed according to the number of turns given in the above table.

## 2 OFFSET setting screw:

- Remove the plug
- Use a flat-blade screwdriver

## 3 Sealed chamber pressure signal

## 4 Gas supply pressure outlet



For more information, see

Checking the gas inlet, page 53

7.4.5 CO<sub>2</sub> checking and setting values

Tab.26 Checking and setting values for gas type G20

|  | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|------|------------------|------------------|------------------|-------------------|
| Diameter of the Venturi                | mm   | 24               | 30               | 34               | 38                |
| Diameter of the nozzles                | mm   | 3.70 (no. 2)     | 5.30 (no. 2)     | 5.60 (no. 2)     | 6.40 (no. 2)      |
| Minimum CO <sub>2</sub> <sup>(1)</sup> | %    | 8.5              | 8.5              | 8.5              | 9.0               |
| Maximum CO <sub>2</sub> <sup>(1)</sup> | %    | 9.0              | 9.0              | 9.0              | 9.2               |
| Maximum CO                             | ppm  | < 250            | < 250            | < 250            | < 250             |

(1) The CO<sub>2</sub> value is valid with the front panel mounted. If the front panel is removed (open chamber), the value readout is lower by 0.2%.

Tab.27 Checking and setting values for gas type G31

|  | Unit | Sirius two FS 50 | Sirius two FS 70 | Sirius two FS 90 | Sirius two FS 110 |
|--|------|------------------|------------------|------------------|-------------------|
| Diameter of the Venturi                | mm   | 24               | 30               | 34               | 38                |
| Diameter of the nozzles                | mm   | 2.95 (no. 2)     | 4.0 (no. 2)      | 4.5 (no. 2)      | 5.0 (no. 2)       |
| Minimum CO <sub>2</sub> <sup>(1)</sup> | %    | 9.5              | 9.5              | 9.9              | 9.5               |
| Maximum CO <sub>2</sub> <sup>(1)</sup> | %    | 10               | 10               | 10               | 10                |
| Maximum CO                             | ppm  | < 250            | < 250            | < 250            | < 250             |

### 7.4.6 Adapting to another gas type



**Caution**

Only a fully trained, qualified professional may carry out the following operations.

The boiler is pre-set in the factory to run on natural gas **H (G20)**.

Conversion kits are available for other types of gas **G25** and **G31**.

1. Close the mains gas valve.
2. Remove the pipe connecting the Venturi to the gas valve.

Fig.67 Removing the connection pipe


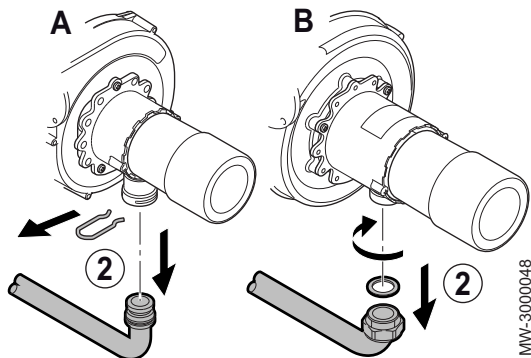


Fig.68 Removing the Venturi unit

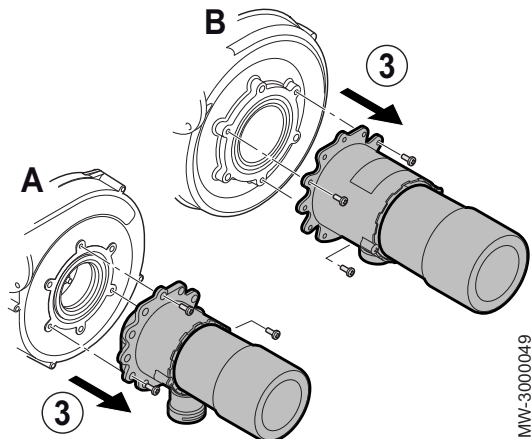

Tab.28 Connection differences

| Reference | Model   |
|-----------|---|
| A         | Sirius two FS 50  |
| B         | Sirius two FS 70<br>Sirius two FS 90<br>Sirius two FS 110 |

3. Remove the Venturi unit.
4. Replace the original Venturi unit with the Venturi unit provided in the conversion kit.
5. Remount the connection pipe to the gas valve.

Tab.29 Torque load

| Reference | Model   | Fastening Venturi end | Fastening gas valve end |
|-----------|---|-----------------------|-------------------------|
| A         | Sirius two FS 50  | Clip                  | G1" nut, torque: 40 N·m |
| B         | Sirius two FS 70<br>Sirius two FS 90<br>Sirius two FS 110 | Nut, Torque: 40 N·m   | Nut, Torque: 40 N·m     |

6. Open the mains gas valve.
7. Check the tightness of the assembly and ensure that there are no leaks.
8. Set the gas valve according to the parameters given in the conversion kit manual.
9. Set the fan speed according to the new gas type.
10. Set the air/gas ratio.

11. Replace the gas setting label with the one delivered with the boiler and tick the corresponding gas setting.



**For more information, see**

- CO2 checking and setting values, page 57
- Setting the air/gas ratio (reduced heat input), page 56
- Setting the air/gas ratio (maximum heat input), page 55

## 7.5 Checks and adjustments after commissioning

### 7.5.1 Configuring an installation with 1 boiler + 1 low-loss header + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

1. Access the installer parameters
2. Set the following parameters on the boiler:

Tab.30 Boiler settings

| Parameter number | Parameter                   | Setting             |
|------------------|-----------------------------|---------------------|
| 5715             | Temps / mode CH2            | On                  |
| 6020             | Function extension module 1 | Temps / mode CH2    |
| 6024             | Funct input EX21 module 1   | Limit thermostat CH |



**For more information, see**

- Electrical connection: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 48
- Connection diagram: 1 boiler + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 31
- Modifying the installer parameters, page 62
- List of installer parameters, page 68

### 7.5.2 Configuring boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank

1. Go to the installer parameters on boiler 1 (master boiler).
2. Set the following parameters on boiler 1:

Tab.31 Settings on boiler 1 (master boiler)

| Parameter number | Parameter                   | Setting                   |
|------------------|-----------------------------|---------------------------|
| 5710             | Temps / mode CH1            | On                        |
| 5715             | Temps / mode CH2            | On                        |
| 5731             | Sensor input BX2            | Common flow sensor B10    |
| 5932             | Sensor input BX3            | Cascade return sensor B70 |
| 6020             | Function extension module 1 | Temps / mode CH2          |
| 6600             | Device address              | 1                         |
| 6640             | Clock mode                  | Master                    |

3. Go to the installer parameters on boiler 2 (slave boiler).
4. Set the following parameters on boiler 2:

Tab.32 Settings on boiler 2 (slave boiler)

| Parameter number | Parameter        | Setting                      |
|------------------|------------------|------------------------------|
| 5710             | Temps / mode CH1 | Off                          |
| 6600             | Device address   | 2                            |
| 6640             | Clock mode       | Slave without remote setting |

**For more information, see**

Electrical connection: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 49  
 Connection diagram: Boilers in cascade + 1 direct circuit + 1 underfloor heating circuit + 1 domestic hot water tank, page 32  
 Connecting boilers in cascade with a module OCI 345, page 50  
 Modifying the installer parameters, page 62  
 List of installer parameters, page 68

**7.5.3 Configuring control of a boiler in 0-10 V**

1. Go to the installer parameters.
2. Set the following parameters on the boiler:

Tab.33 Boiler settings

| Parameter number | Parameter                   | Setting                  |
|------------------|-----------------------------|--------------------------|
| 5710             | Temps / mode CH1            | Off                      |
| 6020             | Function extension module 1 | Multifunctional          |
| 6046             | Function input H2 module 1  | Consumer request VK1 10V |
| 6049             | Voltage value 1 H2 module 1 | 0                        |
| 6050             | Funct value 1 H2 module 1   | 0                        |
| 6051             | Voltage value 2 H2 module 1 | 10                       |
| 6052             | Funct value 2 H2 module 1   | 800 <sup>(1)</sup>       |

(1) This parameter setting is an example. The value 800 means that, at 10 V, the set point will be 80°C.

**For more information, see**

Connection diagram: controlling a boiler in 0-10 V, page 33  
 Electrical connection: controlling a boiler in 0-10 V, page 50  
 Modifying the installer parameters, page 62  
 List of installer parameters, page 68

**7.5.4 Configuring a master boiler and the slave boilers in a cascade**

1. Access the installer parameters of the master boiler.
2. Set the following parameters on the master boiler:

Tab.34 Configuration of the master boiler in a cascade

| Parameter number | Parameter                  | Setting                   | Description   |
|------------------|----------------------------|---------------------------|---|
| 5977             | Function input H5          | None                      | Deactivation of the thermostat on terminal block <b>M1 (1-2)</b>  |
| 6030             | Relay output QX21 module 1 | heating pump CH1 Q2       | Check on the pump on circuit 1  |
| 6040             | Sensor input BX21 module 1 | Common flow sensor B10    | Check on the cascade discharge temperature  |
| 6041             | Sensor input BX22 module 1 | Cascade return sensor B70 | Check on the cascade return temperature   |
| 6200             | Save sensors               | Yes                       | Saving any modifications made. The setting will revert automatically to <b>No</b> immediately after the adjustment. |
| 6630             | Cascade master             | Always                    | Identification master boiler  |
| 6640             | Clock mode                 | Autonomously              | Cascade master boiler clock setting   |

3. Access the installer parameters of the slave boiler(s):

4. Set the following parameters on the slave boiler(s).

Tab.35 Cascade configuration of the slave boilers

| Parameter number | Parameter        | Setting                   | Description  |
|------------------|------------------|---------------------------|--|
| 5710             | Temps / mode CH1 | Off                       | Deactivation of the thermostat on terminal block <b>M1 (1-2)</b> |
| 6600             | Device address   | 2...3...4...              | Cascade activation   |
| 6640             | Clock mode       | Slave with remote setting | Setting the slave boiler clock with a master boiler              |

## 8 Operation

### 8.1 Use of the control panel

Fig.69 Accessing the User parameters

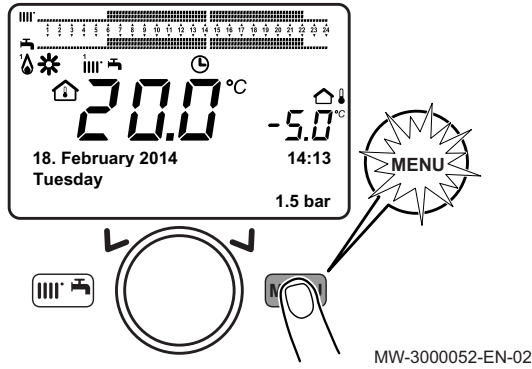


Fig.70 Accessing the User parameters


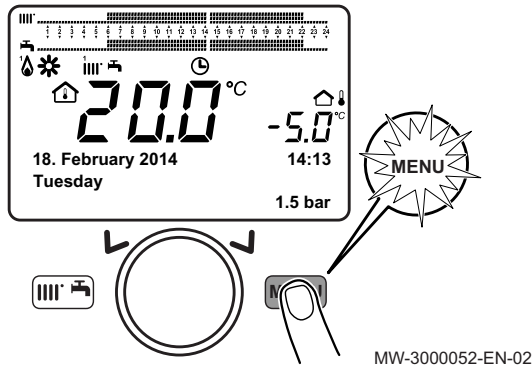


Fig.71 Accessing the installer parameters



#### 8.1.1 Modifying the user parameters

1. Press the key to access the parameters.

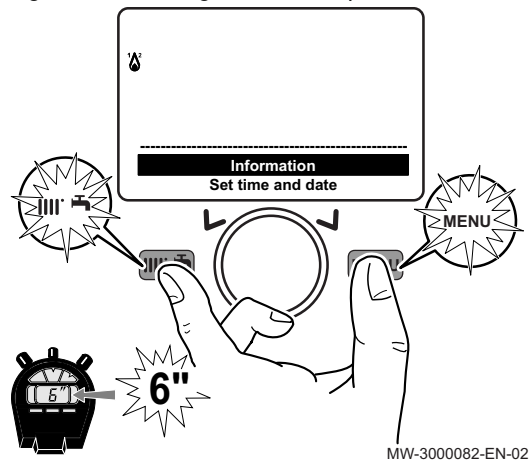

**Note**

Press the key to return to the main display.

The user parameters can now be accessed. Use the button to select and modify them.




**For more information, see**

List of user parameters, page 66

#### 8.1.2 Modifying the installer parameters


1. Press the key to access the parameters.
2. Press the and keys simultaneously for at least 6 seconds.

Fig.72 Confirming the parameters

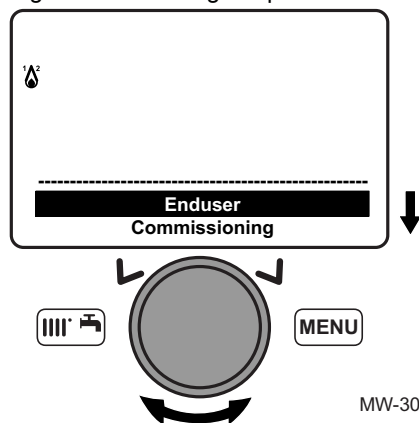

MW-3000083-EN-02

Fig.73 Commissioning parameter

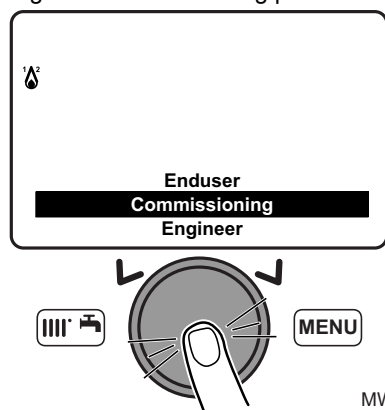

MW-3000084-EN-02

3. Select the **Commissioning** menu by turning the button.

4. Confirm the menu selection by pressing the button .

**Note**

Press the key to return to the main display.


The parameters for the **Commissioning** mode can now be accessed. Use the button to select and modify them.

**For more information, see**

List of installer parameters, page 68

## 8.2 Starting up the boiler

Fig.74 Starting up the boiler

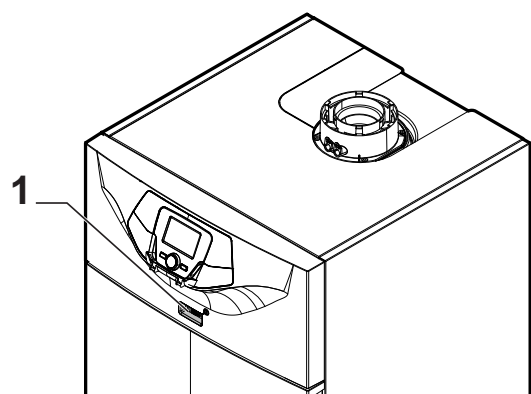

MW-3000050

1. Start up the boiler by pressing the ON/OFF switch.
2. Open the gas cock.
3. Press the key to access the shortcuts menu.
4. Select the **Standby/operation** parameter by turning the .
5. Press the button to start up the boiler. The symbol disappears.

## 8.3 Stopping the boiler

**Note**

Choose the operating mode **Off** or **Standby**.

1. Switch off the boiler by pressing the ON/OFF switch.
2. Close the gas cock.

### 8.3.1 Putting the boiler in Standby mode

1. Press the key to access the shortcuts menu.
2. Select the **Standby/operation** parameter by turning the .
3. Press the button to put the boiler in standby. The symbol is displayed.


## 8.4 Frost Protection

The electronic management system of the boiler includes protection against frost. If the water temperature falls below 5°C, the burner starts up in order to provide a water temperature of 30°C.

This function only works if the boiler is turned on, the gas supply open and the hydraulic pressure correct.

### 8.4.1 Activating the Off

Fig.75 Shortcuts menu

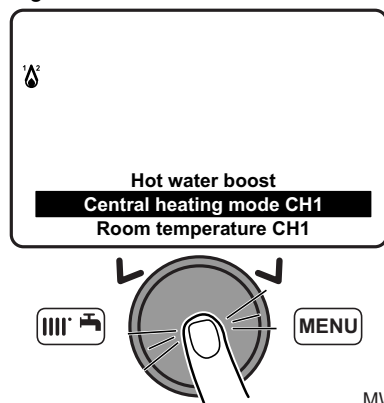

MW-3000051-EN-02

1. Press the key to access the shortcuts menu.
2. Select the parameter **Central heating mode CH1** by turning the button.
3. Confirm the selection by pressing the button.
4. Select the parameter **Off** by turning the button.
5. Confirm the selection by pressing the button.  
The symbol is displayed.



#### Note

When the operating mode **Off** is activated:


- The electrical circuits continue to be powered up.
- The frost protection function is activated.















## 9 Settings

### 9.1 List of parameters

#### 9.1.1 Shortcuts menu




Tab.36 Functions accessible with the shortcut key 

| Parameter                | Description                                 | Adjustment range  |
|--------------------------|---|---|
| Standby/operation        | Boiler standby / start-up                   | <ul style="list-style-type: none"> <li>• <b>Standby</b> : Boiler put on standby.               <ul style="list-style-type: none"> <li>- The symbol  is displayed.</li> <li>- The boiler's operating modes are deactivated.</li> <li>- The frost protection function is activated.</li> </ul> </li> <li>• <b>On</b> : Putting the boiler into operation</li> </ul>  |
| 316:Hot water boost      | Forcing domestic hot water production.      | <ul style="list-style-type: none"> <li>• <b>On</b> :               <ul style="list-style-type: none"> <li>- Activates forcing of domestic hot water.</li> <li>- The symbol  is displayed.</li> <li>- If a domestic hot water tank is connected to the boiler circuit, the boiler will give priority to forcing heating of the DHW tank, independently of the other parameters.</li> </ul> </li> <li>• <b>Off</b> : Deactivates forcing of domestic hot water.</li> </ul>   |
| Central heating mode CH1 | Boiler operating mode.                      | <ul style="list-style-type: none"> <li>• <b>On</b> :               <ul style="list-style-type: none"> <li>- Heating is always activated.</li> <li>- The symbols ,  and  are displayed.</li> </ul> </li> <li>• <b>Reduced</b> :               <ul style="list-style-type: none"> <li>- Heating is deactivated.</li> <li>- The symbols ,  and  are displayed.</li> </ul> </li> <li>• <b>Timed</b> :               <ul style="list-style-type: none"> <li>- Heating is dependent on the time range programmed.</li> <li>- The symbols  and  are displayed.</li> </ul> </li> <li>• <b>Off</b> :               <ul style="list-style-type: none"> <li>- The boiler is shut down and frost protection is active.</li> <li>- The symbol  is displayed.</li> </ul> </li> </ul> |
| Room temperature CH1     | Room temperature set point in comfort mode. |   |
| Hot water heating        | Setting domestic hot water production.      | <ul style="list-style-type: none"> <li>• <b>On</b> : Enables domestic hot water production.</li> <li>• <b>Off</b> :               <ul style="list-style-type: none"> <li>- Disables domestic hot water production.</li> <li>- The symbol  disappears from the display.</li> </ul> </li> <li>• <b>Eco</b> : Not used.</li> </ul>  |
| Hot water temp setpoint  | Domestic hot water temperature set point.   |   |

#### 9.1.2 Information menu

Tab.37 Menu Information

| Information          | Description   | Value |
|----------------------|---|-------|
| Room temperature     | Is displayed if the control system unit is configured as a room temperature appliance |       |
| Room temperature min |   |       |
| Room temperature max |   |       |
| Boiler temperature   | Boiler flow temperature   | °C    |
| Outside temp         | Outside temperature   | °C    |

| Information                | Description  | Value         |
|----------------------------|--|---------------|
| Outside temp min           | Minimum outside temperature value memorised<br> <b>Note</b><br>The outside sensor must be connected.                                    | °C            |
| Outside temp max           | Maximum outside temperature value memorised<br> <b>Note</b><br>The outside sensor must be connected.                                    | °C            |
| Hot water temp 1           | Domestic hot water temperature<br> <b>Note</b><br>The value displayed comes from the sensor on the boiler's domestic hot water circuit. | °C            |
| Collector temp 1           | Instantaneous temperature of the solar panel sensor (when associated to a solar system)  | °C            |
| State central heating CH1  | Operating mode of heating circuit 1  |               |
| State central heating CH2  | Operating mode of heating circuit 2  |               |
| State central heating CH3  | Operating mode of heating circuit 3  |               |
| State hot water            | Domestic hot water circuit operating mode  |               |
| State boiler               | Boiler operating mode  |               |
| State solar                | Indicates solar running (when associated to a solar system)  | -             |
| Telephone customer service | Telephone number of the After Sales Service  | 0845 070 1057 |

### 9.1.3 List of user parameters

Tab.38 Menu **Set time and date**

| Parameter number | Parameter       | Description                   |
|------------------|-----------------|-------------------------------|
| 1                | Hours / minutes | Setting the time              |
| 2                | Day / month     | Setting the day and the month |
| 3                | Year            | Setting the year              |

Tab.39 Menu **Operator section**

| Parameter number | Parameter        | Description   | Factory setting |
|------------------|------------------|---|-----------------|
| 20               | Change Language  | Setting the interface language  | English         |
| 27               | Programming lock | Setting the programming lock<br><ul style="list-style-type: none"> <li>• Off : the parameters can be displayed and modified</li> <li>• On : the parameters can be displayed but cannot be modified</li> </ul> | Off             |

Tab.40 Menu **Time program**

| Parameter number  |                   |                   | Parameter    | Description  |
|-------------------|-------------------|-------------------|--------------|--|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |              |  |
| 500               | 520               | 540               | Select days  | Selecting the days or group of days for the timer program. |
| 514               | 534               | 554               | Mon-Sun      | Selecting a default timer program.                         |
| 501               | 521               | 541               | 1st Time ON  | Start of timer period 1.                                   |
| 502               | 522               | 542               | 1st Time OFF | End of timer period 1.                                     |
| 503               | 523               | 543               | 2nd Time ON  | Start of timer period 2.                                   |
| 504               | 524               | 544               | 2nd Time OFF | End of timer period 2.                                     |

| Parameter number  |                   |                   | Parameter      | Description                                       |
|-------------------|-------------------|-------------------|----------------|---|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |                |   |
| 505               | 525               | 545               | 3rd Time ON    | Start of timer period 3.                          |
| 506               | 526               | 546               | 3rd Time OFF   | End of timer period 3.                            |
| 516               | 536               | 556               | Default values | Reset the timer programming parameters (Yes / No) |

Tab.41 Menu Time hot water

| Parameter number | Parameter      | Description  |
|------------------|----------------|--|
| 560              | Select days    | Selecting the days or group of days for the timer program. |
| 574              | Mon-Sun        | Selecting a default timer program.                         |
| 561              | 1st Time ON    | Start of timer period 1.                                   |
| 562              | 1st Time OFF   | End of timer period 1.                                     |
| 563              | 2nd Time ON    | Start of timer period 2.                                   |
| 564              | 2nd Time OFF   | End of timer period 2.                                     |
| 565              | 3rd Time ON    | Start of timer period 3.                                   |
| 566              | 3rd Time OFF   | End of timer period 3.                                     |
| 576              | Default values | Reset the timer programming parameters (Yes / No ).        |

Tab.42 Menu Holiday Settings

| Parameter number  |                   |                   | Parameter       | Description   | Factory setting |
|-------------------|-------------------|-------------------|-----------------|---|-----------------|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |                 |   |                 |
| 641               | 651               | 661               | Select          | Selecting the holiday period  | Period 1        |
| 642               | 652               | 662               | Start           | Selecting the day and month of the start of the current holiday period. |                 |
| 643               | 653               | 663               | End             | Selecting the day and month of the end of the current holiday period.   |                 |
| 648               | 658               | 668               | Operating level | Boiler operating mode during the holiday period.<br>• Off<br>• Reduced  | Off             |

Tab.43 Menu Temps / mode CH1 – Temps / mode CH2 – Temps / mode CH3

| Parameter number  |                   |                   | Parameter      | Description  | Factory setting |
|-------------------|-------------------|-------------------|----------------|--|-----------------|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |                |  |                 |
| 700               | 1000              | 1300              | Operating mode | The control unit is installed on the boiler:<br>• Off : heating is deactivated.<br>• Timed : heating is dependent on the timer program.<br>• Reduced : heating is in permanent reduced mode.<br>• On : heating is in permanent comfort mode.<br>The control unit is installed as a room temperature control system:<br>• Off : the boiler starts up when the room temperature falls below the frost protection set point.<br>• Timed : heating is dependent on the timer program.<br>• Reduced : the room temperature set point is the reduced set point (parameters 712, 1010, 1310)<br>• On : the room temperature set point is the comfort set point (parameters 710, 1010, 1310) | On              |

| Parameter number  |                   |                   | Parameter             | Description | Factory setting |
|-------------------|-------------------|-------------------|-----------------------|-------------|-----------------|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |                       |             |                 |
| 710               | 1010              | 1310              | Comfort setpoint      |             | 20°C            |
| 712               | 1012              | 1310              | Reduced temp setpoint |             | 16°C            |

### 9.1.4 List of installer parameters

Tab.44 Menu **Operator** section

| Parameter number | Parameter                | Description  | Factory setting      |
|------------------|--------------------------|--|----------------------|
| 24               | Lighting                 | <ul style="list-style-type: none"> <li>• Off</li> <li>• Temporarily</li> <li>• Permanently</li> </ul>  | Temporarily          |
| 29               | Units                    | <ul style="list-style-type: none"> <li>• °C, bar</li> <li>• °F, PSI</li> </ul>   | °C, bar              |
| 40               | Used as                  | <ul style="list-style-type: none"> <li>• <b>Operator unit 1</b> : The control system unit is installed on the boiler.</li> <li>• <b>Room unit 1</b> : The control system unit is configured as a room temperature unit for heating circuit 1.</li> <li>• <b>Room unit 2</b> : The control system unit is configured as a room temperature unit for heating circuit 2.</li> <li>• <b>Room unit 3</b> : The control system unit is configured as a room temperature unit for heating circuit 3.</li> </ul> | Operator unit 1      |
| 42               | Assignment device 1      | As Room Temperature Unit 1, the action of the control system unit can be assigned to CH1 or to two heating circuits: <ul style="list-style-type: none"> <li>• Temps / mode CH1</li> <li>• Central heating 1 and 2</li> <li>• Central Heating 1 and 3</li> <li>• All central heatings</li> </ul>  | All central heatings |
| 43               | Action operation         | <ul style="list-style-type: none"> <li>• <b>Locally</b> : The room temperature unit controls only the respective heating circuit.</li> <li>• <b>Centrally</b> : Only room temperature unit 1 can be centralised. It also controls the domestic hot water and standby mode.</li> </ul>  | Centrally            |
| 54               | Readjustment room sensor | -3°C to +3°C   | 0°C                  |
| 70               | Software version         |  |                      |

Tab.45 Menu **Wireless**

| Parameter number | Parameter          | Description  |
|------------------|--------------------|--|
| 120              | Binding            | Activation of wireless connection with the base unit.      |
| 121              | Test mode          | The test mode is used to check the wireless communication. |
| 130              | Room unit 1        | Checking the link.   |
| 131              | Room unit 2        | Checking the link.   |
| 132              | Room unit 3        | Checking the link.   |
| 133              | Outside sensor     | Checking the link.   |
| 134              | Repeater           | Checking the link.   |
| 135              | In operation       | Checking the link.   |
| 140              | Delete all devices | Deletes all appliances                                     |

Tab.46 Temps / mode CH1 - Temps / mode CH2 menus - Temps / mode CH3

| Parameter number  |                   |                   | Parameter                           | Description   | Unit    | Factory setting  |
|-------------------|-------------------|-------------------|-------------------------------------|---|---------|--|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |                                     |   |         |  |
| 714               | 1014              | 1314              | <b>Frost protection setpoint</b>    |   | °C      | 6  |
| 720               | 1020              | 1320              | <b>Heating curve slope</b>          | Heating curve gradient: The regulator calculates the flow temperature set point which is used for the control system, according to outside weather conditions.  | –       | <ul style="list-style-type: none"> <li>• Heating circuit 1: 1.5</li> <li>• Heating circuit 2: 1.5</li> <li>• Heating circuit 3: 1.5</li> </ul> |
| 730               | 1030              | 1330              | <b>Summer/winter heating limit</b>  | Limit temperature for switching between Heating/Protection mode. Triggers or shuts down the heating in the course of the year according to variations in outside temperature. This switch is made automatically in Automatic Mode.  |         | 20   |
| 732               | 1032              | 1332              | <b>24-hour heating limit</b>        | The heating is shut down when the outside temperature is equal to the room temperature + parameter 732 (deactivated in Comfort mode).   | °C      | 0  |
| 740               | 1040              | 1340              | <b>Flow temp setpoint min</b>       | The flow set point calculated is limited by the set value.  | °C      | 25   |
| 741               | 1041              | 1341              | <b>Flow temp setpoint max</b>       | The flow set point calculated is limited by the set value.  | °C      | 80   |
| 742               | 1042              | 1342              | <b>Flow temp setpoint room stat</b> | The set flow value is applied in room temperature thermostat mode. '---' the boiler is running in modulation mode.  | °C      | 80   |
| 746               | 1046              | 1346              | <b>Delay heat request</b>           |   |         |  |
| 750               | 1050              | 1350              | <b>Room influence</b>               | <ul style="list-style-type: none"> <li>• Influence of the room temperature and the outside temperature on calculating the flow temperature: ---%: Simple regulation in accordance with outside weather conditions:</li> <li>• 1...99%: Regulation in accordance with outside weather conditions with room temperature influence.</li> <li>• 100%: Regulation in accordance with the room temperature only.</li> </ul> | %       | 50   |
| 760               | 1060              | 1360              | <b>Room temp limitation</b>         | Cuts the circulating pump if the room temperature exceeds the current set point + parameter 760, 1060, 1360.  | °C      | <b>0.5</b>   |
| 809               | 1109              | 1409              | <b>Continuous pump operation</b>    | <ul style="list-style-type: none"> <li>• <b>No</b> : The heating circuit / boiler pump may be shut down during an accelerated decline in temperature or when the room temperature set point is reached.</li> <li>• <b>Yes</b> : The heating circuit / boiler pump also continues to run during the accelerated decline in temperature and when the room temperature set point is reached.</li> </ul>                  | –       | no   |
| 834               | 1134              | 1434              | <b>Actuator running time</b>        | Setting the stroke of the servomotor on the mixing valve used   | seconds | 30   |

| Parameter number  |                   |                   | Parameter                         | Description   | Unit | Factory setting |
|-------------------|-------------------|-------------------|-----------------------------------|---|------|-----------------|
| Heating circuit 1 | Heating circuit 2 | Heating circuit 3 |                                   |   |      |                 |
| 850               | 1150              | 1450              | <b>Floor curing function</b>      | Controlled screed-drying function: <ul style="list-style-type: none"> <li>• <b>Off</b> : The function is inoperative.</li> <li>• <b>Curing/functional heating</b> : Active for 7 days, 3 days at 25°C and 4 days at 55°C.</li> <li>• <b>Curing heating</b> : Active for 18 days, 6 days from 25°C to 55°C increasing by 5°C a day, 6 days at 55°C, 6 days from 55°C to 25°C diminishing by 5°C a day.</li> <li>• <b>Functional/curing heating</b> : "Functional Heating" cycle first, and then "Ready for Occupation".</li> <li>• <b>Functional heating</b> : "Curing Mode" cycle first, and then "Heating Functional".</li> <li>• <b>Manually</b> : Regulation is based on the "Manual Control Drying" set point.</li> </ul> | S    | Off             |
| 851               | 1151              | 1451              | <b>Floor curing setp manually</b> | The flow temperature set point of the "Manual" controlled drying function can be set separately for each heating circuit.   | °C   | 25              |
| 855               | 1155              | 1455              | <b>Floor curing setp current</b>  | Displays the current day of the controlled screed-drying function. With '---' the function is deactivated.  | -    | '---'           |
| 856               | 1156              | 1456              | <b>Days complete.current</b>      | Displays the current flow temperature set point of the controlled screed-drying function. With '---' the function is deactivated.   | -    | '---'           |

Tab.47 Menu Temps / mode hot water

| Parameter number | Parameter                            | Description  | Factory setting   |
|------------------|--------------------------------------|--|-------------------|
| 1600             | <b>Operating mode</b>                | <ul style="list-style-type: none"> <li>• <b>Off</b>: Permanent running at the frost-protection set point.</li> <li>• <b>On</b> : Domestic hot water loading is done automatically at the nominal set point.</li> <li>• <b>Eco</b> : The temperature maintenance function is deactivated.</li> </ul>  | On                |
| 1610             | <b>Hot water temp setpoint</b>       | DHW set point during release times   | 60°C              |
| 1612             | <b>Reduced temp setpoint</b>         | Reduced set point outside release times  | 35°C              |
| 1620             | <b>Release</b>                       | Start-up enabled: <ul style="list-style-type: none"> <li>• <b>Time hot water</b> : This setting provides domestic hot water production with a dedicated timer program.</li> <li>• <b>Time setting central heating</b> : The release of domestic hot water is done with the same timer program as the heating circuits.</li> <li>• <b>24h/day</b> : Default setting for instantaneous boilers.</li> </ul> | Time hot water    |
| 1640             | <b>Legionella function</b>           | <ul style="list-style-type: none"> <li>• <b>Off</b></li> <li>• <b>Periodically</b></li> <li>• <b>Fixed weekday</b></li> </ul>  | Off               |
| 1641             | <b>Legionella funct periodically</b> | Determines after how many days the anti-legionella function must be reactivated.   | 7                 |
| 1642             | <b>Legionella funct weekday</b>      | Determines on which day the anti-legionella function must be activated.  | Monday            |
| 1644             | <b>Legionella funct time</b>         | Determines the start-up time of the anti-legionella function (Hours / Minutes).  | --/--             |
| 1660             | <b>Circulating pump release</b>      | The circulating pump is tripped during the release time: <ul style="list-style-type: none"> <li>• <b>Time central heating CH3</b></li> <li>• <b>Hot water release</b></li> <li>• <b>Time hot water</b></li> <li>• <b>Time auxiliary</b></li> </ul>   | Hot water release |

| Parameter number | Parameter                   | Description  | Factory setting |
|------------------|-----------------------------|--|-----------------|
| 1663             | <b>Circulation setpoint</b> | The regulator monitors the temperature measured while the anti-legionella function is running.   | <b>45°C</b>     |
| 1680             | <b>Optg mode changeover</b> | In cases of external switching via the Hx inputs, the regime to which the switch must be made must first be defined. <ul style="list-style-type: none"> <li>• None</li> <li>• Off</li> </ul> | <b>None</b>     |

Tab.48 Menu **Boiler Settings**

| Parameter number | Parameter                        | Description   | Unit | Factory setting        |
|------------------|----------------------------------|---|------|------------------------|
| 2214             | Setpoint manual control          | In manual mode, the flow temperature set point can be set to a fixed value. | °C   | 80°C                   |
| 2441             | Fan output heating max           | Maximum fan speed in heating mode.  | rpm  | depending on the model |
| 2470             | <b>Delay heat req special op</b> |   | s    | 0 s                    |

Tab.49 **Solar** menu (with additional extension module)


| Parameter number | Parameter                          | Description  | Unit    | Factory setting |
|------------------|------------------------------------|--|---------|-----------------|
| 3810             | <b>Temp diff on</b>                | Min. $\Delta T$ between the solar collector sensor and the solar domestic hot water tank for running the solar pump.       | °C      | <b>8</b>        |
| 3811             | <b>Temp diff off</b>               | Max. $\Delta T$ between the solar collector sensor and the solar domestic hot water tank for shutting down the solar pump. | °C      | <b>4</b>        |
| 3830             | <b>Collector start function</b>    | To measure the temperature on the solar collector correctly (pipes empty) (--- = deactivated)                              | min     | <b>30</b>       |
| 3831             | <b>Min run time collector pump</b> | Minimum running of the collector pump.   | Seconds | <b>30</b>       |
| 3850             | <b>Collector overtemp prot</b>     | If there is a danger of overheating in the collector, tank loading continues to eliminate any excess heat.                 | °C      | <b>120</b>      |

Tab.50 Menu **Configuration**
















| Parameter number | Parameter                     | Description   | Factory setting            |
|------------------|-------------------------------|---|----------------------------|
| 5710             | <b>Temps / mode CH1</b>       | Activation of heating circuit 1: <ul style="list-style-type: none"> <li>• Off</li> <li>• On</li> </ul>  | <b>On</b>                  |
| 5715             | <b>Temps / mode CH2</b>       | Activation of heating circuit 2: <ul style="list-style-type: none"> <li>• Off</li> <li>• On</li> </ul>  | <b>Off</b>                 |
| 5721             | <b>Temps / mode CH3</b>       | Activation of heating circuit 3: <ul style="list-style-type: none"> <li>• Off</li> <li>• On</li> </ul>  | <b>Off</b>                 |
| 5730             | <b>Hot water sensor</b>       | Selection of the domestic hot water sensor: <ul style="list-style-type: none"> <li>• <b>Hot water sensor B3</b> : Domestic hot water sensor for tank</li> <li>• <b>Thermostat</b> : The sensor used for domestic hot water is a thermostat</li> </ul>   | <b>Hot water sensor B3</b> |
| 5731             | <b>HW controlling element</b> | Type of actuator for controlling the domestic hot water requirement: <ul style="list-style-type: none"> <li>• <b>No charging request</b> : No function</li> <li>• <b>Charging pump</b> : Domestic hot water loading is done with a pump.</li> <li>• <b>Diverting valve</b> : Domestic hot water loading is done with a bypass valve.</li> </ul> | <b>Diverting valve</b>     |








| Parameter number | Parameter        | Description  | Factory setting     |
|------------------|------------------|--|---------------------|
| 5890             | Relay output QX1 | <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>Circulating pump Q4</b> : Domestic hot water circulating pump.</li> <li>• <b>El imm heater HW K6</b></li> <li>• <b>Collector pump Q5</b> : Circulating pump for the solar collector circuit.</li> <li>• <b>Cons circuit pump VK1 Q15</b> : The VK1 consumer circuit pump can be used for an additional consumer boiler.</li> <li>• <b>Boiler pump Q1</b> : The pump connected is used for circulating the boiler water.</li> <li>• <b>Bypass pump Q12</b></li> <li>• <b>Alarm output K10</b> : Presence of an error signalled by relay. Closure of the contact is on a time delay of 2 min.</li> <li>• <b>2nd pump speed CH1 Q21</b></li> <li>• <b>2nd pump speed CH2 Q22</b></li> <li>• <b>2nd pump speed CH3 Q23</b></li> <li>• <b>heating pump CH3 Q20</b> : The heating circuit with CH3 pump is activated (3WV Zone).</li> <li>• <b>Cons circuit pump VK2 Q18</b></li> <li>• <b>System pump Q14</b> : The pump connected is used as the mains pump.</li> <li>• <b>Heat gen shutoff valve Y4</b></li> <li>• <b>Solid fuel boiler pump Q10</b> : Integration of a solid fuel boiler: Circulating pump in the boiler circuit.</li> <li>• <b>Time setting 5 K13</b> : The relay is controlled according to the settings on timer program 5.</li> <li>• <b>Buffer return valve Y15</b></li> <li>• <b>Solar pump ext exch K9</b></li> <li>• <b>Solar ctrl elem buffer K8</b></li> <li>• <b>Solar ctrl elem swi pool K18</b> : Contact for heating the swimming pool with solar energy (if using several heat exchangers).</li> <li>• <b>Cons circuit pump VK2 Q18</b></li> <li>• <b>Cascade pump Q25</b> : Boiler pump common to all boilers in a cascade.</li> <li>• <b>St tank transfer pump Q11</b></li> <li>• <b>Hot water mixing pump Q35</b></li> <li>• <b>HW interm circ pump Q33</b></li> <li>• <b>Heat request K27</b></li> <li>• <b>Refrigeration request K28</b> : Cooling requirement for cooling circuit 1.</li> <li>• <b>heating pump CH1 Q2</b> : The heating circuit with CH1 pump is activated.</li> <li>• <b>heating pump CH2 Q6</b> : The heating circuit with CH2 pump is activated.</li> <li>• <b>Hot water ctrl elem Q3</b> : Pump / distribution valve for hot water tank.</li> <li>• <b>Instant WH ctrl elem Q34</b> : Pump / distribution valve for boiler producing instantaneous hot water.</li> <li>• <b>Water refill K34</b> : Solenoid filling valve command.</li> <li>• <b>2nd boiler pump speed Q27</b> : Boiler pump 2nd speed.</li> <li>• <b>Status output K35</b></li> <li>• <b>Status information K36</b></li> <li>• <b>Flue gas damper K37</b></li> <li>• <b>Fan shutdown K38</b> : Fan shut-down function for cutting the power to the fan if it is not used.</li> </ul> | heating pump CH1 Q2 |



| Parameter number | Parameter            | Description  | Factory setting     |
|------------------|----------------------|--|---------------------|
| 5931             | Sensor input BX2     | <ul style="list-style-type: none"> <li>• <b>None</b> : No function on the sensor input.</li> <li>• <b>Hot water sensor B31</b> : Sensor in the bottom section of the domestic hot water tank.</li> <li>• <b>Collector sensor B6</b> : Solar collector sensor.</li> <li>• <b>HW circulation sensor B39</b> : Circulation / DHW preparation sensor.</li> <li>• <b>Buffer sensor B4</b> : Sensor in the top section of the storage tank.</li> <li>• <b>Buffer sensor B41</b> : Sensor in the bottom section of the storage tank.</li> <li>• <b>Flue gas temp sensor B8</b> : Flue gas sensor</li> <li>• <b>Common flow sensor B10</b> : Common flow sensor (cascade).</li> <li>• <b>Solid fuel boiler sensor B22</b> : Sensor for solid fuel boiler.</li> <li>• <b>HW charging sensor B36</b></li> <li>• <b>Buffer sensor B42</b> : Third sensor (in the middle) of the storage tank.</li> <li>• <b>Common return sensor B73</b></li> <li>• <b>Cascade return sensor B70</b> : Cascade return sensor.</li> <li>• <b>Swimming pool sensor B13</b> : Swimming pool sensor.</li> <li>• <b>Solar flow sensor B63</b> : Solar flow sensor for measuring efficiency.</li> <li>• <b>Solar return sensor B64</b> : Solar return sensor for measuring efficiency.</li> <li>• <b>Primary exch sensor B26</b></li> </ul> | None                |
| 5932             | Sensor input BX3     |  See<br>Sensor input BX2  | None                |
| 5970             | Function input H4    | <ul style="list-style-type: none"> <li>• <b>None</b> : Default setting for boilers with domestic hot water tank.</li> <li>• <b>Flow measurement Hz</b> : Default setting for instantaneous boilers.</li> <li>• <b>Error/alarm message</b></li> </ul>   | None                |
| 5971             | Contact type H4      | <ul style="list-style-type: none"> <li>• <b>NC</b></li> <li>• <b>NO</b></li> </ul>   | Error/alarm message |
| 5973             | Frequency value 1 H4 | Definition of the parameters for collector specifications  | 15                  |
| 5974             | Function value 1 H4  | Definition of the parameters for collector specifications  | 20                  |
| 5975             | Frequency value 2 H4 | Definition of the parameters for collector specifications  | 162                 |
| 5976             | Function value 2 H4  | Definition of the parameters for collector specifications  | 120                 |

| Parameter number | Parameter         | Description   | Factory setting     |
|------------------|-------------------|---|---------------------|
| 5977             | Function input H5 | <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>Optg mode change CHs+HW</b> : Heating and domestic hot water circuit changeover mode.</li> <li>• <b>Optg mode changeover HW</b> : Domestic hot water circuit changeover mode.</li> <li>• <b>Optg mode changeover CHs</b> : The regimes of the heating circuits are switched to parameter mode on line 900-1200-1500.</li> <li>• <b>Optg mode changeover CH1</b>: The regimes of the heating circuits are switched to parameter mode on line 900-1200-1500.</li> <li>• <b>Optg mode changeover CH2</b>: The regimes of the heating circuits are switched to parameter mode on line 900-1200-1500.</li> <li>• <b>Optg mode changeover CH3</b>: The regimes of the heating circuits are switched to parameter mode on line 900-1200-1500.</li> <li>• <b>Heat generation lock</b> : The generator is locked. All heating circuit and domestic hot water temperature requirements are ignored. (boiler frost protection active)</li> <li>• <b>Error/alarm message</b> : The input causes an error message on the regulator</li> <li>• <b>Consumer request VK1</b> : The input causes an error message on the regulator</li> <li>• <b>Consumer request VK2</b> : The input causes an error message on the regulator</li> <li>• <b>Release swimpool source htg</b> : Swimming pool requirement</li> <li>• <b>Excess heat discharge</b> : Enables an external generator to force the switches (heating circuit, DHW, Hx pump) to dissipate any heat surplus.</li> <li>• <b>Release swi pool solar</b> : This function enables the release of solar swimming pool heating by an external resource.</li> <li>• <b>Operating level HW</b> : The temperature level can be adjusted by a contact (external timer program) rather than by the internal timer program.</li> <li>• <b>Operating level CH1</b> : The temperature level can be adjusted by a contact (external timer program) rather than by the internal timer program.</li> <li>• <b>Operating level CH2</b> : The temperature level can be adjusted by a contact (external timer program) rather than by the internal timer program.</li> <li>• <b>Operating level CH3</b> : The temperature level can be adjusted by a contact (external timer program) rather than by the internal timer program.</li> <li>• <b>Room thermostat CH1</b> : This input is used to generate a room temperature thermostat demand for heating circuit 1.</li> <li>• <b>Room thermostat CH2</b>: This input is used to generate a room temperature thermostat demand for heating circuit 2.</li> <li>• <b>Room thermostat CH3</b>: This input is used to generate a room temperature thermostat demand for heating circuit 3.</li> <li>• <b>Hot water flow switch</b> : Connection of the flow rate controller on the instantaneous water heater.</li> <li>• <b>Hot water thermostat</b> : Connection of the domestic hot water tank thermostat.</li> <li>• <b>Pulse count</b> : Impulse counter.</li> <li>• <b>Checkb sign flue gas damper</b> : Feedback on flue gas valve position.</li> <li>• <b>Boiler flow switch</b> : Start-up authorisation by flow rate controller.</li> <li>• <b>Boiler pressure switch</b> : Start-up authorisation by pressure switch.</li> </ul> | Room thermostat CH1 |
| 5978             | Contact type H5   | <ul style="list-style-type: none"> <li>• NC</li> <li>• NO</li> </ul>  | NO                  |

| Parameter number | Parameter                   | Description  | Factory setting |
|------------------|-----------------------------|--|-----------------|
| 6020             | Function extension module 1 | <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>Multifunctional</b> : The functions that can be assigned to the inputs/ outputs.</li> <li>• <b>Temps / mode CH1</b> : Settings corresponding to the operator chapter on "Heating Circuit 1".</li> <li>• <b>Temps / mode CH2</b>: Settings corresponding to the operator chapter on "Heating Circuit 2".</li> <li>• <b>Temps / mode CH3</b> : Settings corresponding to the operator chapter on "Heating Circuit 3".</li> <li>• <b>Return temp controller</b> : Not used</li> <li>• <b>Solar HW</b> : Settings corresponding to the operator chapter on "Thermal Solar".</li> <li>• <b>Primary contr/system pump</b> : Not used</li> </ul> | Without         |
| 6021             | Function extension module 2 |  <b>See</b><br>Function extension module 1  | Without         |
| 6022             | Function extension module 3 |  <b>See</b><br>Function extension module 1  | None            |
| 6024             | Funcnt input EX21 module 1  | <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>Limit thermostat CH</b></li> </ul>  | None            |
| 6026             | Funcnt input EX21 module 2  |  <b>See</b><br>Funcnt input EX21 module 1   | without         |
| 6028             | Funcnt input EX21 module 3  |  <b>See</b><br>Funcnt input EX21 module 1  | without         |
| 6030             | Relay output QX21 module 1  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6031             | Relay output QX22 module 1  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6032             | Relay output QX23 module 1  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6033             | Relay output QX21 module 2  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6034             | Relay output QX22 module 2  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6035             | Relay output QX23 module 2  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6036             | Relay output QX21 module 3  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6037             | Relay output QX22 module 3  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6038             | Relay output QX23 module 3  |  <b>See</b><br>QX1 relay outlet   | without         |
| 6040             | Sensor input BX21 module 1  |  <b>See</b><br>BX2 sensor inlet   | without         |
| 6041             | Sensor input BX22 module 1  |  <b>See</b><br>BX2 sensor inlet   | without         |

| Parameter number | Parameter                   | Description   | Factory setting |
|------------------|-----------------------------|---|-----------------|
| 6042             | Sensor input BX21 module 2  |  See BX2 sensor inlet        | without         |
| 6043             | Sensor input BX22 module 2  |  See BX2 sensor inlet        | without         |
| 6044             | Sensor input BX21 module 3  |  See BX2 sensor inlet        | without         |
| 6045             | Sensor input BX22 module 3  |  See BX2 sensor inlet        | without         |
| 6046             | Function input H2 module 1  |  See the H5 inlet function   | without         |
| 6047             | Contact type H2 module 1    | <ul style="list-style-type: none"> <li>• NC</li> <li>• NO</li> </ul>  | NO              |
| 6049             | Voltage value 1 H2 module 1 | Definition of parameters for collector specifications   | 0               |
| 6050             | Funct value 1 H2 module 1   | Definition of parameters for collector specifications   | 0               |
| 6051             | Voltage value 2 H2 module 1 | Definition of parameters for collector specifications   | 0               |
| 6052             | Funct value 2 H2 module 1   | Definition of parameters for collector specifications   | 0               |
| 6054             | Function input H2 module 2  |  See the H5 inlet function | without         |
| 6055             | Contact type H2 module 2    | <ul style="list-style-type: none"> <li>• NC</li> <li>• NO</li> </ul>  | NO              |
| 6057             | Voltage value 1 H2 module 2 | Definition of parameters for collector specifications   | 0               |
| 6058             | Funct value 1 H2 module 2   | Definition of parameters for collector specifications   | 0               |
| 6059             | Voltage value 2 H2 module 2 | Definition of parameters for collector specifications   | 0               |
| 6060             | Funct value 2 H2 module 2   | Definition of parameters for collector specifications   | 0               |
| 6062             | Function input H2 module 3  |  See the H5 inlet function | without         |
| 6063             | Contact type H2 module 3    | <ul style="list-style-type: none"> <li>• NC</li> <li>• NO</li> </ul>  | NO              |
| 6065             | Voltage value 1 H2 module 3 | Definition of parameters for collector specifications   | 0               |
| 6066             | Funct value 1 H2 module 3   | Definition of parameters for collector specifications   | 0               |
| 6067             | Voltage value 2 H2 module 3 | Definition of parameters for collector specifications   | 0               |
| 6068             | Funct value 2 H2 module 3   | Definition of parameters for collector specifications   | 0               |
| 6097             | Sensor type collector       | Type of collector sensor: <ul style="list-style-type: none"> <li>• NTC</li> <li>• Pt 1000</li> </ul>          | NTC             |
| 6100             | Readjustm outside sensor    | The value of the outside temperature measurement can be offset by +/- 3°C.                                    | 0°C             |

| Parameter number | Parameter                  | Description                                | Factory setting |
|------------------|----------------------------|--|-----------------|
| 6110             | Time constant building     | Records the sensors used in the appliance. | No              |
| 6200             | Save sensors               | Information on the manufacturer            |                 |
| 6212             | Check no. heat source 1    |  |                 |
| 6213             | Check no. heat source 2    |  |                 |
| 6215             | Check no. storage tank     |  |                 |
| 6217             | Check no. heating circuits |  |                 |
| 6230             | Info 1 OEM                 |  |                 |
| 6231             | Info 2 OEM                 |  |                 |

Tab.51 Menu Error

| Parameter number | Parameter                   | Description   | Factory setting |
|------------------|-----------------------------|---|-----------------|
| 6704             | Display SW diagnostic code  | Display of the software troubleshooting code:<br>• No<br>• Yes    | Yes             |
| 6705             | SW diagnostic code          | Troubleshooting code currently pending                            |                 |
| 6706             | Burn ctrl phase lockout pos | Locking phase indicating the place where the error occurred.      |                 |
| 6710             | Reset alarm relay           | Alarm relay reset.  |                 |
| 6800             | History 1                   | Last error that occurred.   |                 |
| 6805             | SW diagnostic code 1        | Last troubleshooting code that occurred.                          |                 |
| 6806             | Burner control phase 1      | Last locking phase indicating the place where the error occurred. |                 |
| 6810 – 6996      | History 2 to History 20     | Error history.  |                 |

Tab.52 Menu Service/special operation

| Parameter number | Parameter                | Description   | Factory setting |
|------------------|--------------------------|---|-----------------|
| 7045             | Time since maintenance   | Resetting the boiler operating time after boiler servicing.   | 0 months        |
| 7130             | Chimney sweep function   | Chimney sweep function:<br>• Off<br>• On  | Off             |
| 7131             | Burner output            | Burner output during the chimney sweep function:<br>• Partial load<br>• Full load<br>• Max heating load | Full load       |
| 7140             | Manual control           | Manual control function:<br>• Off<br>• On   | Off             |
| 7143             | Controller stop function | Regulator shut-down function:<br>• Off<br>• On  | Off             |
| 7145             | Controller stop setpoint | Set point output during the regulator shut-down function: 0% to 100%                                    | 100%            |

| Parameter number | Parameter                  | Description   | Factory setting |
|------------------|----------------------------|---|-----------------|
| 7146             | Deaeration function        | Venting function:<br>• Off<br>• On  | Off             |
| 7147             | Type of venting            | Venting cycle operating mode:<br>• None<br>• Heating circuit continuous<br>• Heating circuit cycled<br>• Hot water continuous<br>• Hot water cycled | None            |
| 7170             | Telephone customer service |   |                 |
| 7231             | Refill time current week   | Value displayed   | 0 s             |
| 7232             | Refill time to date        | Value displayed   | 0 s             |
| 7233             | Number of refills to date  | Value displayed   | 0               |

Tab.53 Menu State

| Parameter number | Parameter                 | Description |
|------------------|---------------------------|-------------|
| 8000             | State central heating CH1 |             |
| 8001             | State central heating CH2 |             |
| 8002             | State central heating CH3 |             |
| 8003             | State hot water           |             |
| 8005             | State boiler              |             |
| 8007             | State solar               |             |
| 8008             | State solid fuel boiler   |             |
| 8009             | State burner              |             |
| 8010             | State buffer              |             |
| 8011             | State swimming pool       |             |

Tab.54 Menus Diagnostics heat generation

| Parameter number | Parameter                               | Description     |
|------------------|---|-----------------|
| 8310             | • Boiler temperature<br>• Control temp  | Value displayed |
| 8311             | • Boiler setpoint<br>• Control setpoint |                 |
| 8313             | Control sensor                          |                 |
| 8314             | Boiler return temp                      |                 |
| 8315             | Boiler return temp setpoint             |                 |
| 8316             | Flue gas temp                           |                 |
| 8321             | Primary exchanger temp                  |                 |
| 8323             | Fan speed                               |                 |
| 8326             | Burner modulation                       |                 |

| Parameter number | Parameter                  | Description |
|------------------|----------------------------|-------------|
| 8330             | Hours run 1st stage        | Value reset |
| 8526             | Solar Gain 24 Hour         |             |
| 8527             | Total Solar Gain           |             |
| 8530             | Hours run solar            |             |
| 8531             | Hours run collect overtemp |             |
| 8532             | Hours run collector pump   |             |


Tab.55 Menus **Burner control**

| Parameter number | Parameter               | Description   |
|------------------|-------------------------|---|
| 9512             | Required speed ignition | Ignition speed set point adjustable on the operating interface.                 |
| 9524             | Required speed LF       | Rotation speed set point at partial load adjustable on the operating interface. |
| 9529             | Required speed HF       | Rotation speed set point at nominal load adjustable on the operating interface. |
| 6624             | Manual source lock      |   |

## 9.2 Setting the parameters

### 9.2.1 Setting the date and time

Fig.76 Access to parameters

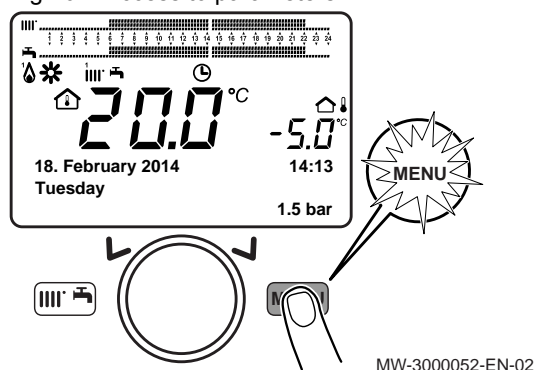


1. Press the  key to access the parameters.

Fig.77 Menu selection


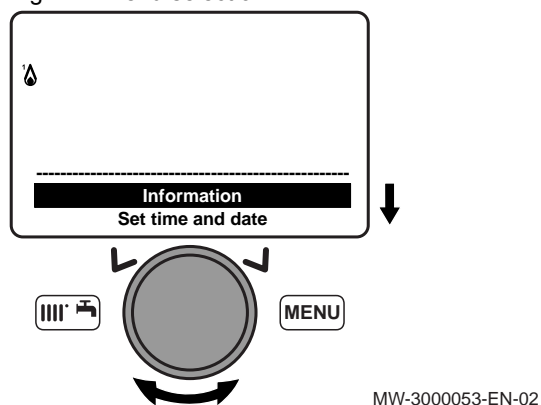



Fig.78 Time / Date parameter

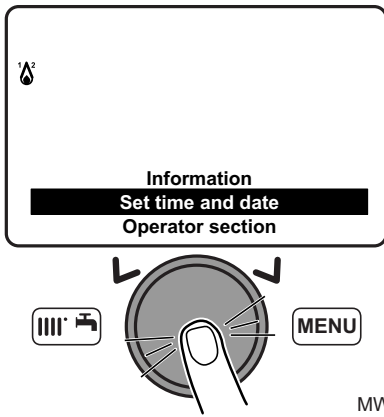

MW-3000054-EN-02

2. Select the **Set time and date** menu by turning the button.
  3. Confirm the menu selection by pressing the button .
- The parameter **Hours / minutes** appears.

Fig.79 Modification possible prior to confirmation

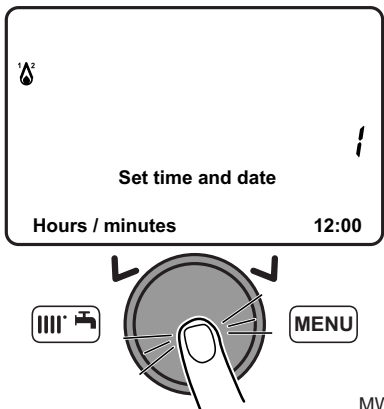

MW-3000055-EN-02

4. Confirm the parameter selection by pressing the button. The parameter flashes, it can be modified.
5. Modify the parameter by turning the button.
6. Confirm the setting by pressing the button.
7. Set the other settings parameters if necessary.



**Note**


Press the key to return to the main display.



**For more information, see**

List of user parameters, page 66


Fig.80

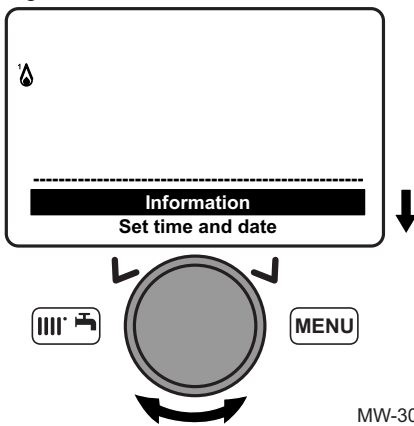

MW-3000056-EN-02

1. Press the key to access the parameters.
2. Select the **Operator section** menu by turning the button.

Fig.81

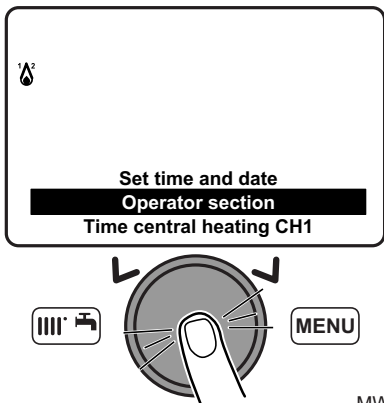


MW-3000057-EN-02

3. Confirm the menu selection by pressing the button. The parameter **Change Language** is displayed.



Fig.82

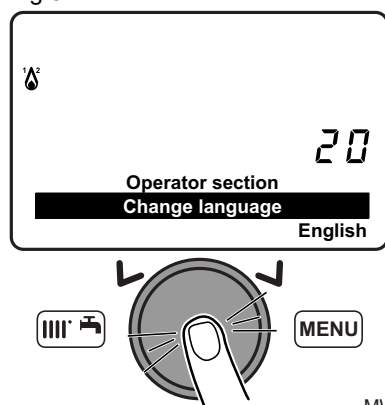


MW-3000058-EN-02

4. Confirm the menu selection by pressing the button. The language currently used flashes.
5. Modify the parameter by turning the button .
6. Confirm the setting by pressing the button.

**Note**

Press the key to return to the main display.


Fig.83 Selecting the Regime CH1 parameter

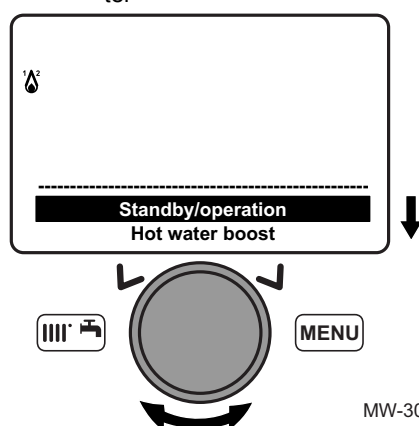

MW-3000059-EN-02

1. Press the key to access the shortcuts menu.
2. Select the parameter **Central heating mode CH1** by turning the button.
3. Press the button to confirm.

Fig.84 Confirming the operating mode selected

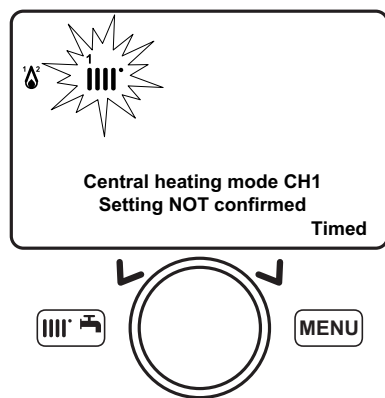

MW-3000060-EN-02

4. Select the appropriate operating mode.
5. Press the button to confirm.

**Note**

Press the key to return to the main display.


**For more information, see**

Shortcuts menu, page 65

### 9.2.4 Forcing domestic hot water production

1. Press the key to access the shortcuts menu.

Fig.85 Parameter selection 316:Hot water boost

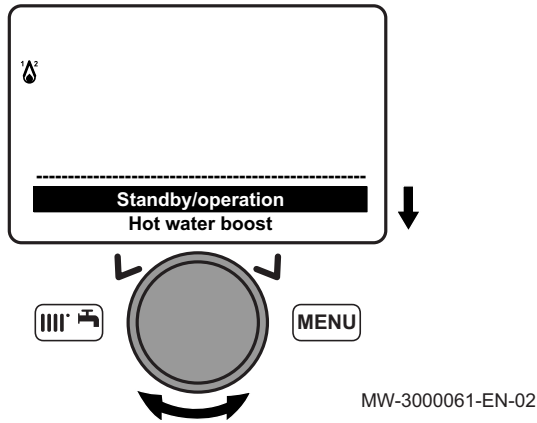

2. Select the parameter **316:Hot water boost** by turning the button.
3. Press the button to start forcing domestic hot water.


**Note**  
Press the button a second time to stop forcing domestic hot water.

**Note**  
Press the key to return to the main display.

**For more information, see**  
Shortcuts menu, page 65


### 9.2.5 Setting the room temperature set point (Onmode)

Fig.86 Selecting the parameter Room temperature CH1

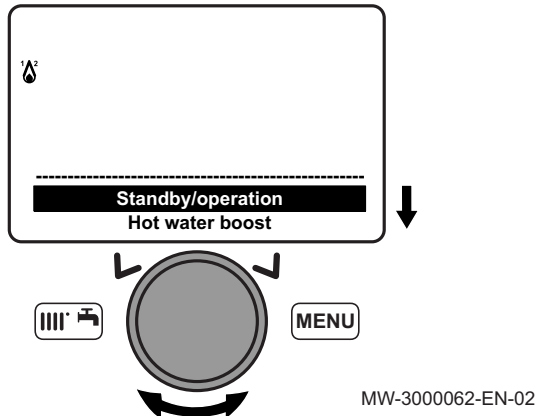

1. Press the key to access the shortcuts menu.
2. Select the parameter **Room temperature CH1** by turning the button.
3. Press the button to confirm.

Fig.87 Modification of the temperature set point

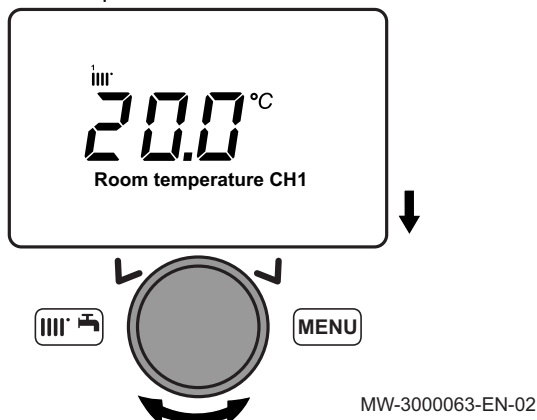

4. Turn the button to modify the temperature set point.
5. Press the button to confirm.


**Note**  
Press the key to return to the main display.

**For more information, see**  
Shortcuts menu, page 65

### 9.2.6 Modifying the domestic hot water production mode

1. Press the key to access the shortcuts menu.

Fig.88 Selecting the parameter Hot water heating

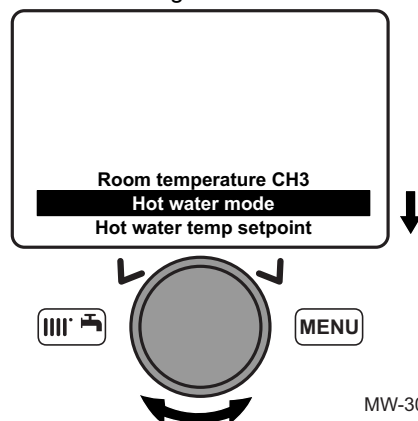


MW-3000064-EN-02

2. Select the parameter **Hot water heating** by turning the button.
3. Press the button to confirm.
4. Select the appropriate operating mode.
5. Press the button to confirm.

**Note**  
Press the key to return to the main display.

**For more information, see**  
Shortcuts menu, page 65


Fig.89 Selecting the parameter Hot water temp setpoint

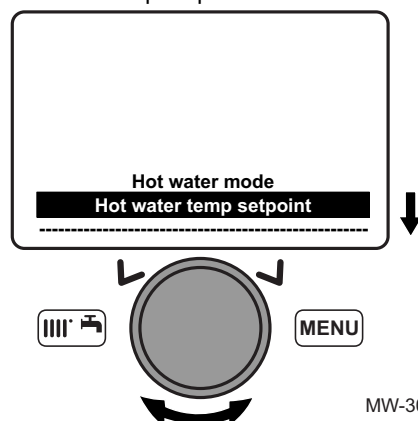

MW-3000066-EN-02

1. Press the key to access the shortcuts menu.
2. Select the parameter **Hot water temp setpoint** by turning the button.
3. Press the button to confirm.

Fig.90 Modification of the temperature set point

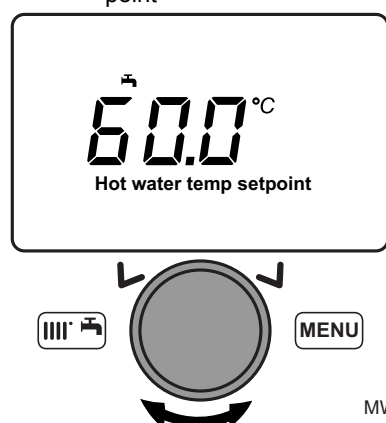

MW-3000067-EN-02

4. Turn the button to modify the temperature set point.
5. Press the button to confirm.


**Note**  
Press the key to return to the main display.

**For more information, see**  
Shortcuts menu, page 65

### 9.2.8 Setting the room temperature set point (Reduced mode)


1. Press the key to access the parameters.
2. Select the **Temps / mode CH1** menu by turning the button.

Fig.91 Selecting the menu Temps / mode CH1

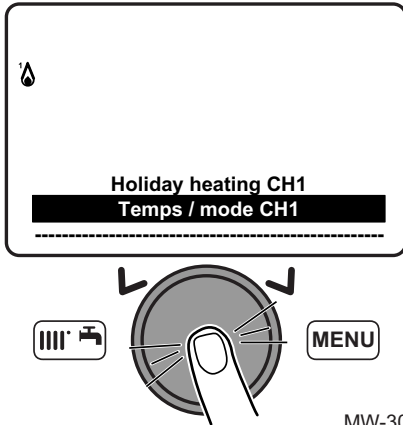


MW-300068-EN-03

Fig.92 Selecting the menu Reduced temp setpoint

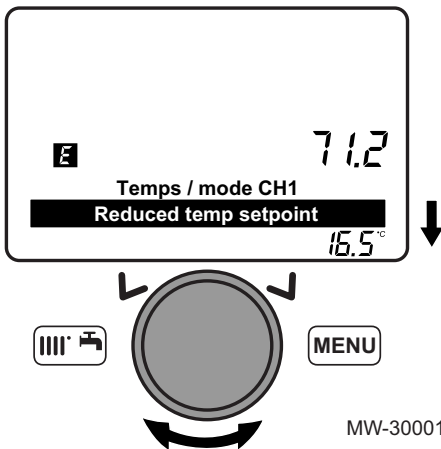

MW-3000129-EN-02

Fig.93 Modification of the temperature set point

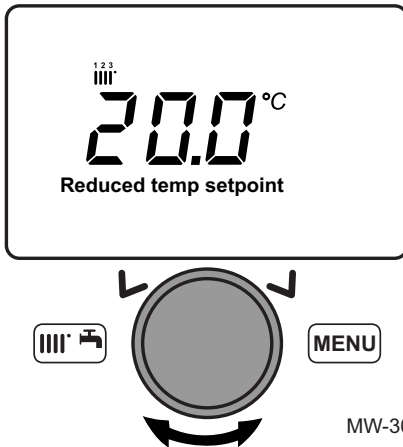

MW-3000070-EN-03

3. Confirm the menu selection by pressing the button . The parameter **Operating mode** appears.

4. Select the **Reduced temp setpoint** menu by turning the button.
5. Confirm the menu selection by pressing the button . The room temperature set point (Reducedmode) flashes.

6. Turn the button to modify the temperature set point.
7. Press the button to confirm.

**Note**  
Press the key to return to the main display.


### 9.2.9 Programming a Holiday period

This series of functions is used to program the boiler's behaviour in holiday periods or during prolonged absences. The various parameters are used to program one of eight Holiday periods.

**See**  
When the function is activated, the symbol is displayed.


1. Press the key to access the parameters.

Fig.94

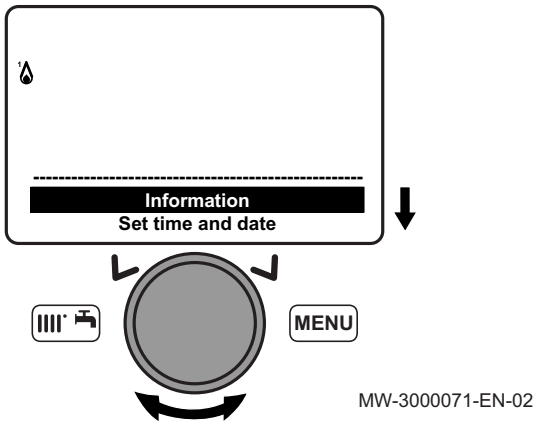

2. Select the **Holiday heating CH1** menu by turning the  button.

Fig.95

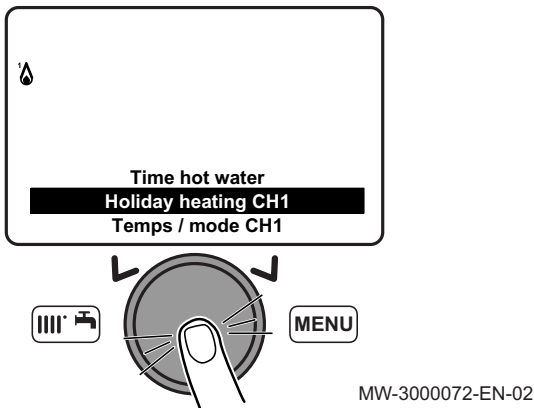


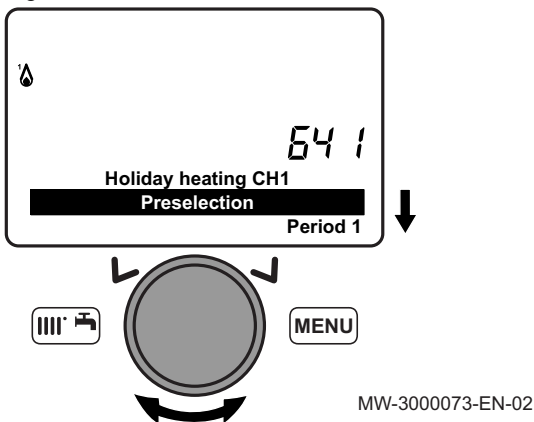
3. Confirm the menu selection by pressing the  button. The parameter **Select** is displayed.

Fig.96




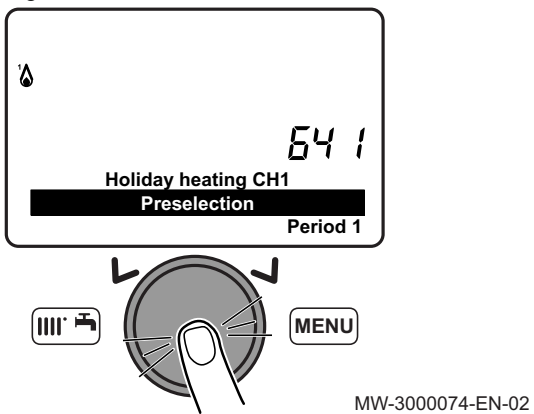
4. Select the Holiday period to be programmed by turning the  button.

Fig.97




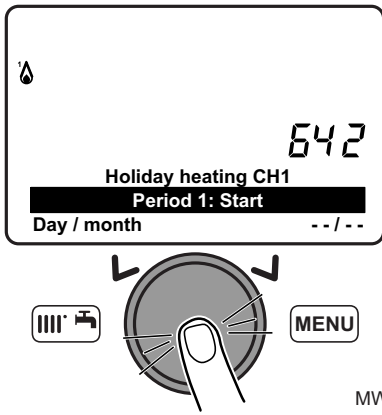
5. Confirm by pressing the  button.


Fig.98



MW-3000075-EN-02

6. Select the **Start** parameter by turning the button.
7. Confirm the menu selection by pressing the button.


Fig.99

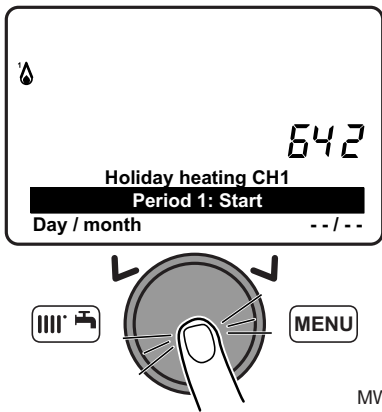

MW-3000076-EN-02

8. Select and confirm the start date of the holiday period with the button.
9. Confirm the menu selection by pressing the button.


Fig. 100

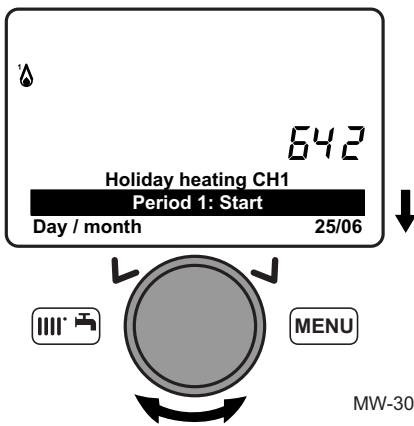

MW-3000077-EN-02

10. Select the **End** parameter by turning the button.


Fig. 101

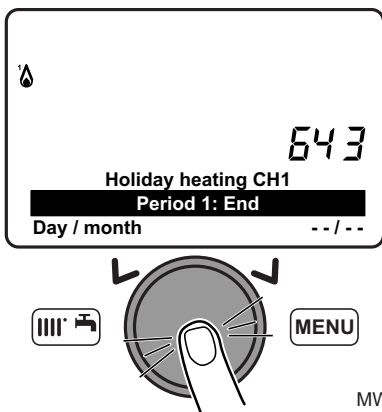

MW-3000078-EN-02


11. Select and confirm the end date of the holiday period with the button.
12. Confirm the menu selection by pressing the button.

Fig. 102

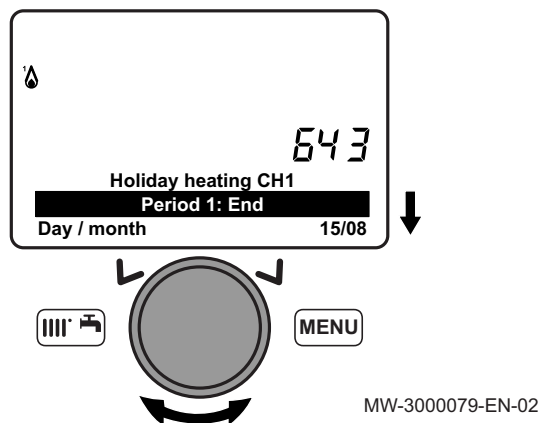

13. Select the **Operating level** parameter by turning the button.
14. Confirm the menu selection by pressing the button.

Fig. 103

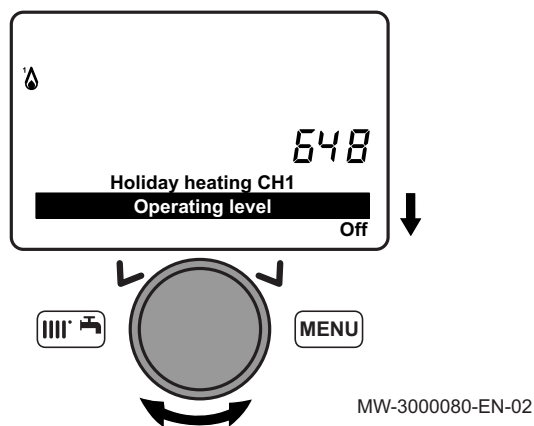

15. Select the boiler's operating mode during the holiday period by turning the button.
16. Confirm the menu selection by pressing the button.

### 9.2.10 Using the boiler according to thermal output

Using the boiler according to thermal output makes it possible to calibrate the gas valve.

1. From the home screen, press the and keys simultaneously.

Fig. 104 Home screen

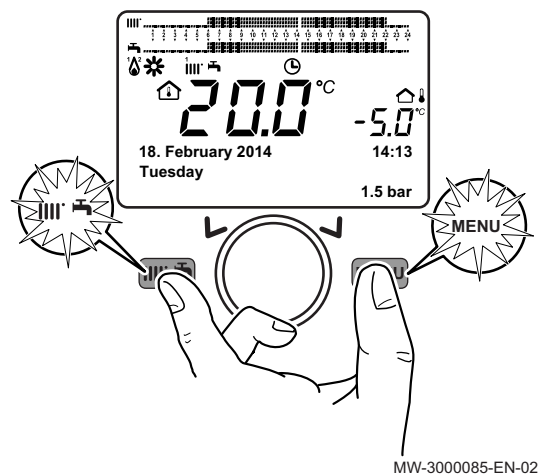


Fig. 105 Selecting parameter Controller stop function

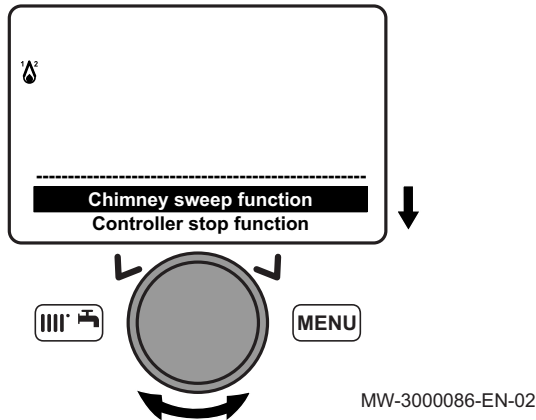


Fig. 106 Confirming the parameter selected

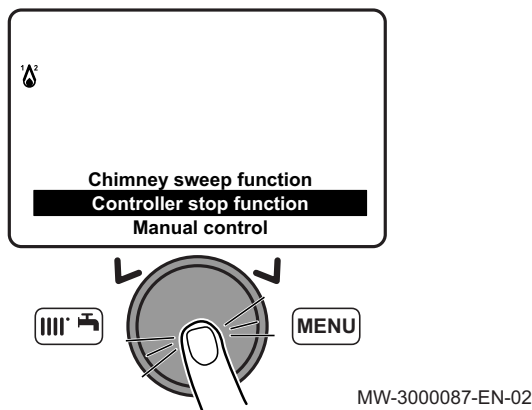


Fig. 107 Confirming the thermal output value


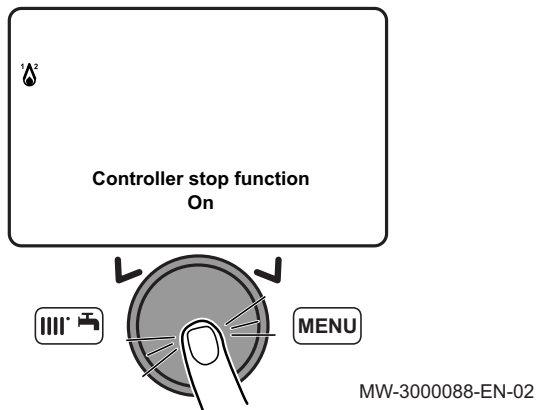


Fig. 108 Modifying the thermal output value

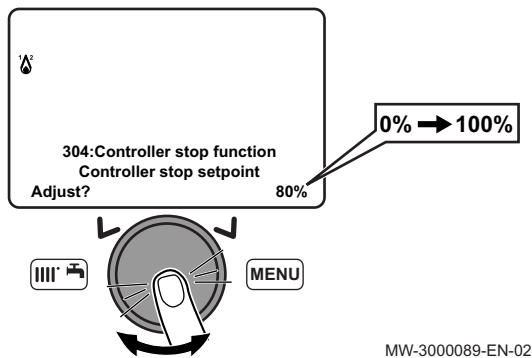

2. Select the parameter **Controller stop function** by turning the button.

3. Press the button to confirm.  
The parameter **Controller stop function On** appears.

4. Press the button to confirm.  
**304: Controller stop** appears.

5. Press the button to modify the thermal output value from 0 to 100% by turning the button.  
6. Press the button to confirm the thermal output.





**Note**  
Press the key to return to the main display and reactivate the control system.

**For more information, see**  
 Setting the air/gas ratio (maximum heat input), page 55  
Setting the air/gas ratio (reduced heat input), page 56


### 9.2.11 Selecting a heating circuit

The control panel can manage up to three different heating circuits.



1. From the home screen, turn the  button to select one of the three heating circuits.
2. Press the  button to confirm.
3. Turn the  button to temporarily modify the temperature set point on the heating circuit selected.
4. Press the  button to confirm.  
The heating circuit selected is active.

### 9.2.12 Locking / Unlocking parameter modification

It is possible to lock all functions associated with the  key to prevent unauthorised persons from modifying the parameters.

#### ■ Locking parameter modification




1. Press the  key to access the user parameters menu.
2. Select the **Operator unit** menu by turning the  button.
3. Confirm the menu selection by pressing the  button.

Fig.  
109


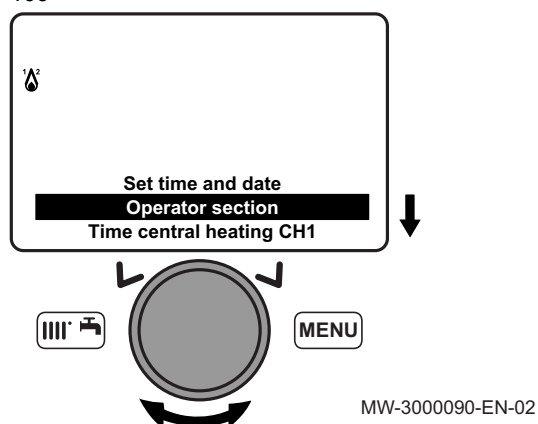


Fig.  
110





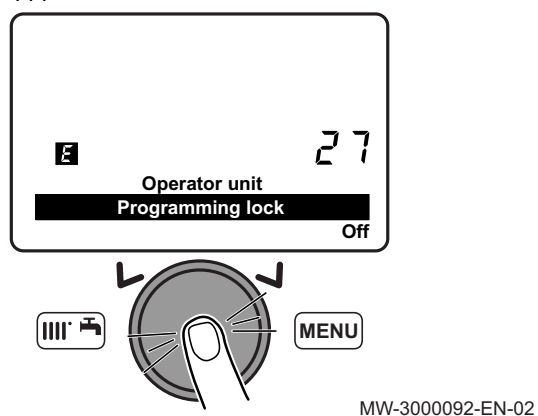


4. Select menu 27, **Programming lock**, by turning the  button.
5. Confirm the menu selection by pressing the  button.

Fig.  
111

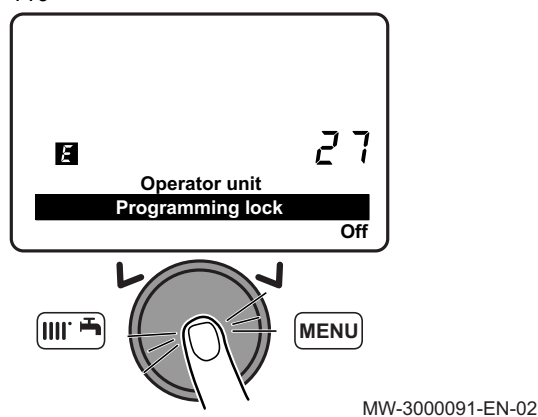

6. Select the **On** setting by turning the  button.
7. Confirm the menu selection by pressing the  button.  
The parameters can be displayed but cannot be modified.

#### ■ Unlocking the parameter modification

It is necessary to proceed via a temporary unlocking phase to modify the **Programming lock** parameter which is used to lock / unlock parameter modification.


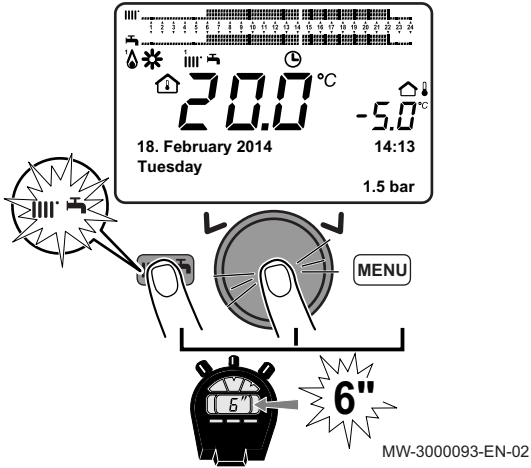
1. Press the  key to access the user parameters menu.

Fig. 112




2. Press the key and the button simultaneously for around 6 seconds. **temporarily unlocked** is displayed.



**Note**  
Unlocking is temporary and lasts 1 minute.


3. Press the key to access the user parameters menu.

Fig. 113

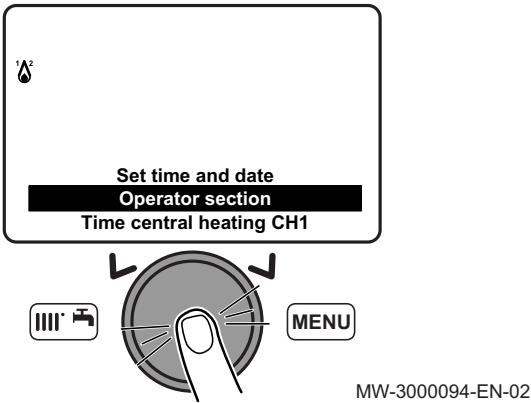


4. Select the **Operator unit** menu by turning the button.
5. Confirm the menu selection by pressing the button .

Fig. 114

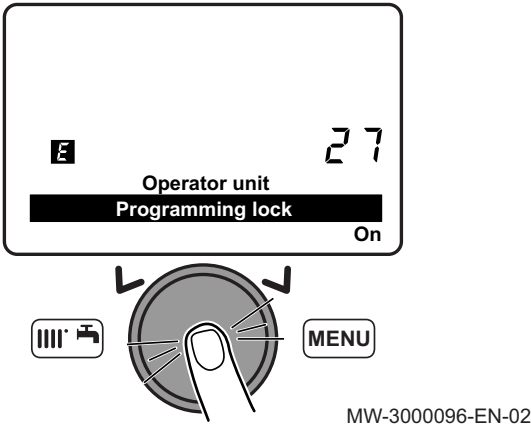

6. Select menu 27, **Programming lock**, by turning the button.
7. Confirm the menu selection by pressing the button .

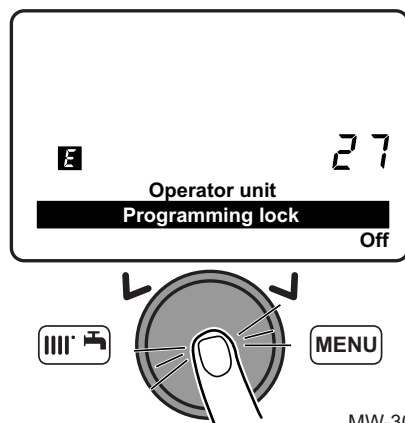Fig.  
115

MW-3000095-EN-02

8. Select the **Off** setting by turning the button.
  9. Confirm the menu selection by pressing the button .
- The parameters can be modified.

### 9.2.13 Timer program



#### Note


Activate the operating mode **Timed**

The various timer programming functions are used to program start-up and automatic shut-down of the boiler during predefined time ranges. Timer programming is done for days of the week, from Monday to Sunday. Groups of days are predefined.

Tab.56 Weekly intervals

Values of the parameters **Select days** (500, 520, 540) for heating circuits 1, 2 and 3 and the parameters **Select days** (560) for domestic hot water.

| Pre-setting selected | Days programmed  |
|----------------------|--|
| Mon-Sun              | Monday - Tuesday - Wednesday - Thursday - Friday - Saturday - Sunday |
| Mon-Fri              | Monday - Tuesday - Wednesday - Thursday - Friday                     |
| Sat-Sun              | Saturday - Sunday  |
| Mon                  | Monday   |
| Tue                  | Tuesday  |
| Wed                  | Wednesday  |
| Thu                  | Thursday   |
| Fri                  | Friday   |
| Sat                  | Saturday   |
| Sun                  | Sunday   |

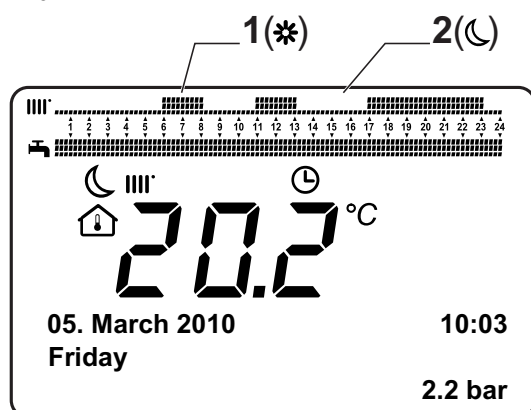Fig. Example of a time range  
116

BM-0000025-GB-03

- 1 Period of operation at the comfort temperature
- 2 Period of operation in reduced mode

Tab.57 Daily time ranges

Values of the parameters **Select default timings?** (514, 534, 554) for heating circuits 1, 2 and 3 and the parameter **Select default timings?** (574) for domestic hot water.

| Pre-setting selected | Hours programmed                              |
|----------------------|---|
| Time setting 1       | 6:00 to 23:00                                 |
| Time setting 2       | 06:00...08:00 – 17:00...23:00                 |
| Time setting 3       | 06:00...08:00 – 11:00...13:00 – 17:00...23:00 |



For more information, see  
Changing the operating mode, page 81

■ **Default time ranges**

Tab.58 Time ranges according to the groups of days selected

Program line 514 (heating), 574 (domestic hot water)

| Groups of days | Pre-set programs |               |               |
|----------------|------------------|---------------|---------------|
|                | On 1 - Off 1     | On 2 - Off 2  | On 3 - Off 3  |
| Mon-Sun        | 06:00 - 08:00    | 11:00 - 13:00 | 17:00 - 23:00 |
| Mon-Fri        | 06:00 - 08:00    | 17:00 - 23:00 |               |
| Sat-Sun        | 06:00 - 23:00    |               |               |

Tab.59 Time ranges according to the days selected

Program line 501, 502, 503, 504, 505, 506 (heating) - 561, 562, 563, 564, 565, 566 (domestic hot water)

| Single days  | Pre-set programs |               |               |
|--|------------------|---------------|---------------|
|  | On 1 - Off 1     | On 2 - Off 2  | On 3 - Off 3  |
| Monday-Tuesday-<br>Wednesday-Thurs-<br>day-Friday-Satur-<br>day-Sunday | 06:00 - 08:00    | 11:00 - 13:00 | 17:00 - 23:00 |




For more information, see  
Changing the operating mode, page 81

■ **Selecting a Timer Program**

1. Select a heating circuit.
2. Press the **MENU** key to access the parameters.
3. Select the **Time central heating CH1** menu by turning the **⌚** button.

Fig. 117 Selecting the menu Time central heating CH1

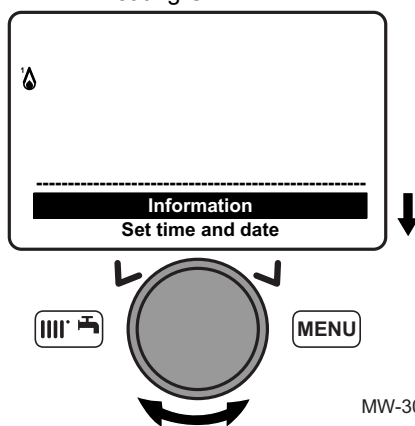

MW-3000071-EN-02



**Note**

- For heating circuits 2 and 3, select the parameters **Time central heating CH2** or **Time setting 3/CHP**.
  - For the domestic hot water circuit, select the parameter **Time hot water**.
4. Confirm the menu selection by pressing the button **⌚**.  
The parameter **Select days** (500, 520, 540 or 560) appears.

Fig. 118 Selecting the parameter Select days

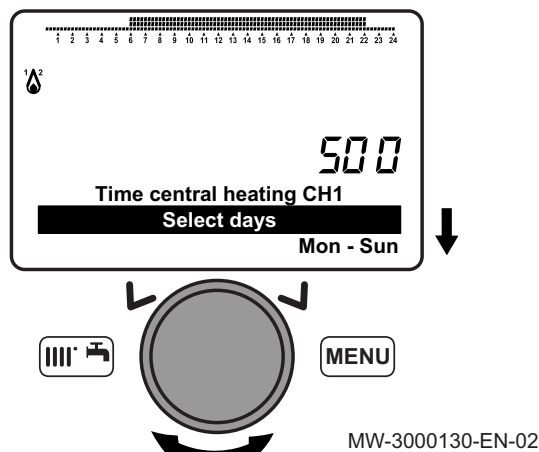


Fig. 119 Selecting the parameter Select default timings?


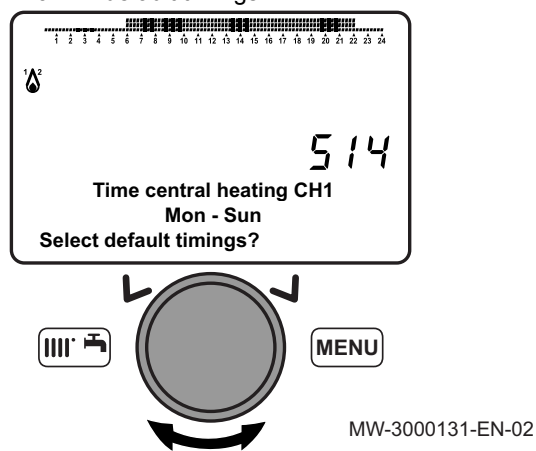


Fig. 120 Selecting the desired time range

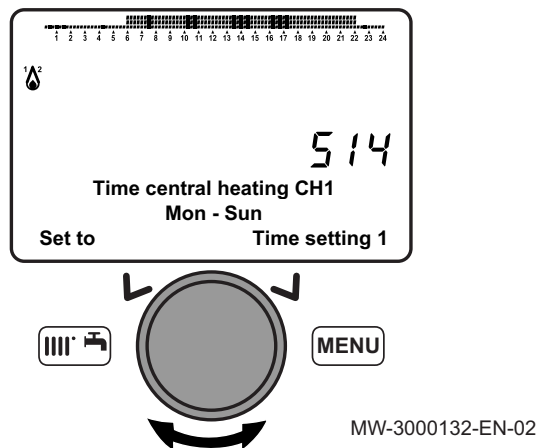

5. Confirm the parameter selection by pressing the button. The current selection flashes.
6. Select a weekly interval by turning the button.
7. Confirm the weekly interval selection by pressing the button.

8. Select the parameter **Select default timings?** (514, 534, 554 or 574) by turning the button.

9. Confirm the parameter selection by pressing the button. The current selection flashes.
10. Select the desired time range by turning the button.
11. Confirm the time range selection by pressing the button.

**Note**  
Press the key to return to the main screen.

**For more information, see**  
Changing the operating mode, page 81  
Copying a time range, page 96

#### ■ Customising the time ranges

1. Select a heating circuit.
2. Press the key to access the parameters.

Fig. 121 Selecting the menu Time central heating CH1

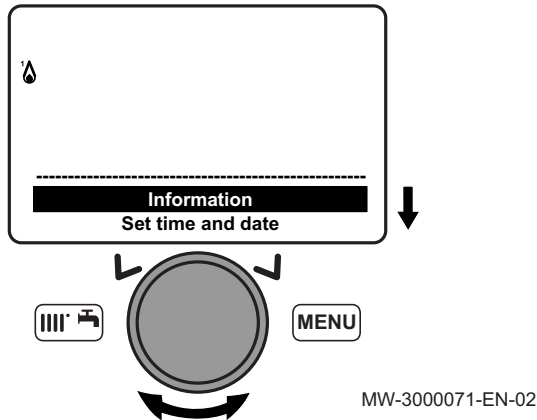


Fig. 122 Selecting the parameter Select days


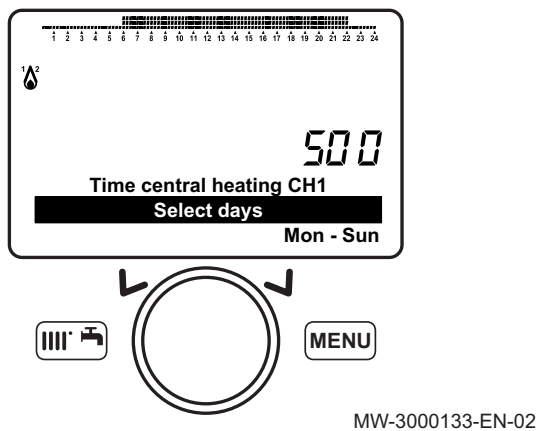


Fig. 123 Selecting the time range start time of parameter 1st Time ON



3. Select the **Time central heating CH1** menu by turning the button.

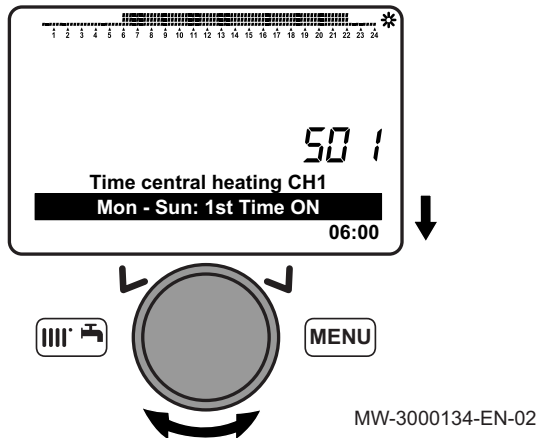

**Note**

- For heating circuits 2 and 3, select the parameters **Time central heating CH2** or **Time setting 3/CHP**.
- For the domestic hot water circuit, select the parameter **Time hot water**.

4. Confirm the menu selection by pressing the button . The parameter **Select days** (500, 520, 540 or 560) appears.

5. Confirm the menu selection by pressing the button . The current selection flashes.

6. Select a weekly interval.

7. Confirm the menu selection by pressing the button .

8. Select the parameter **1st Time ON** (501, 521, 541 or 561) by turning the button.

Fig. 124 Selecting the time range start time of parameter 1st Time ON

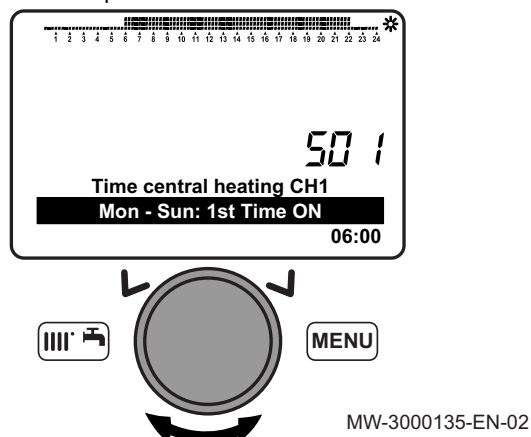


Fig. 125 Selecting the time range end time of parameter 1st Time OFF


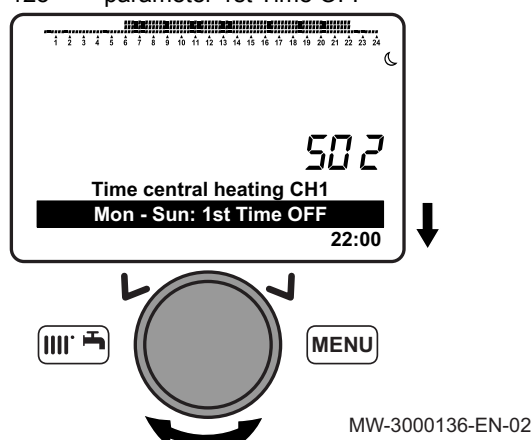


Fig. 126 Selecting the time range end time of parameter 1st Time OFF

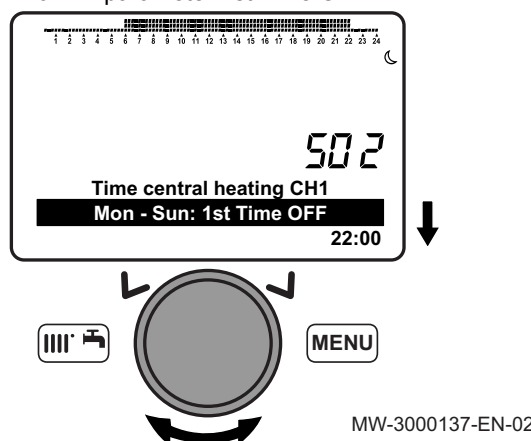

9. Confirm the menu selection by pressing the button . The beginning of the first time range flashes.
  10. Select the end of the first time range by turning the button.
- Note**  
Select the value --:-- in order not to program a first time range.
11. Confirm the value programmed by pressing the button.

12. Select the parameter **1st Time OFF** (502, 522, 542 or 562) by turning the button.

13. Confirm the menu selection by pressing the button. The current selection flashes.
14. Select the beginning of the first time range by turning the button.
15. Confirm the value programmed by pressing the button.
16. Repeat the programming for the second and third time ranges.

Tab.60 Parameters of the time ranges

|                             | First time range                            | Second time range                           | Third time range                           |
|-----------------------------|---|---|--|
| Beginning of the time range | - <b>1st Time ON</b> (501, 521, 541 or 561) | - <b>2nd Time ON</b> (503, 523, 543 or 563) | <b>3rd Time ON</b> (505, 525, 545 or 565)  |
| End of the time range       | <b>1st Time OFF</b> (502, 522, 542 or 562)  | <b>2nd Time OFF</b> (504, 524, 544 or 564)  | <b>3rd Time OFF</b> (506, 526, 546 or 566) |

**Note**  
Press the key to return to the main screen.

Fig. 127 Selecting the menu Time central heating CH1

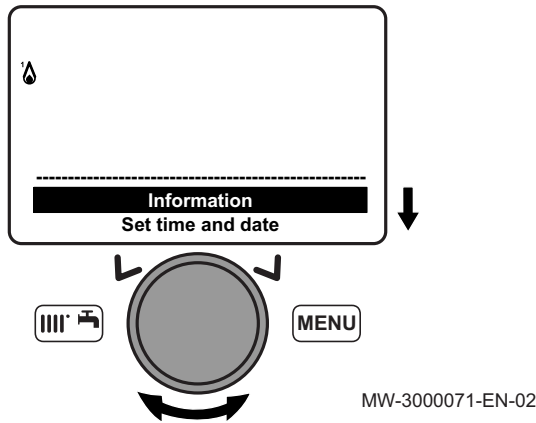


Fig. 128 Selecting the parameter Select days


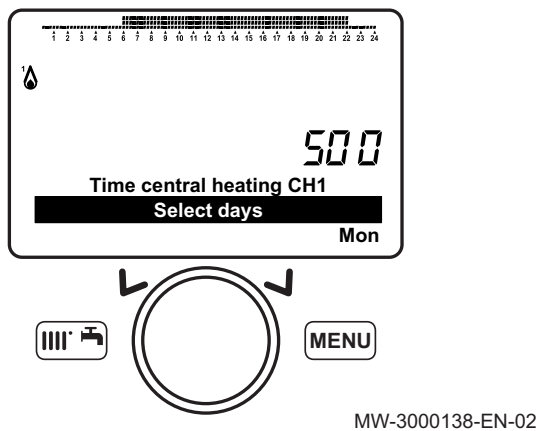






Fig. 129 Confirming the menu selected

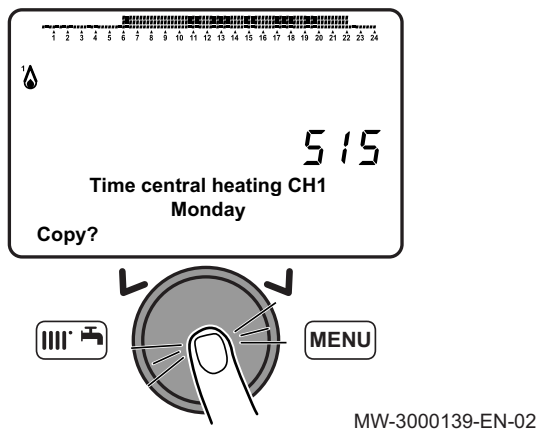


-  **For more information, see**  
 Changing the operating mode, page 81  
 Selecting a heating circuit, page 88  
 Default time ranges, page 92  
 Copying a time range, page 96


■ **Copying a time range**



 **Note**  
 It is possible to copy a time range from one day to another. It is not possible to copy a time range from a period of several days.

1. Select a heating circuit.
2. Press the  key to access the parameters.
3. Select the **Time central heating CH1** menu by turning the  button.

 **Note**

- For heating circuits 2 and 3, select the parameters **Time central heating CH2** or **Time setting 3/CHP**.
- For the domestic hot water circuit, select the parameter **Time hot water**.

4. Confirm the menu selection by pressing the button . The parameter **Select days** (500, 520, 540 or 560) appears.

5. Confirm the menu selection by pressing the button . The current selection flashes.
6. Select a day.
7. Confirm the menu selection by pressing the button .
8. Select a predefined or customised time range.



9. Select the parameter **Copy?** (515, 535, 555 or 575) by turning the  button.
10. Confirm the menu selection by pressing the button . The parameter **Copy to** appears.



Fig. 130 Selecting the parameter Copy to

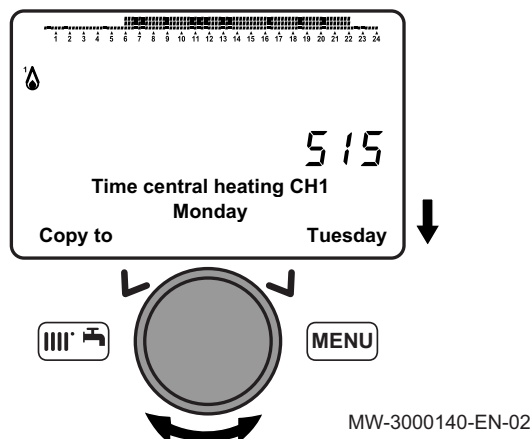


Fig. 131 Selecting the menu Time central heating CH1


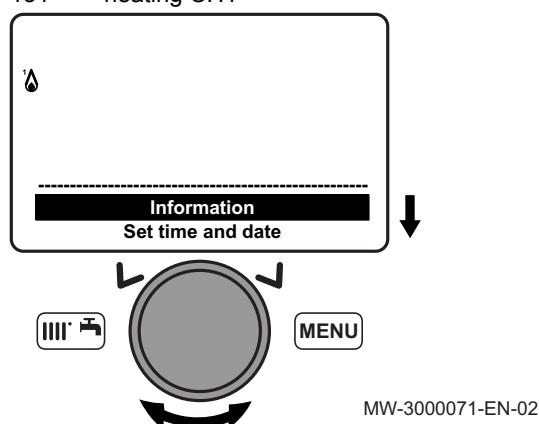


Fig. 132 Selecting the parameter Default values

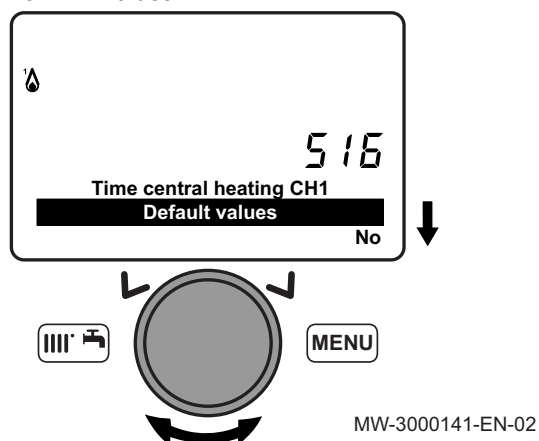

11. Select a target day by turning the button.
12. Confirm the menu selection by pressing the button .

- Note**
- Repeat the copy to other days if necessary.
  - Press the key to return to the main screen.


- For more information, see**
- Changing the operating mode, page 81
  - Selecting a heating circuit, page 88
  - Selecting a Timer Program, page 92
  - Customising the time ranges, page 93

#### ■ Resetting the timer programs to zero

1. Press the key to access the parameters.
  2. Select the **Time central heating CH1** menu by turning the button.
- Note**
- For heating circuits 2 and 3, select the parameters **Time central heating CH2** or **Time setting 3/CHP**.
  - For the domestic hot water circuit, select the parameter **Time hot water**.
3. Confirm the menu selection by pressing the button . The parameter **Select days** (500, 520, 540 or 560) appears.

4. Select the parameter **Default values** (516, 536, 556 or 576) by turning the button.
5. Confirm the parameter selection by pressing the button. The parameter **No** flashes.

Fig. 133 Selecting the parameter Yes

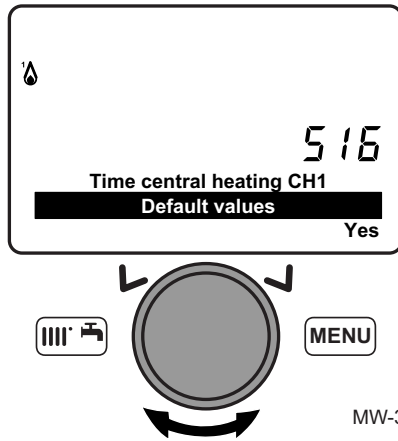

MW-3000142-EN-02

6. Select the parameter **Yes** by turning the button.
7. Confirm the parameter selection by pressing the button.




**Note**

Press the key to return to the main screen.

The reset to zero of the timer program is effective.

Fig. 134

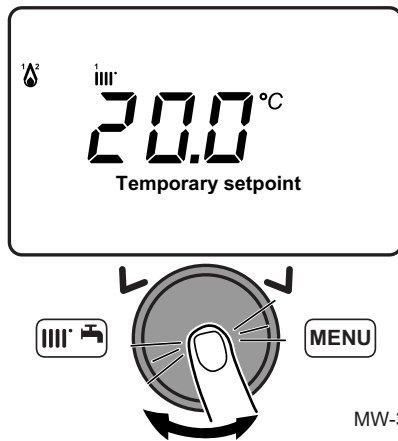

MW-3000143-EN-02

**9.2.14 Setting a temporary heating flow temperature**

1. From the control panel main screen, turn the button to increase or reduce the temperature value.
2. Confirm the menu selection by pressing the button .

**9.2.15 Managing boilers in cascade**

Boilers in cascade are controlled and managed by the master boiler.

1. Set the following parameters on the master boiler:

Tab.61 Configuration cascade master boiler

| Parameter number | Parameter                        | Setting   | Description   |
|------------------|----------------------------------|---|---|
| 3540             | Auto source seq ch'over          | Number of hours                                 | Operating time before the automatic change of the master boiler sequence. |
| 3541             | <b>Auto source seq exclusion</b> | - First<br>- First and last<br>- Last<br>- None | Exclusion of the boiler or boilers from the periodic sequence rotation.   |




For more information, see

List of installer parameters, page 68

**9.3 Accessing the information menu**


1. Go to the parameters menu by pressing the key.

Fig. 135 Selecting the menu Information

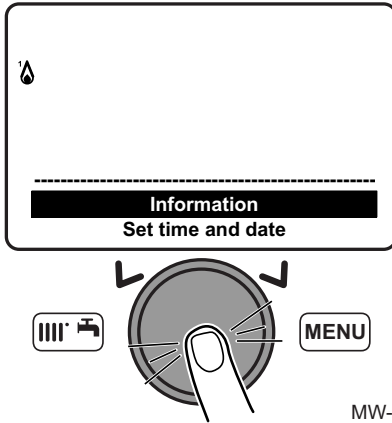

2. Select the Information menu with the rotary button (⌚).
3. Confirm by pressing the rotary button (⌚).

Fig. 136 Selecting the various items of information

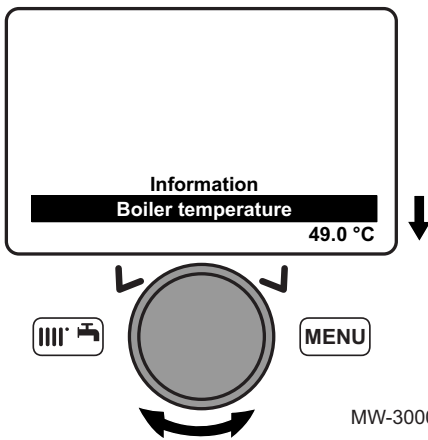

4. Use the rotary button (⌚) to scroll through the various items of information.



**For more information, see**  
Information menu, page 65

## 10 Maintenance

### 10.1 General

---

We recommend having the boiler inspected and serviced at regular intervals.

- Boiler maintenance and cleaning must be carried out at least once a year by a qualified professional.
- Have an inspection carried out and the flues swept **at least once a year** or more, depending on the regulations in force in your country.



**Caution**

Failure to service the appliance voids the warranty.



**Caution**

Maintenance work must be carried out by a qualified professional.



**Caution**

Only genuine spare parts may be used.

### 10.2 Standard inspection and maintenance operations

---

#### 10.2.1 Performing the annual service

---

1. Check the outward appearance and tightness of the gaskets on the gas circuit and the combustion circuit.
2. Check for any impurities inside the combustion chamber. Use a vacuum cleaner for any cleaning work.
3. Check the condition of the insulation in the door and at the bottom of the combustion chamber and the condition of the gaskets on the combustion chamber door.
4. Check the condition and position of the ignition and flame detection electrodes, as well as the condition of the burner and its retaining device.
5. Check for any impurities inside the siphon.
6. Dry up as much as possible any water that may have stagnated in the bottom of the boiler as the result of a maintenance operation.
7. Check that there are no obstructions in the discharge and air intake pipes.
8. Check that the fan is working correctly.
9. Check the combustion and the correct calibration of the gas valve.
10. Check the pressure in the heating system.
11. Check the pressure in the expansion vessel.



**For more information, see**

Cleaning the heat exchanger, page 102

Checking the burner, page 103

Cleaning the siphon, page 104


Check the combustion, page 106

#### 10.2.2 Removing the burner

---

1. Switch off the mains supply to the boiler.
2. Close the gas inlet valve.
3. Close the valves on the heating circuits.
4. Access the internal boiler components


Fig. 137 Removing the cables from the fan

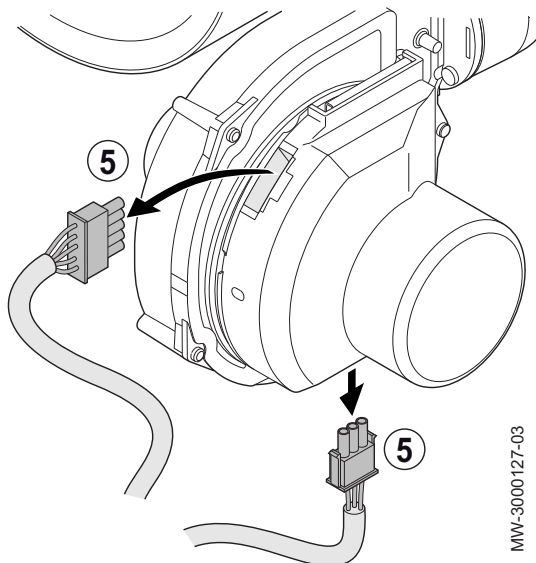

MW-3000127-03

5. Disconnect the power and command cables on the fan.


Fig. 138 Removing the cables from the electrode and the sensor

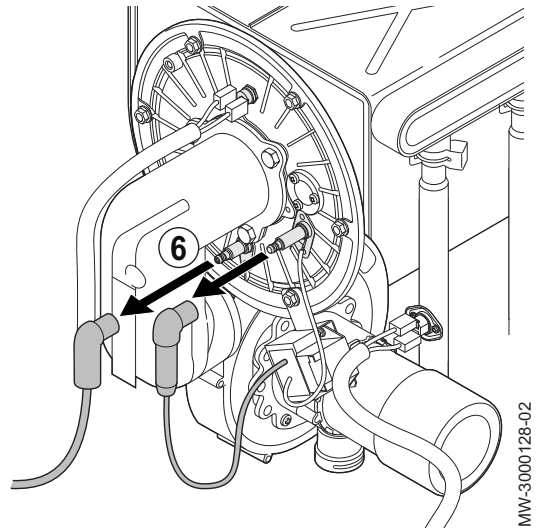

MW-3000128-02

6. Disconnect the ignition electrode and the flame detection sensor.

Fig. 139 Removing the connection pipe

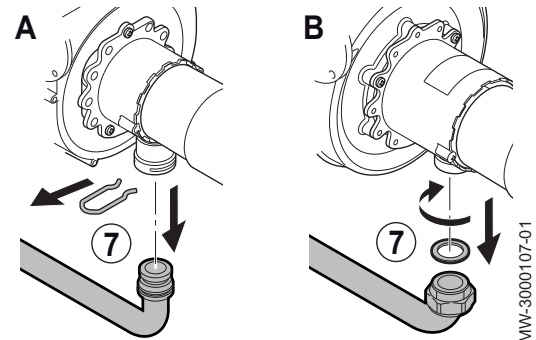

MW-3000107-01


7. Remove the pipe connecting the gas valve to the Venturi unit.

| Reference | Model   |
|-----------|---|
| A         | Sirius two FS 50  |
| B         | Sirius two FS 70<br>Sirius two FS 90<br>Sirius two FS 110 |

Fig. 140 Disconnecting the safety thermostat on the combustion chamber door

8. Disconnect the 2 wires from the safety thermostat on the combustion chamber door and the pin under the ignition electrode.


and the pin under the ignition electrode

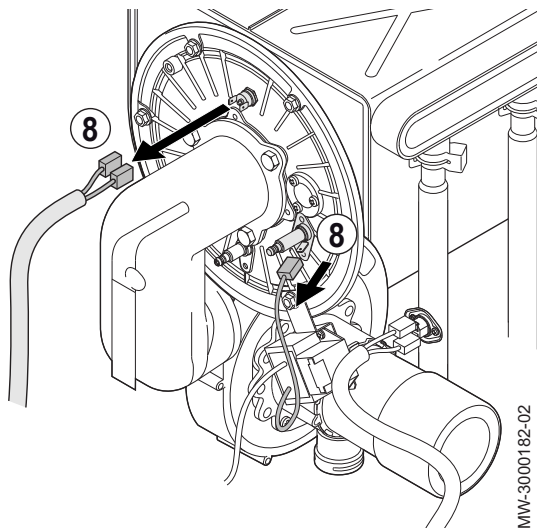

MW-3000182-02

Fig. 141 Removing the retaining nuts

9. Remove the nuts holding the burner in place on the heat exchanger.

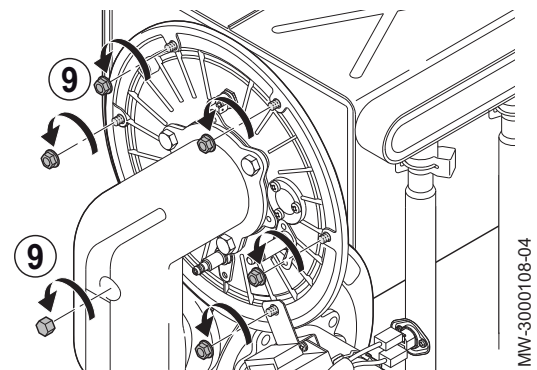


MW-3000108-04

Fig. 142 Removing the fan, the collector and the burner

10. Remove the fan, the Venturi and the burner to access the inside of the heat exchanger.



**For more information, see**  
Accessing the internal boiler components, page 34

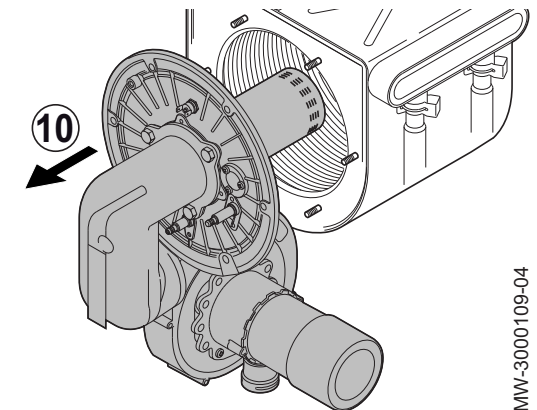


MW-3000109-04

### 10.2.3 Cleaning the heat exchanger


1. Remove the burner.

Fig. 143 Cleaning the exchanger

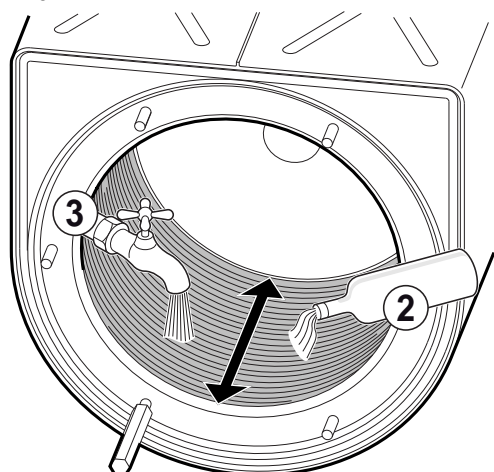

MW-3000100

Fig. 144 Water jet cleaning

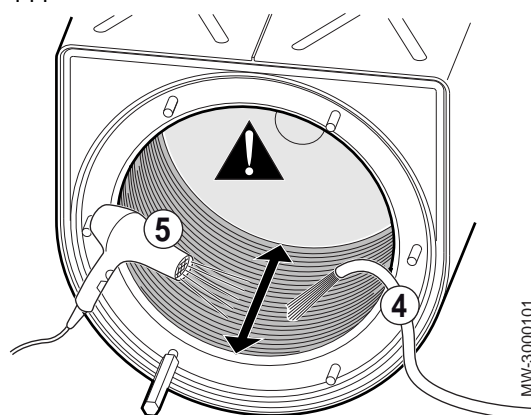

MW-3000101

2. Clean the pipes inside the heat exchanger using diluted white vinegar.
3. Flush with water.

**i Note**  
The water will exit the heat exchanger by passing through the condensates discharge siphon.

4. After twenty minutes, wash off any dirt with a powerful water jet. Do not use a pressure washer.

**! Caution**  
Be careful not to direct the water jet straight at the insulating surface behind the heat exchanger.

5. Dry the heat exchanger.
6. Check the burner.
7. Clean the siphon.
8. Remount the burner.

**📖 For more information, see**  
Removing the burner, page 100  
Checking the burner, page 103  
Cleaning the siphon, page 104  
Remounting the burner, page 105

### 10.2.4 Checking the burner

1. Remove the burner.
2. Check whether the surface of the burner is damaged in any way. Replace the burner and its gasket if they are damaged.
3. Check the safety thermostat.


**i Note**  
Replace the safety thermostat if it is damaged.

4. Clean the burner with a vacuum cleaner.

**i Note**  
Do not use a brush as it may damage the burner.

5. Check the distance between the flame detection electrode and the burner.

Fig. 145 Distances and tolerances to be observed for the flame detection electrode and the burner

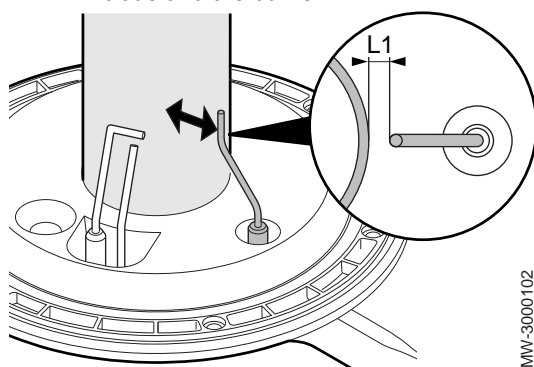


MW-3000102

Tab.62 Distances and tolerances to be observed for the flame detection electrode and the burner

| Distance | Sirius two FS 50 , Sirius two FS 70 , Sirius two FS 90 | Sirius two FS 110                 |
|----------|--|-----------------------------------|
| L1       | 7.5 mm with a tolerance of +/- 1 mm                    | 5 mm with a tolerance of +/- 1 mm |

**i Note**  
Replace the flame detection electrode if it is damaged.

Fig. 146 Distances and tolerances to be observed for the ignition electrode and the burner

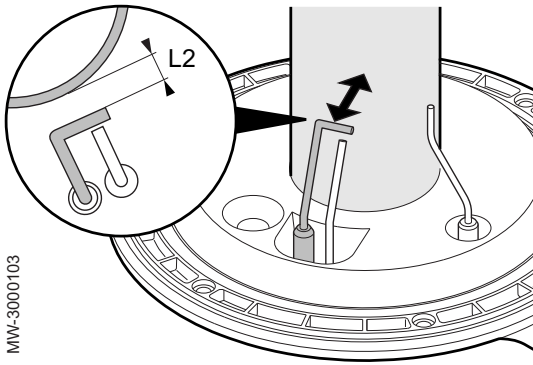

6. Check the distance between the ignition electrode and the burner.

Tab.63 Distances and tolerances to be observed for the ignition electrode and the burner

| Distance | Sirius two FS 50 , Sirius two FS 70 , Sirius two FS 90 | Sirius two FS 110                   |
|----------|--|-------------------------------------|
| L2       | 10 mm with a tolerance of +/- 1 mm                     | 7.5 mm with a tolerance of +/- 1 mm |



**Note**  
Replace the ignition electrode if it is damaged.

7. Check the distance between the ignition electrode and the ground electrode.

Tab.64 Distances and tolerances to be observed for the ignition electrode and the ground electrode

| Distance                                | Sirius two FS 50 , Sirius two FS 70 , Sirius two FS 90 , Sirius two FS 110 |
|---|--|
| Ignition electrode and ground electrode | 4 mm with a tolerance of +/- 0.5 mm  |



**Note**  
Replace the ignition electrode if it is damaged.

8. Check whether the insulation on the inside surface of the burner is damaged in any way. The surface must be clean and free of any damage. Replace the insulation if it is damaged.
9. Remount the burner.




**For more information, see**  
Removing the burner, page 100  
Remounting the burner, page 105

### 10.2.5 Cleaning the siphon

1. Remove the burner.
2. Access the siphon.



Fig. 147 Removing the siphon

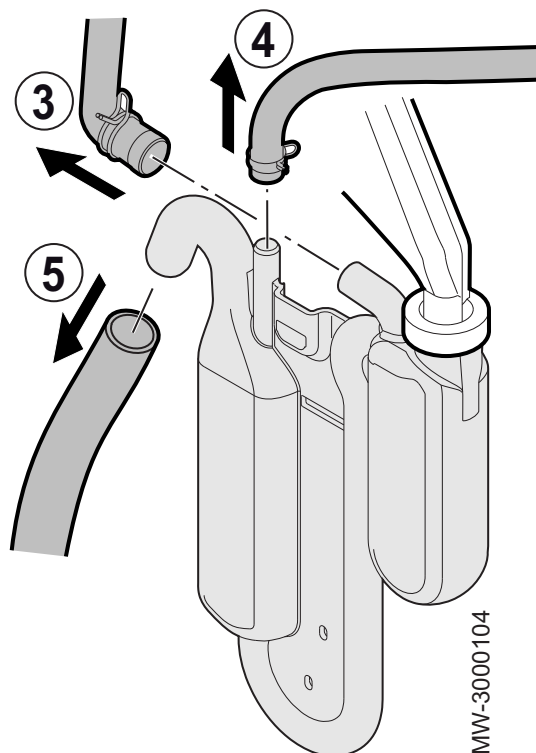

3. Disconnect the pipe coming from the combustion chamber (Sirius two FS 50 and Sirius two FS 70 only).
4. Disconnect the pipe from the flue gas exchanger.
5. Disconnect the condensates discharge pipe.



**Note**

Use a pair of pliers to remove the spring tightening clamps.

6. Remove the siphon from the heating body by taking out the retaining screw with a cross-head screwdriver.
7. Clean the bottom of the siphon with water.
8. Completely fill the siphon.



**Danger**

Fill the siphon to the top. If the siphon is empty, there is a danger of intoxication by exhaust gases.

9. Put the siphon back on the heating body and put the retaining screw back in place with a cross-head screwdriver.
10. Reconnect the pipe from the combustion chamber, the pipe from the flue gas exchanger and, finally, the condensates discharge pipe.



**Note**

Use a pair of pliers to put the spring tightening clamps back in place.

11. Remount the burner.



**For more information, see**

Removing the burner, page 100  
 Accessing the internal boiler components, page 34  
 Remounting the burner, page 105

### 10.2.6 Remounting the burner

1. Remount the pipe connecting the gas valve to the Venturi unit.
2. Remount the burner, the Venturi and the fan.



**Caution**

Respect the torque on the burner fastening nuts: 5 N.m +/- 0.5.



**Caution**

Always use a new tightness gasket to reconnect the gas supply.

3. Reconnect the ignition electrode, the safety thermostat on the combustion chamber door and the flame detection sensor.



**Note**

Do not forget to remount the igniter on the burner.

4. Open all valves.
5. Check the tightness of the burner using a leak detection spray.
6. Put the covers back in place on the boiler.



**Note**

For the Sirius two FS 50 and Sirius two FS 70 models, put the panel located in front of the burner back in place.


7. Reconnect the earth wire.
8. Re-commission the boiler.



For more information, see Commissioning procedure, page 53

### 10.2.7 Check the combustion

Fig. 148 Connecting the flue gas analyser

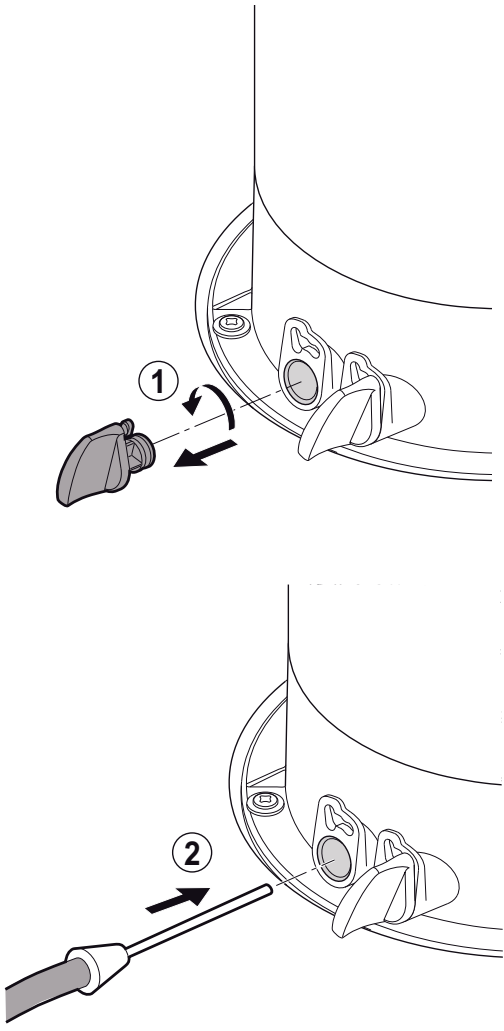

MW-3000110-03

#### ■ Checking combustion (maximum heat input)

1. Unscrew the plug in the flue gas measurement point.
2. Connect the flue gas analyser.



**Note**

- Ensure that the opening around the sensor is completely sealed when taking measurements.
  - Insert the sensor into the flue gas measurement point to at least 8 cm for Sirius two FS 50 and Sirius two FS 70 .
  - Insert the sensor into the flue gas measurement point to at least 9 cm for Sirius two FS 90 and Sirius two FS 110 .
3. Set the boiler's heat input to 100%.
  4. Measure the percentage of CO<sub>2</sub> in the flue gases.
  5. Compare the values measured with the set point values in the Control and setting values table.



**Note**

- A tolerance of +/- 0.5% is acceptable when the front panel is closed.
6. If necessary, modify the air/gas ratio.

Fig. 149 Checking the air in the intake circuit

7. If necessary, check the return into circulation of any combustion products if using coaxial pipes. The sensor will then be connected to the outlet connected to the combustion air intake circuit.


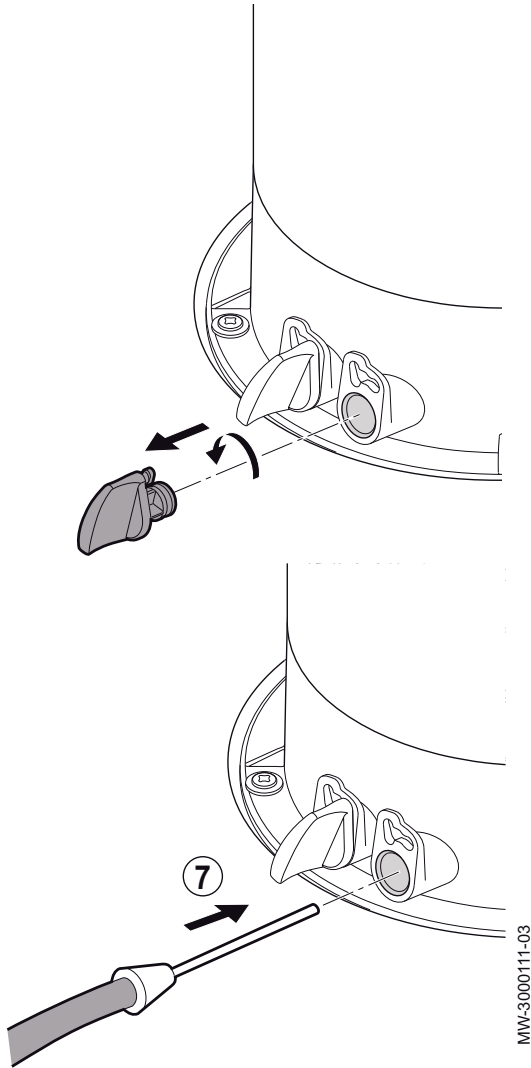


Fig. 150 Connecting the flue gas analyser

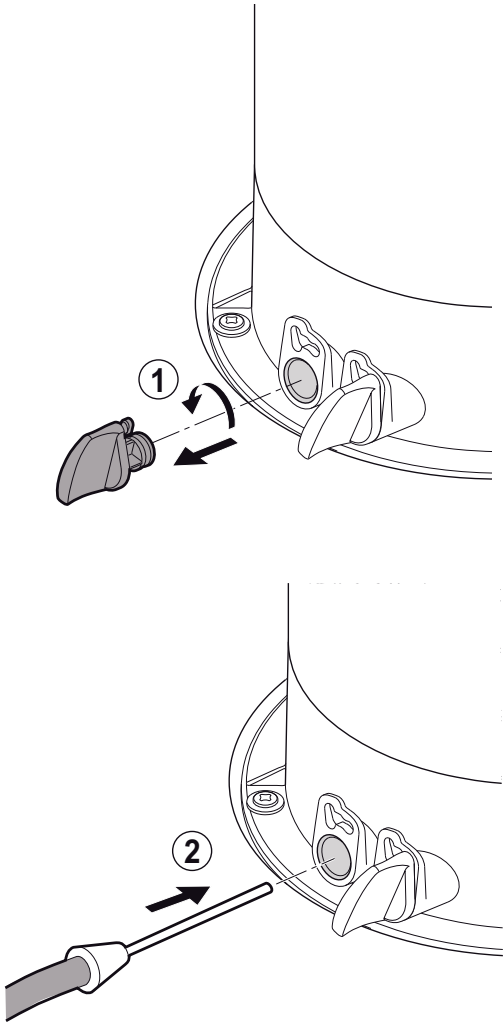

**For more information, see**

- Using the boiler according to thermal output, page 87
- CO<sub>2</sub> checking and setting values, page 57
- Checking combustion (reduced heat input), page 108

■ **Checking combustion (reduced heat input)**

1. Unscrew the plug in the flue gas measurement point.
2. Connect the flue gas analyser.



**Note**


- Ensure that the opening around the sensor is completely sealed when taking measurements.
  - Insert the sensor into the flue gas measurement point to at least 8 cm for Sirius two FS 50 and Sirius two FS 70 .
  - Insert the sensor into the flue gas measurement point to at least 9 cm for Sirius two FS 90 and Sirius two FS 110 .
3. Set the boiler's heat input to 0%.
  4. Measure the percentage of CO<sub>2</sub> in the flue gases.
  5. Compare the values measured with the set point values in the Control and setting values table.



**Note**

- A tolerance of +/- 0.5% is acceptable when the front panel is closed.
6. If necessary, modify the air/gas ratio.

Fig. 151 Checking the air in the intake circuit

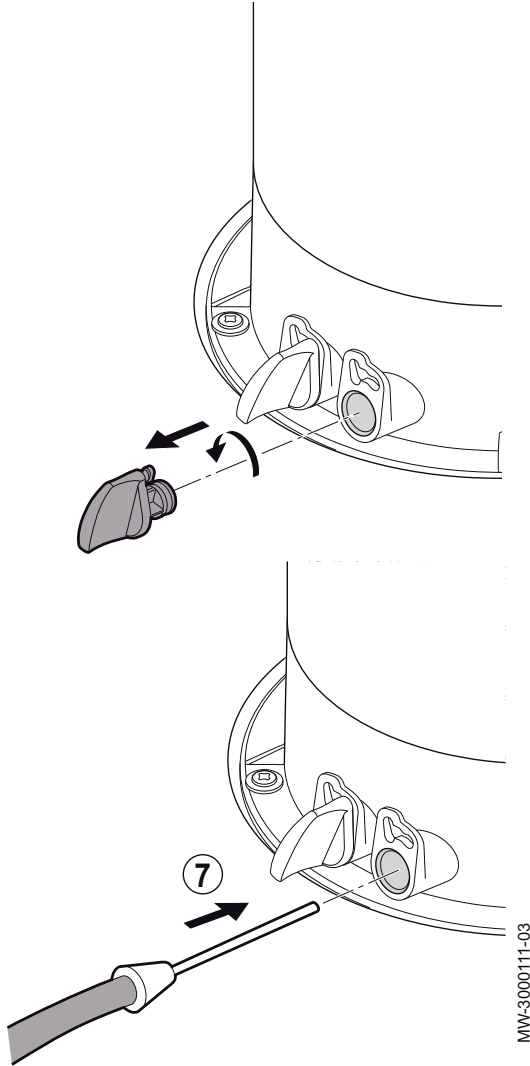

7. If necessary, check the return into circulation of any combustion products if using coaxial pipes. The sensor will then be connected to the outlet connected to the combustion air intake circuit.




**For more information, see**

- Using the boiler according to thermal output, page 87
- CO<sub>2</sub> checking and setting values, page 57
- Setting the air/gas ratio (maximum heat input), page 55

## 11 Troubleshooting

### 11.1 Error codes

Fig. 152 Error code

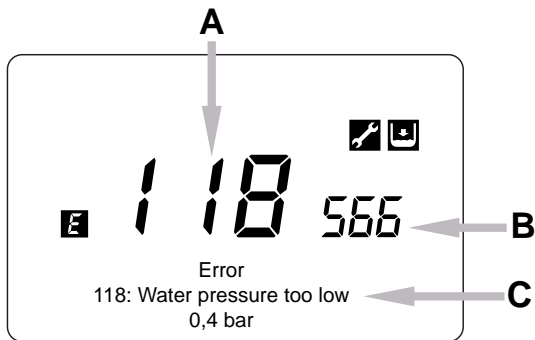

- A Error code  
 B Secondary error code  
 C Description of the error



**Note**

Press the key to return to the main display.

- The **E** symbol continues to be displayed on the control panel.
- If the error is not resolved after one minute, the error code is displayed on the control panel a second time.

Tab.65 List of error codes



BM-000026-GB-03

| <b>E</b> | Display                     | Description of the error  |
|----------|-----------------------------|---|
| 20       | 20:Boiler sensor 1          | Flow back sensor.   |
| 28       | 28:Flue gas temp sensor     | Flue gas sensor.  |
| 40       | 40:Return sensor 1          | Return sensor.  |
| 46       | 46:Return sensor cascade    | Cascade return temperature sensor error.  |
| 52       | 52:HW sensor 2              | Solar domestic hot water sensor (if incorporating a solar system).                                |
| 60       | 60:Room sensor 1            | Room temperature sensor 1 error.  |
| 65       | 65:Room sensor 2            | Room temperature sensor 2 error.  |
| 68       | 68:Room sensor 3            | Room temperature sensor 3 error.  |
| 78       | 78:Water pressure sensor    | Hydraulic pressure sensor error.  |
| 73       | 73:Collector sensor 1       | Solar collector sensor (if incorporating a solar system).   |
| 83       | 83:BSB short-circuit        | Communication problem between boiler PCB and control unit. Probable short circuit on the heating. |
| 84       | 84:BSB address collision    | Address conflict between several control units (internal anomaly).                                |
| 91       | 91:Data loss in EEPROM      | Loss of data in EEPROM.   |
| 98       | 98:Extension module 1       | Extension module 1 error.   |
| 99       | 99:Extension module 2       | Extension module 2 error.   |
| 100      | 100:2 clock time masters    | 2 master clocks.  |
| 102      | 102:Clock without backup    | Master clock with no power reserve.   |
| 103      | 103:Communication failure   | Communication error.  |
| 109      | 109:Boiler temp supervision | Air present in the boiler circuit (anomaly)   |
| 117      | 117:Water pressure too high | Pressure in hydraulic circuit too high.   |
| 118      | 118:Water pressure too low  | Pressure in hydraulic circuit too low.  |
| 125      | 125:Boiler temp too high    | Safety cut-off for absence of circulation (check made by a sensor).                               |
| 128      | 128:Loss of flame in op     | Flame extinguished.   |
| 130      | 130:Flue gas temp too high  | Cut-off by flue gas sensor for overheating.   |
| 151      | 151:BMU internal            | Internal error on heating PCB.  |
| 152      | 152:Parameterization        | General parameter setting error.  |
| 153      | 153:Unit locked             | Appliance locked manually.  |
| 160      | 160:Fan speed threshold     | Fan operation error.  |
| 171      | 171:Alarm contact 1 active  | ACI board error.  |


| <b>E</b> | <b>Display</b>                | <b>Description of the error</b>  |
|----------|-------------------------------|--|
| 178      | 178:Limit thermostat CH1      | Safety thermostat CC1.   |
| 179      | 179:Limit thermostat CH2      | Safety thermostat CC2.   |
| 321      | 321:HW outlet sensor          | Domestic hot water sensor damaged.   |
| 343      | 343:Solar integration missing | General parameter setting error on the solar system (if incorporating a solar system). |
| 353      | 353:Casc sens B10 missing     | B10 cascade sensor missing.  |
| 372      | 372:Limit thermostat CH3      | Safety thermostat CC3.   |
| 373      | 373:Extension module 3        | Extension module 3.  |
| 384      | 384:Extraneous light          | Light incorrect (parasite flame — internal anomaly).                                   |
| 385      | 385:Mains undervoltage        | Power supply voltage too low.  |
| 386      | 386:Fan speed tolerance       | Fan threshold speed not reached.   |
| 430      | 430:Dyn water pres too low    | Safety cut-off for absence of circulation (check made by a pressure sensor).           |
| 432      | 432:Function ground missing   | Earthing function not connected.   |

**i** **Note**  
This list is not exhaustive. Other error codes may be displayed. Contact the accredited technical assistance service.

**i** **Note**  
If the display of the error code persists, contact the accredited assistance service.

**i** **Note**  
If the error code simultaneously displays the  and  symbols, contact the accredited technical assistance service.



### 11.1.1 Automatic error code clearing

If the symbol  is displayed at the same time as the error code, the error code is automatically cleared when the cause that prompted it stops.

A flow or return temperature in excess of the critical value prompts an error code. The error code is automatically cleared when the temperature drops below the critical value.

### 11.1.2 Clearing error codes

If the probable cause of an error code is resolved but the error code continues to be displayed, proceed as follows to clear the error code:

1. Press the  button.  
The command **Reset? Yes** is displayed on the control panel.
2. Confirm by pressing the  button.  
The error code disappears after a few seconds.

## 12 Decommissioning

### 12.1 Decommissioning procedure

---

**Warning**

Only qualified professionals are authorised to work on the boiler and the heating installation.

To switch off the boiler temporarily or permanently, proceed as follows:

1. Switch off the boiler.
2. Cut the electrical power to the boiler.
3. Close the gas valve to the boiler.
4. Drain the central heating system or ensure frost protection.
5. Close the door of the boiler to prevent air circulating inside it.
6. Remove the pipe connecting the boiler to the chimney and close the nozzle with a plug.

### 12.2 Recommissioning procedure

---

**Warning**

Only qualified professionals are authorised to work on the boiler and the heating installation.

Should it prove necessary to carry out the recommissioning of the boiler, proceed as follows:



1. Re-establish electrical power to the boiler.
2. Remove the siphon.
3. Fill the siphon with water.  
The siphon must be completely full.
4. Put the siphon back in place.
5. Fill the central heating system.
6. Start up the boiler.



## 13 Appendix

## 13.1 Declaration of conformity

Fig. Declaration of conformity  
153

|   |  |
|---|--|
| <b>DÉCLARATION DE CONFORMITÉ CE</b>   |  |
| <b>EG - VERKLARING VAN OVEREENSTEMMING</b>  |  |
| <b>EC - DECLARATION OF CONFORMITY</b>   |  |
| <b>EG - KONFORMITÄTSERKLÄRUNG</b>   |  |
|   |  |
| Fabricant/Manufacturer/Hersteller/Fabrikant   | : Potterton Commercial                                   |
| Adresse/Adres/Adress  | : Wood Lane Erdington                                    |
| Ville, pays Stad, Land/City, Country/Land, Ort  | : GB-Birmingham B24 9QP                                  |
|   |  |
| - déclare ici que le(s) produit(s) suivant(s)   | : SIRIUS FS  |
| - verklaart hiermede dat de toestel(len)  | 1.50 ,1.70 ,1.90 et 1.110                                |
| - this is to declare that the following product(s)  |  |
| - erkl rt hiermit dass das (die) Produkt(e)   |  |
|   |  |
| r pond/r pondent aux directives CEE suivantes:  |  |
| voldoet/voldoen aan de bepalingen van de onderstaande EEG-richtlijnen:  |  |
| is/are in conformity with the following EEC-directives:   |  |
| den Bestimmungen der nachfolgenden EG-Richtlinien entspricht/entsprechen:   |  |
| CEE-Directive:  | 2009/142/CEE normes appliqu es, toegepaste normen:       |
| EEG-Richtlijn:  | 2009/142/EEG tested and examined to the following norms: |
| EEC-Directive:  | 2009/142/EEC verwendete Normen:                          |
| EG-Richtlinie:  | 2009/142/EWG EN 15502-1 , EN 15502-2-1                   |
|   | 92/42/CEE  |
|   | 92/42/EEG  |
|   | 92/42/EEC  |
|   | 92/42/EWG  |
|   | 2006/95/CEE EN 60335.1                                   |
|   | 2006/95/EEG  |
|   | 2006/95/EEC  |
|   | 2006/95/EWG  |
|   | 2004/108/CEE EN 61000-6-3                                |
|   | 2004/108/EEG EN 61000-6-1                                |
|   | 2004/108/EEC   |
|   | 2004/108/EWG   |
|   | 97/23/CEE (art.3 section 3)                              |
|   | 97/23/EEG (art. 3, lid 3)                                |
|   | 97/23/EEC (article 3, sub 3)                             |
|   | 97/23/EWG (Art. 3, Absatz 3)                             |
|   |  |
| Merzwiller, le 14 Octobre 2014.   |  |
| <br>Yves Lichtenberger<br>R&D Director |  |
|                                        |  |



© Copyright

All technical and technological information contained in these technical instructions, as well as any drawings and technical descriptions supplied, remain our property and shall not be multiplied without our prior consent in writing. Subject to alterations.



Wood Lane, Erdington, Birmingham B24 9QP



Sales: 0845 070 1056 Technical: 0845 070 1057



[www.pottertoncommercial.co.uk](http://www.pottertoncommercial.co.uk)



PART OF BDR THERMEA

